



PRINTING INSTRUCTIONS

Print at full-scale and place tools over the paper to verify the fit.

Option 1: Print this page full-scale on a large-format printer (E-Size, 44 inches X 34 inches).


Option 2: Print page 2 - 9 on 8-1/2 X 11 inch paper and assemble.

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION. Copyright 2026 FoamFit Tools

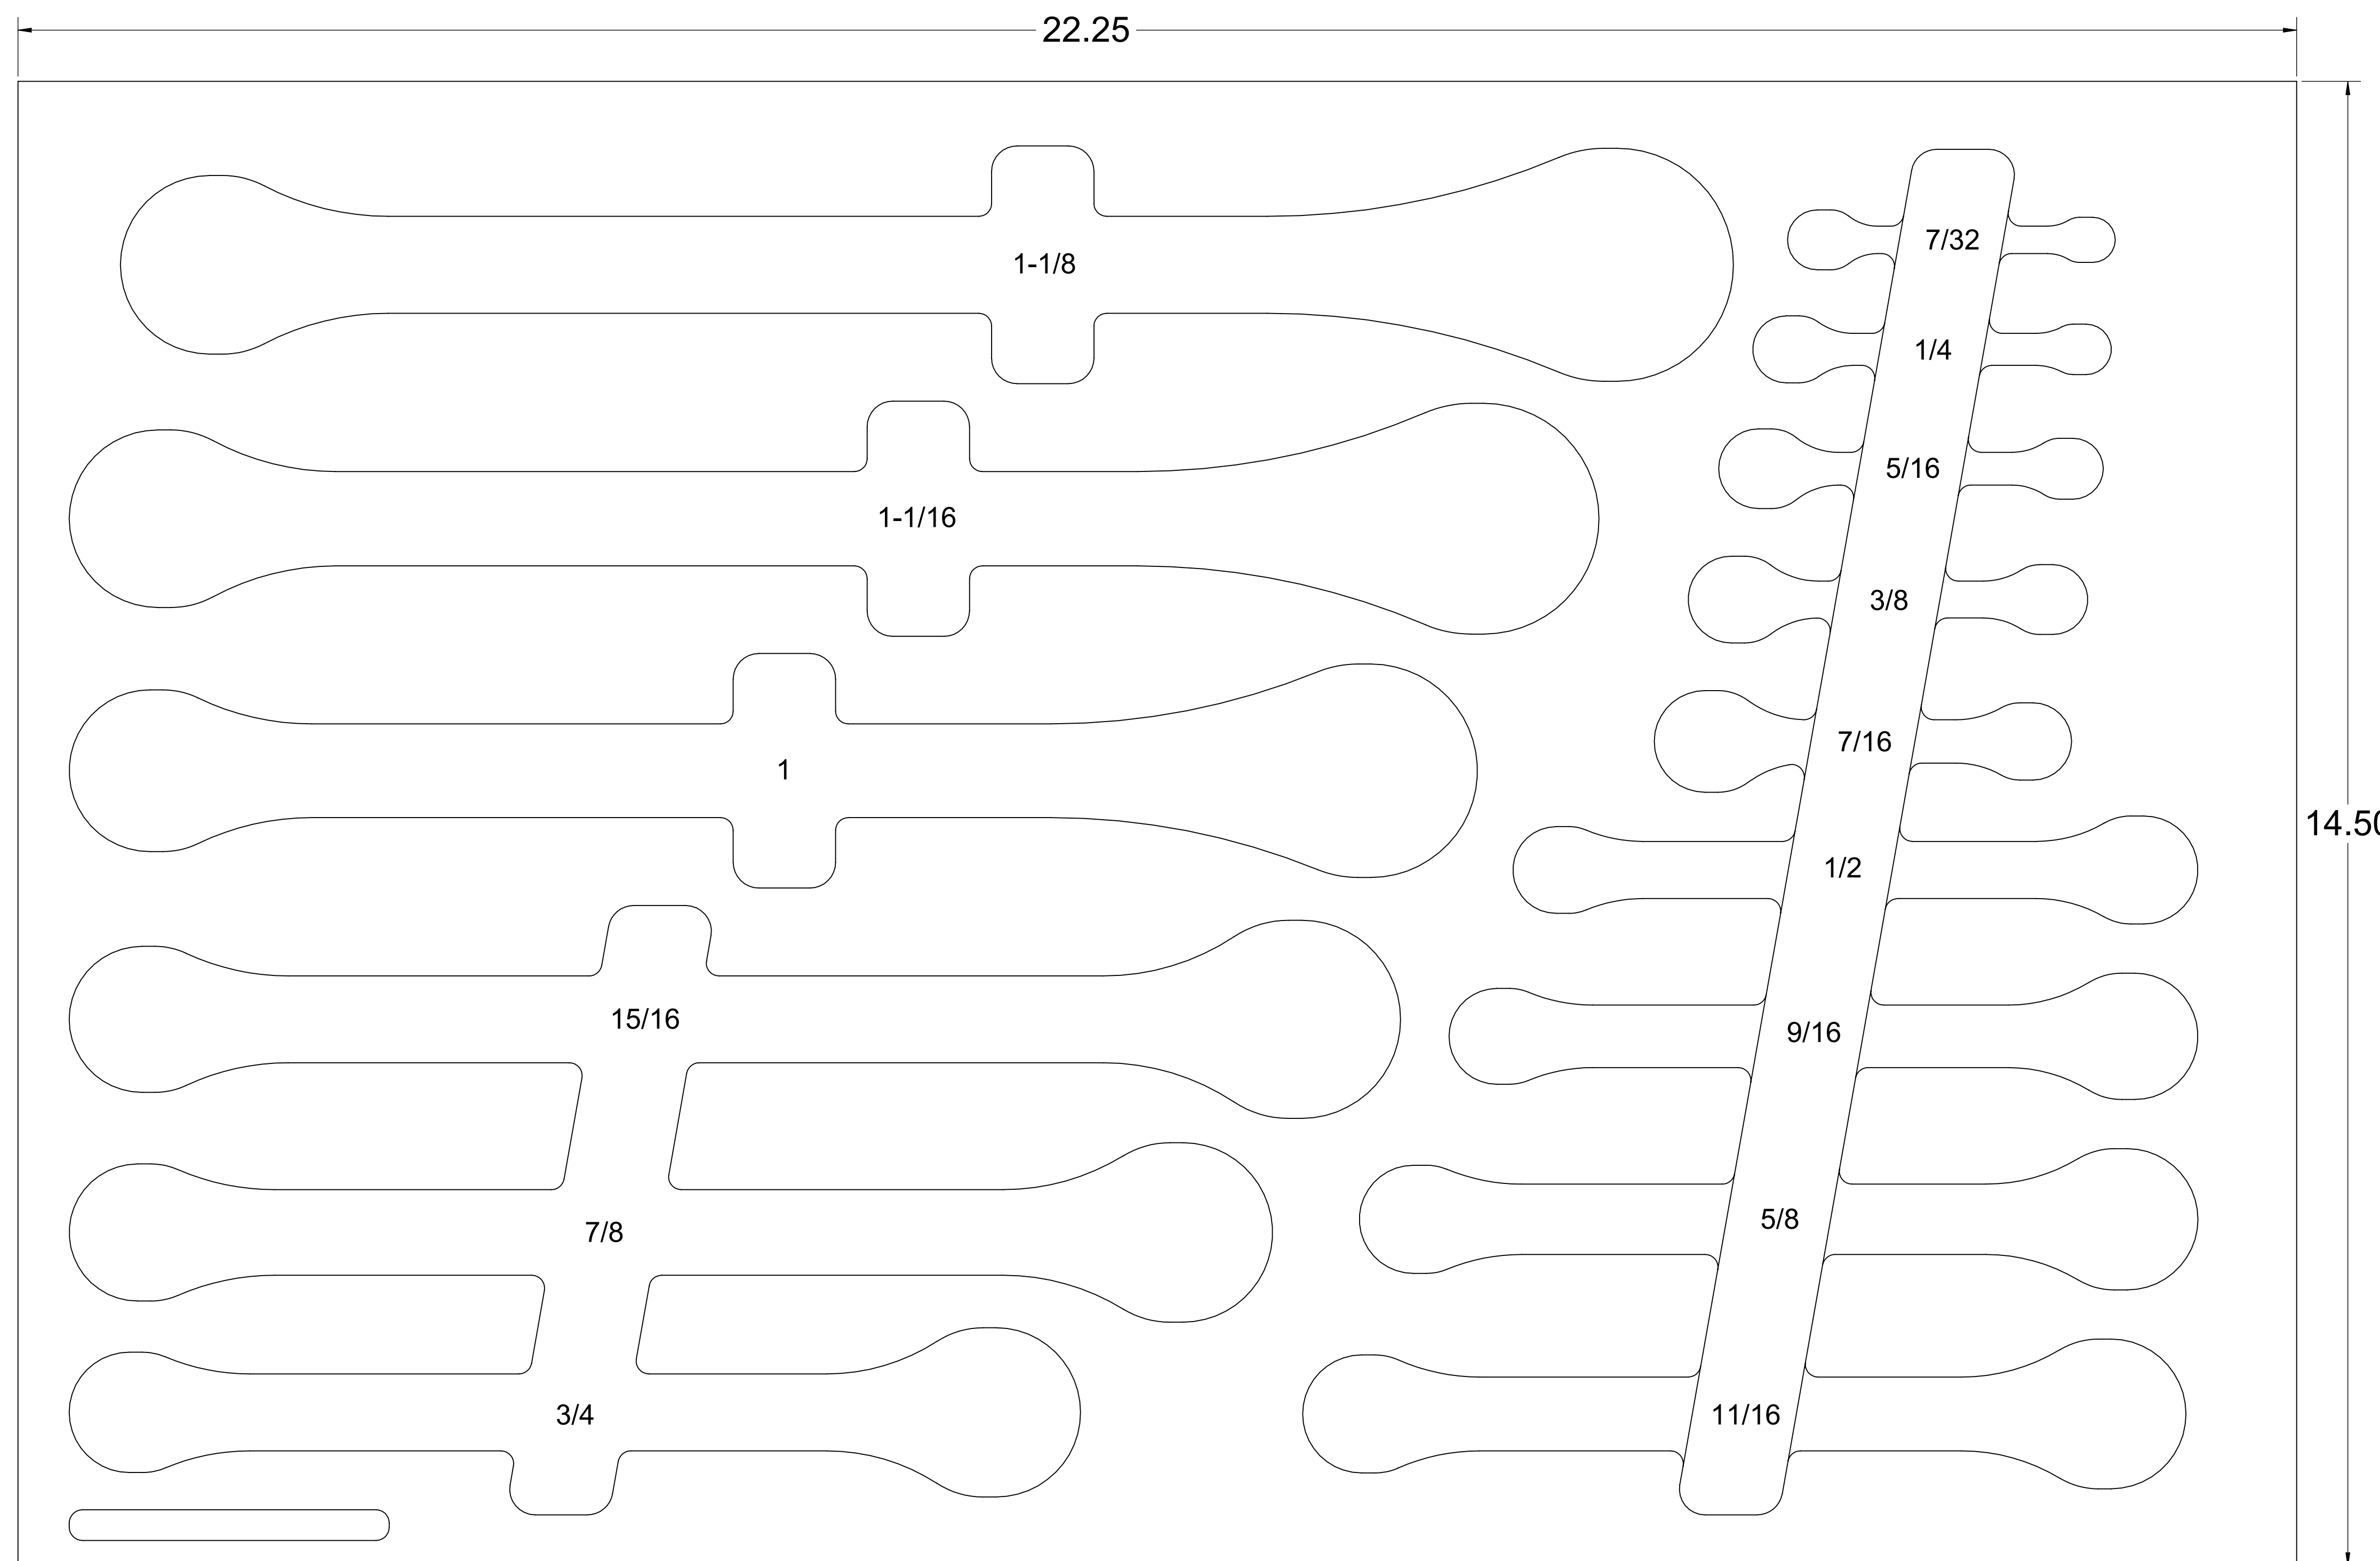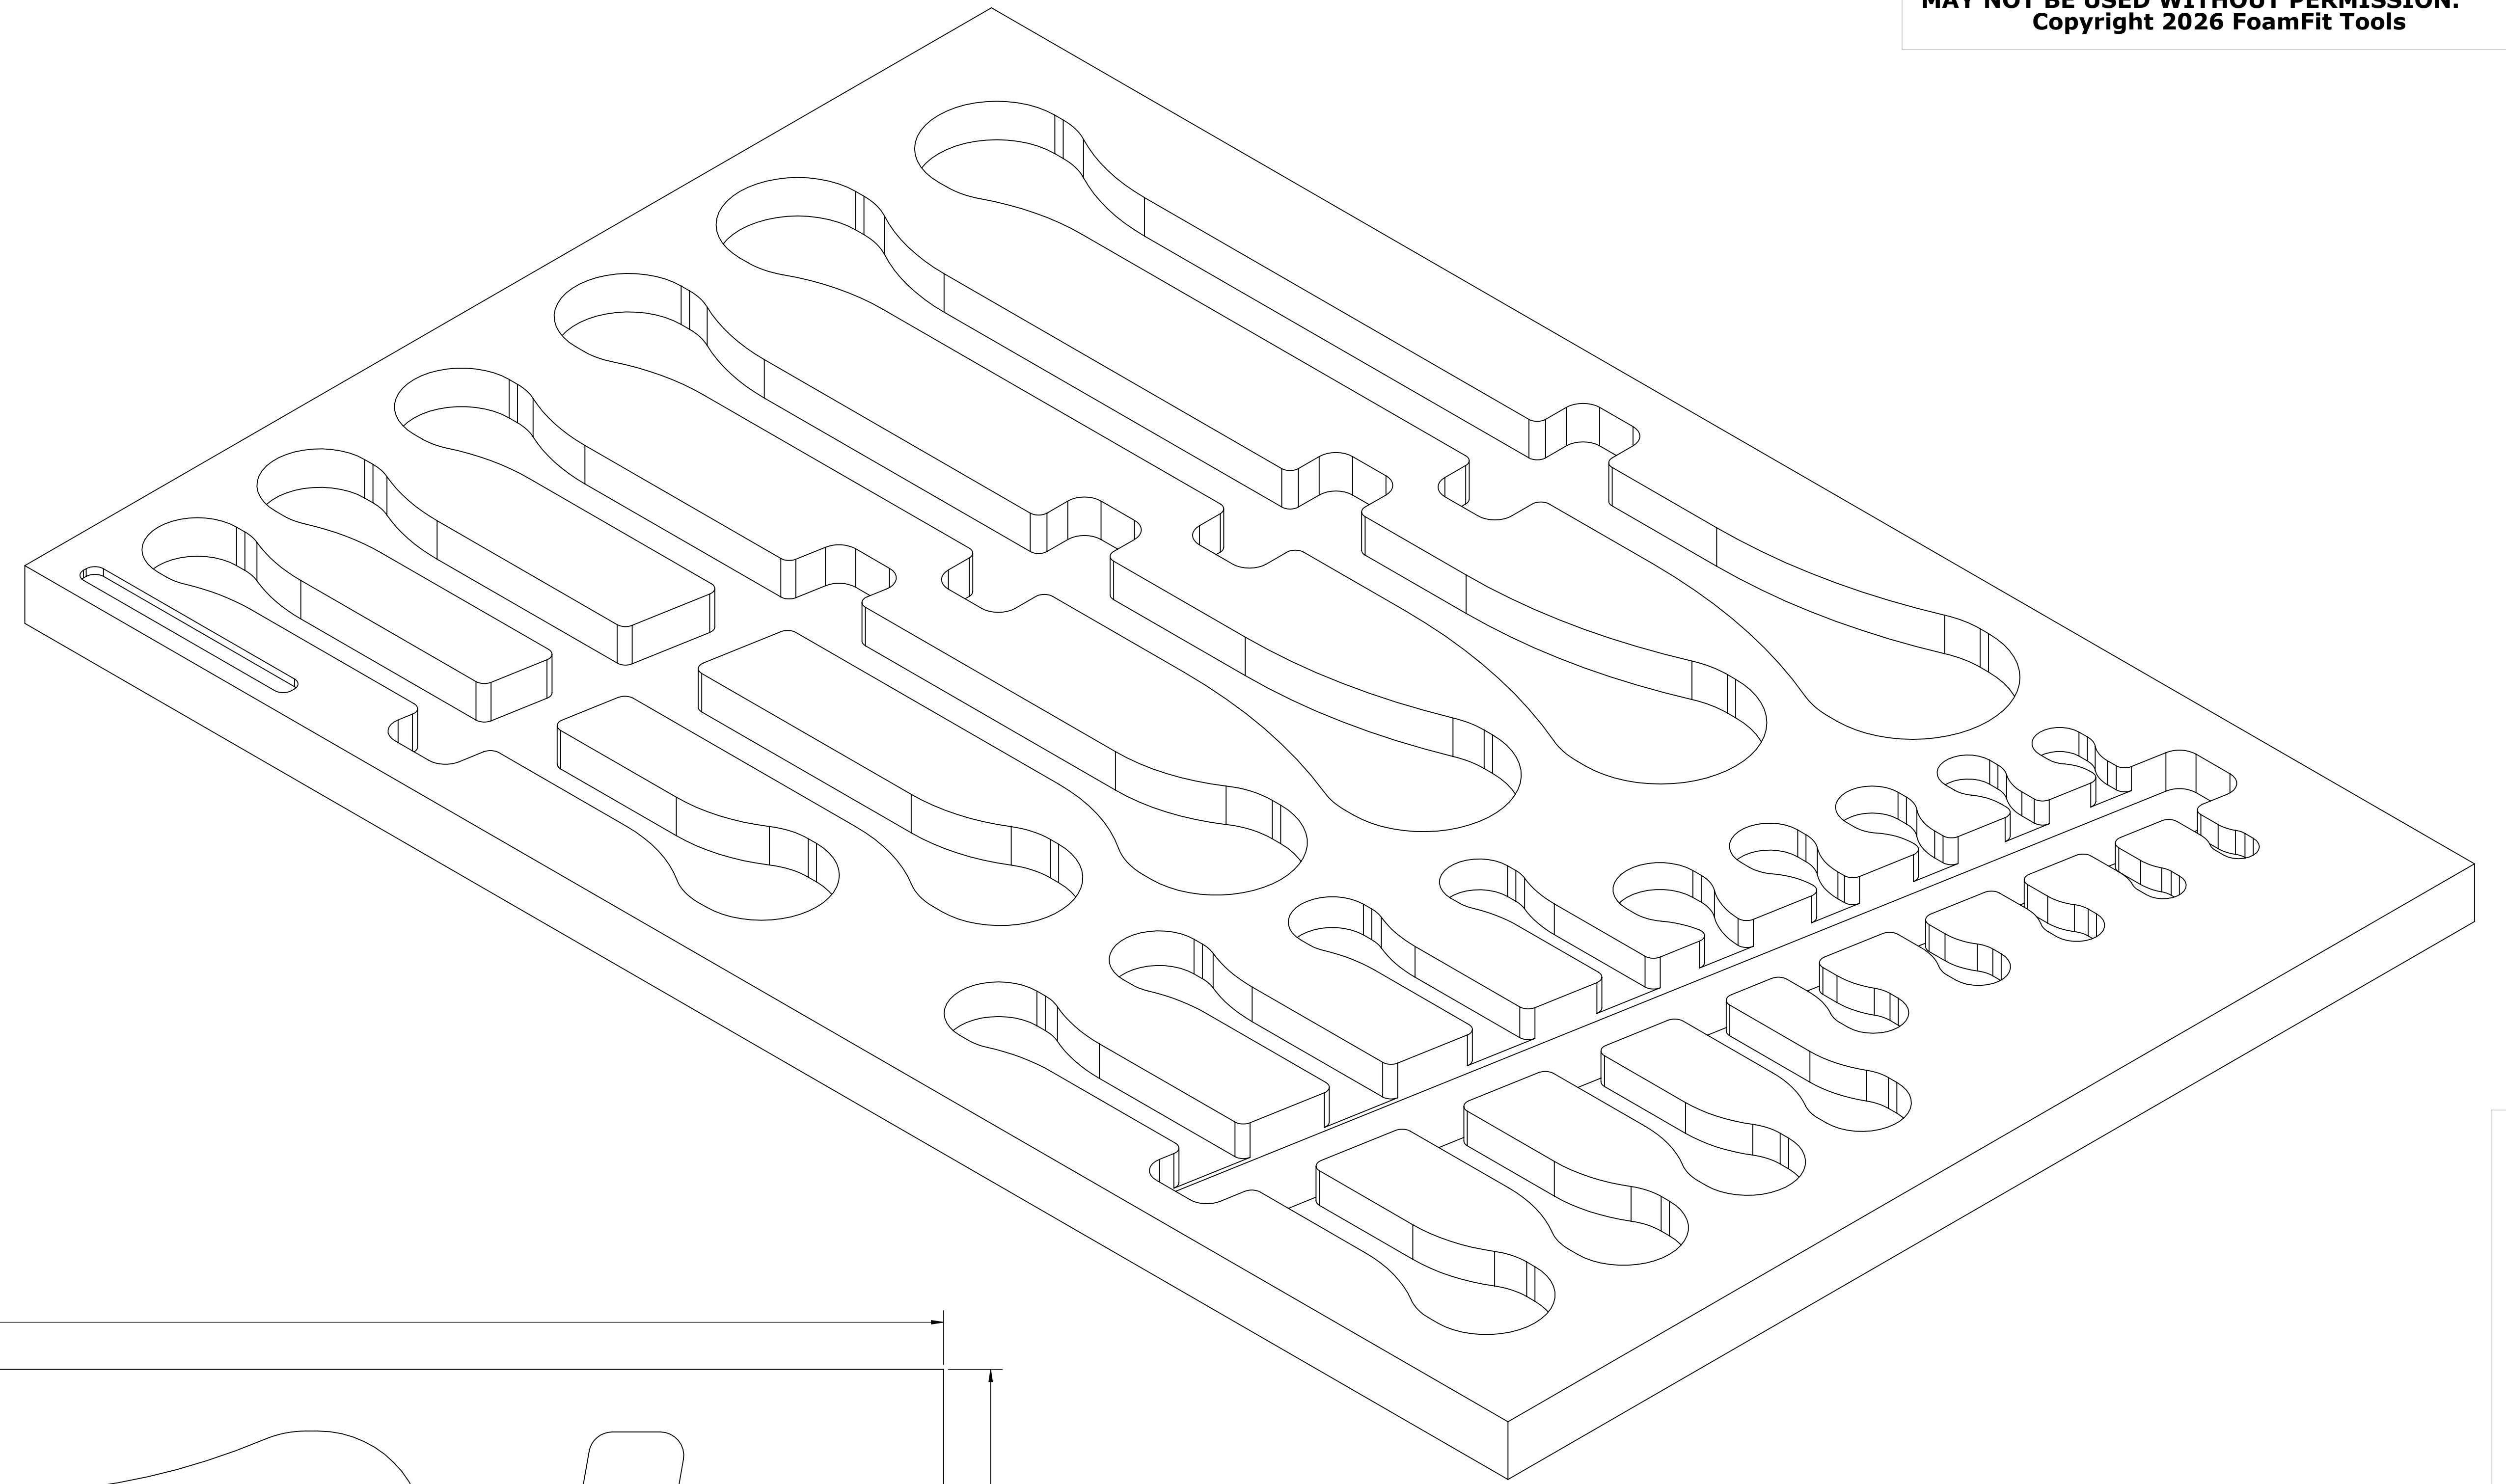

PART NUMBER
F-06393-R

PART NUMBER

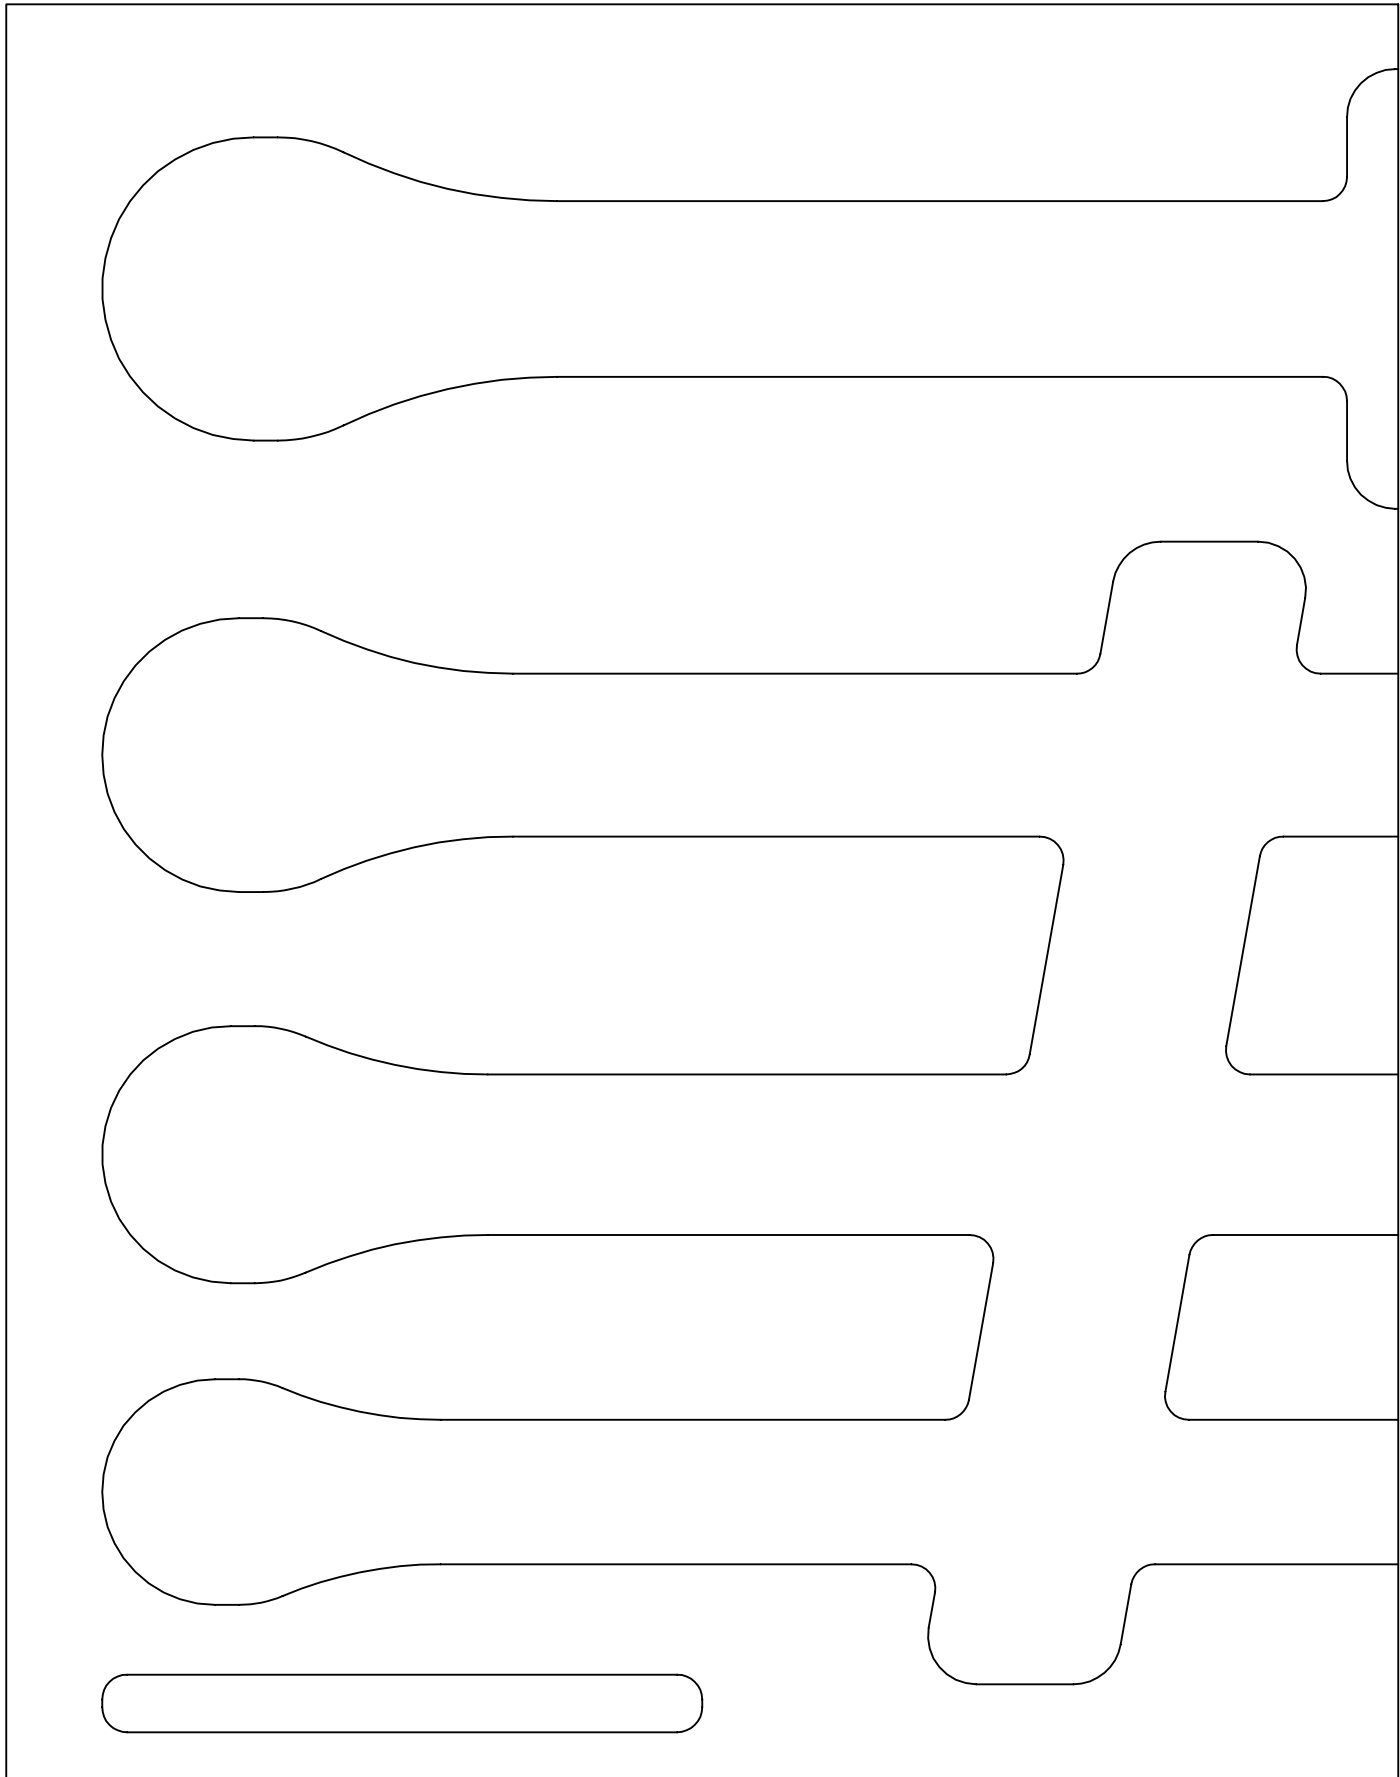

PART NUMBER

F-06393-R

PAGE (ROW-COLUMN)

1-1

Numbering starts
from the front
left corner.


DATE CREATED

27 FEB 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%

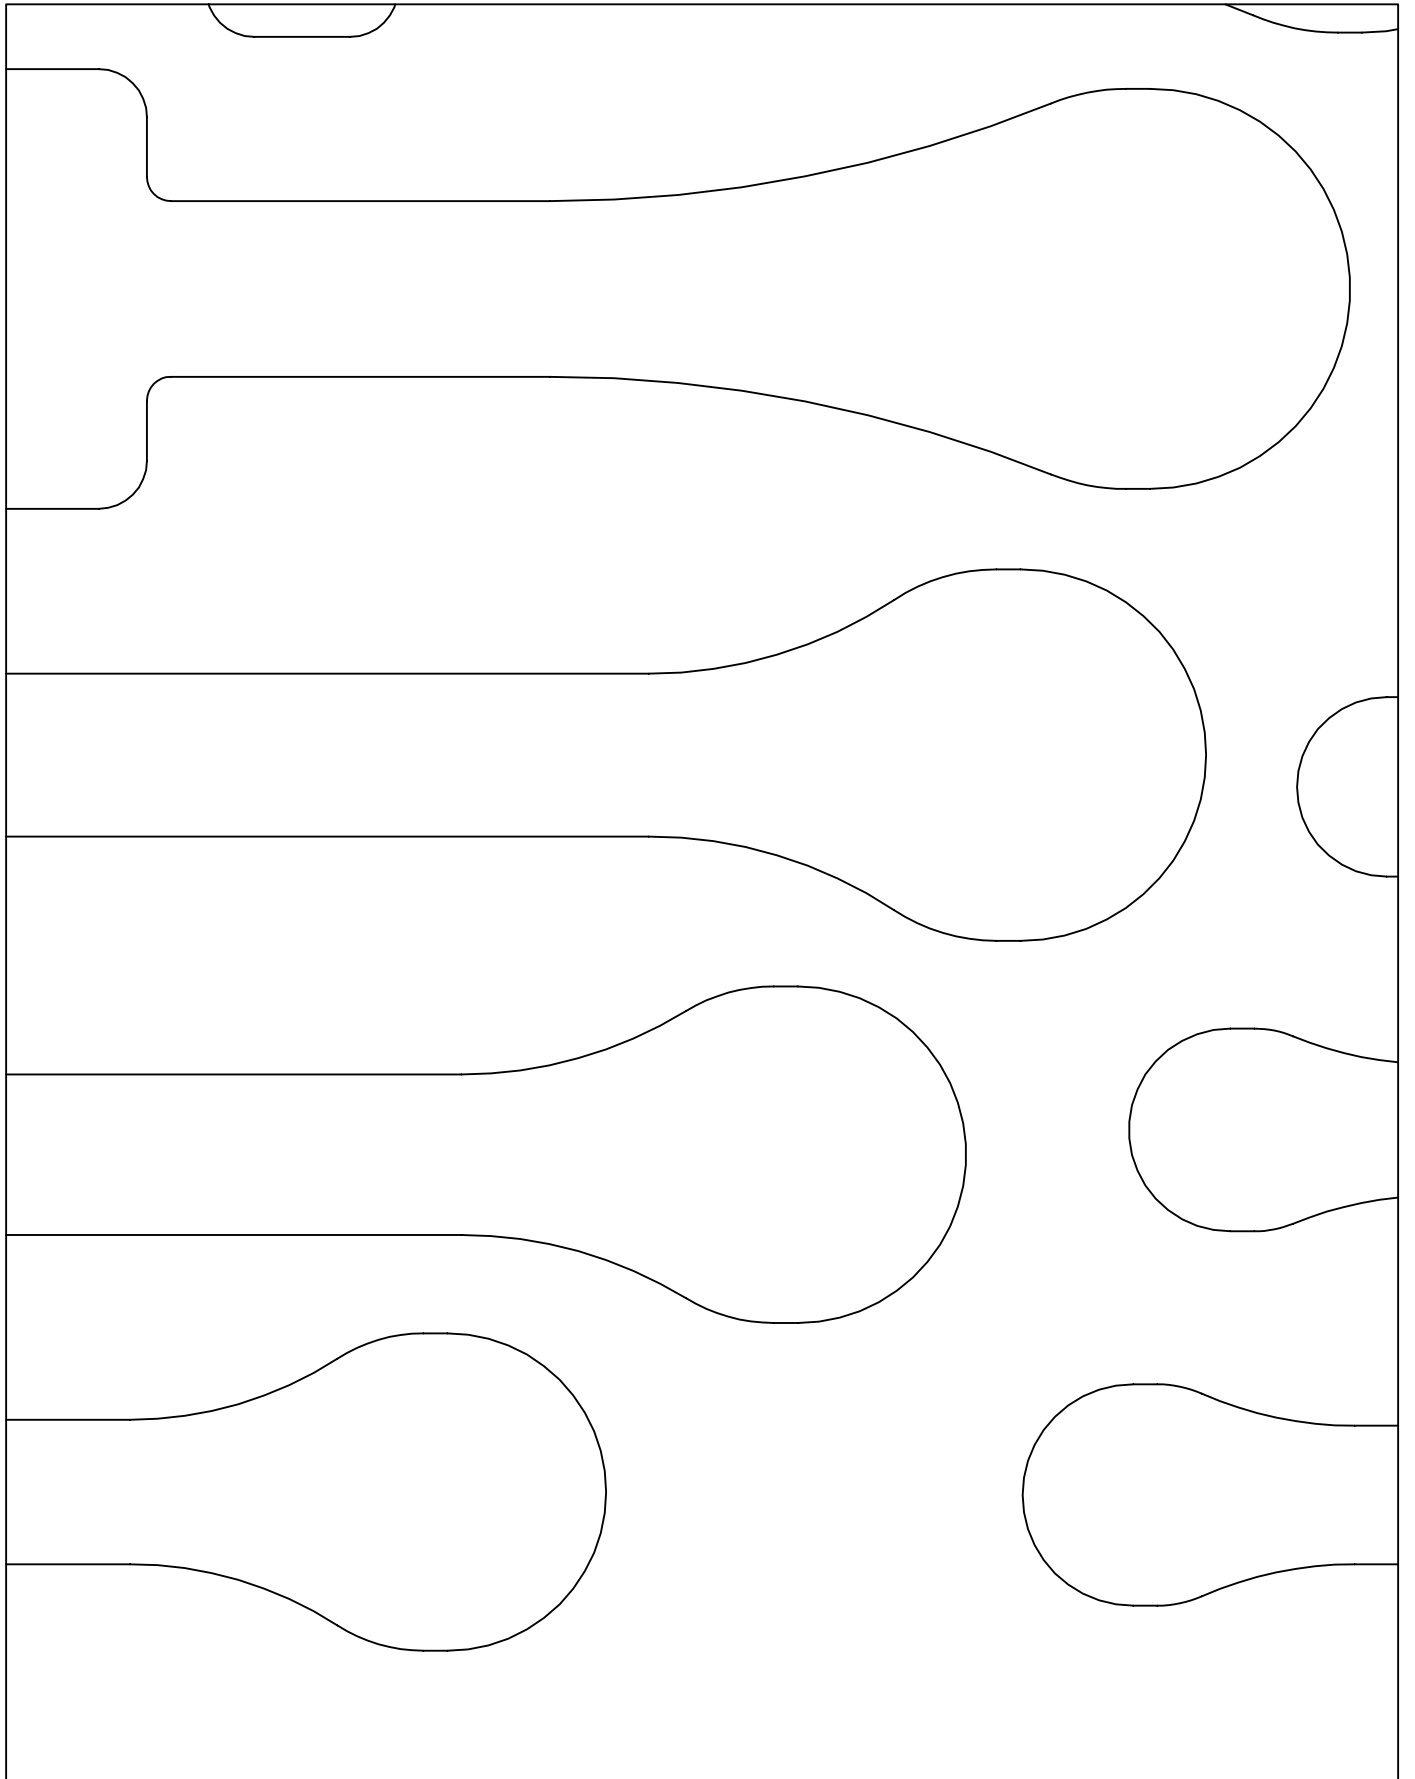

PART NUMBER

F-06393-R

PAGE (ROW-COLUMN)

1-2

Numbering starts
from the front
left corner.


DATE CREATED

27 FEB 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%

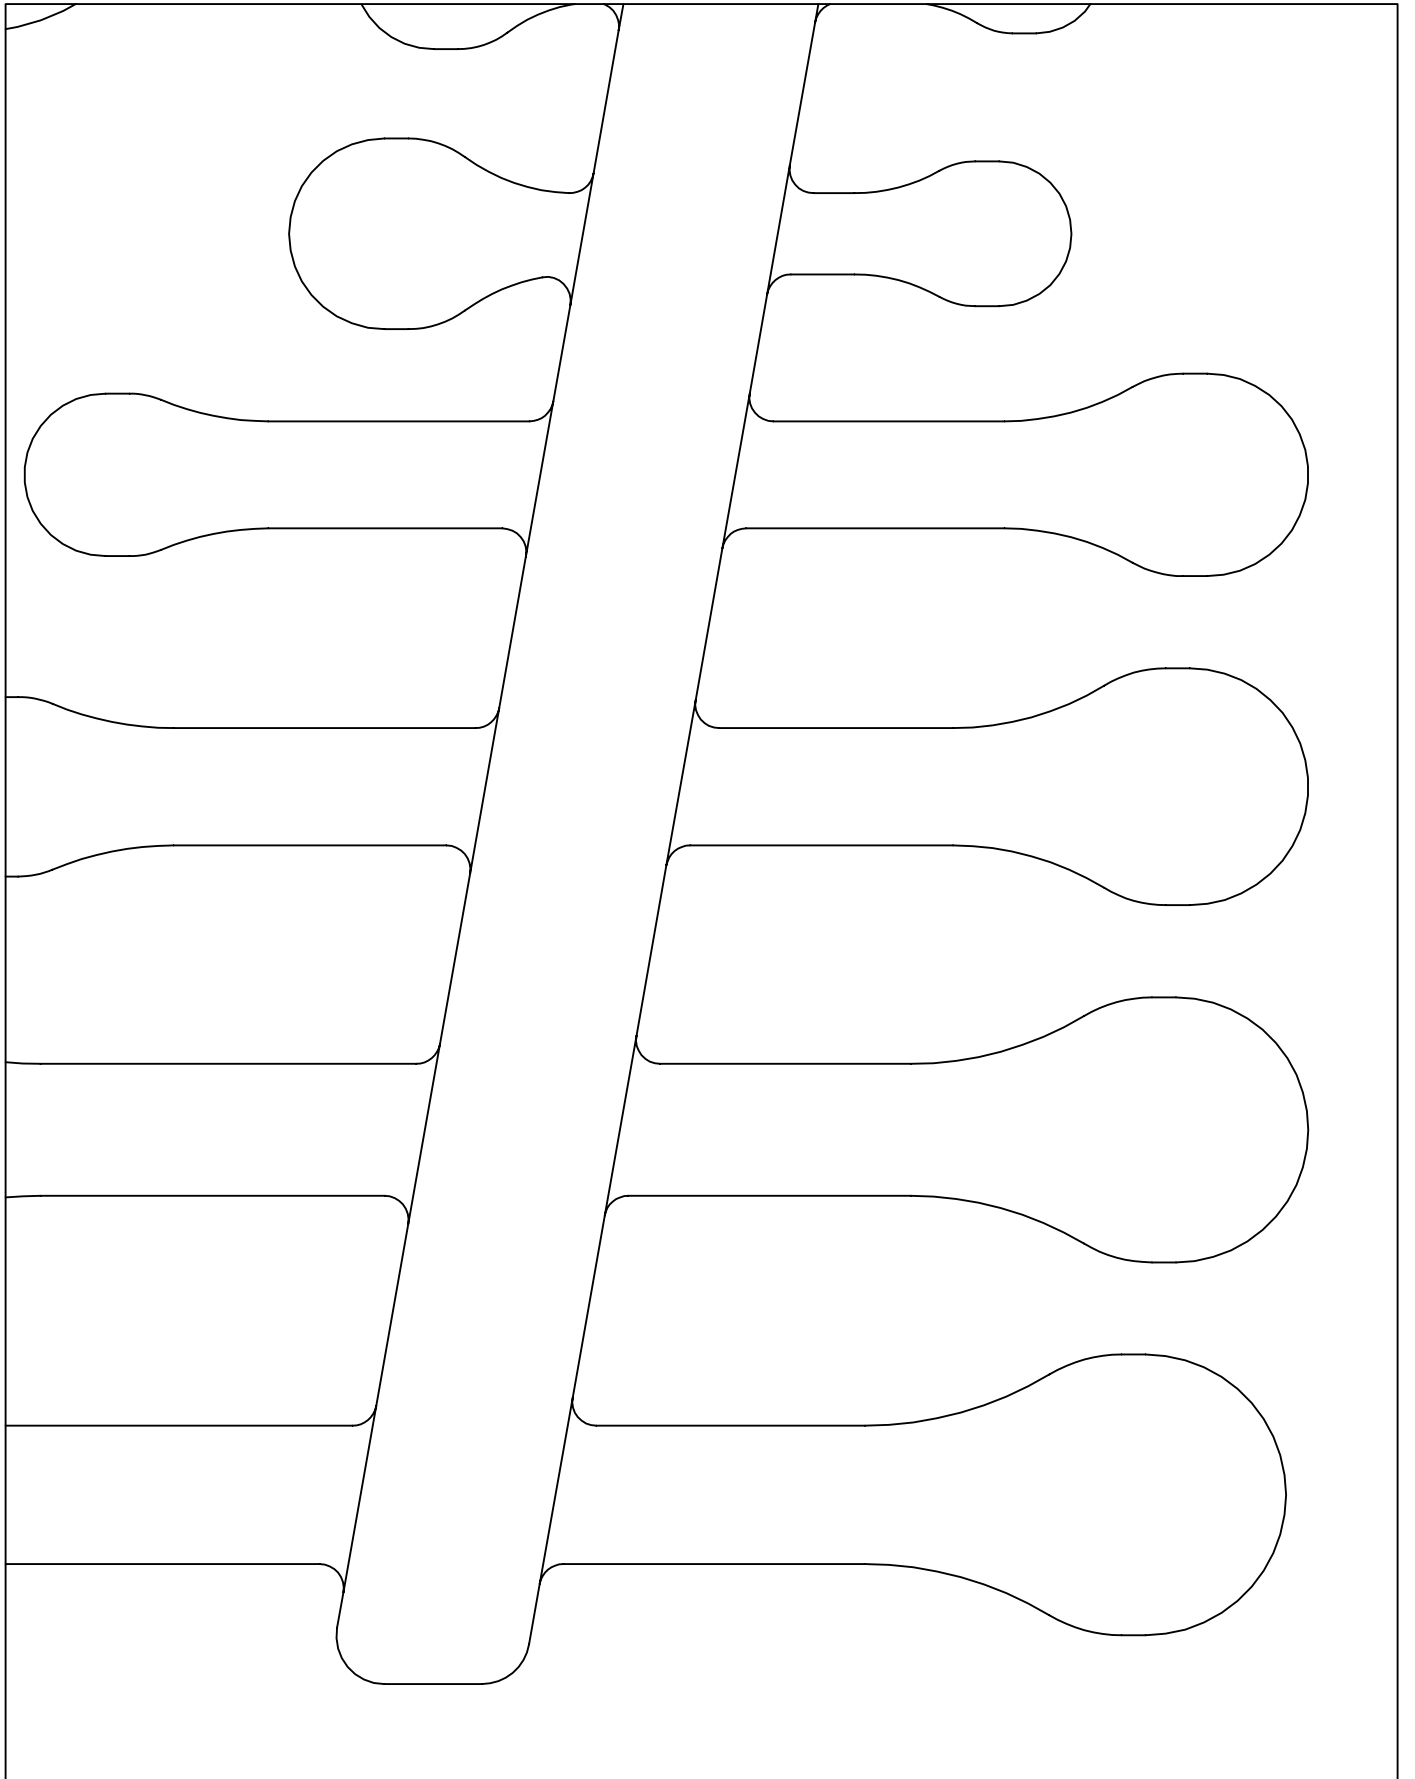

PART NUMBER

F-06393-R

PAGE (ROW-COLUMN)

1-3

Numbering starts
from the front
left corner.

 
DATE CREATED

27 FEB 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER

F-06393-R

PAGE (ROW-COLUMN)

1-4

Numbering starts
from the front
left corner.


DATE CREATED

27 FEB 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%

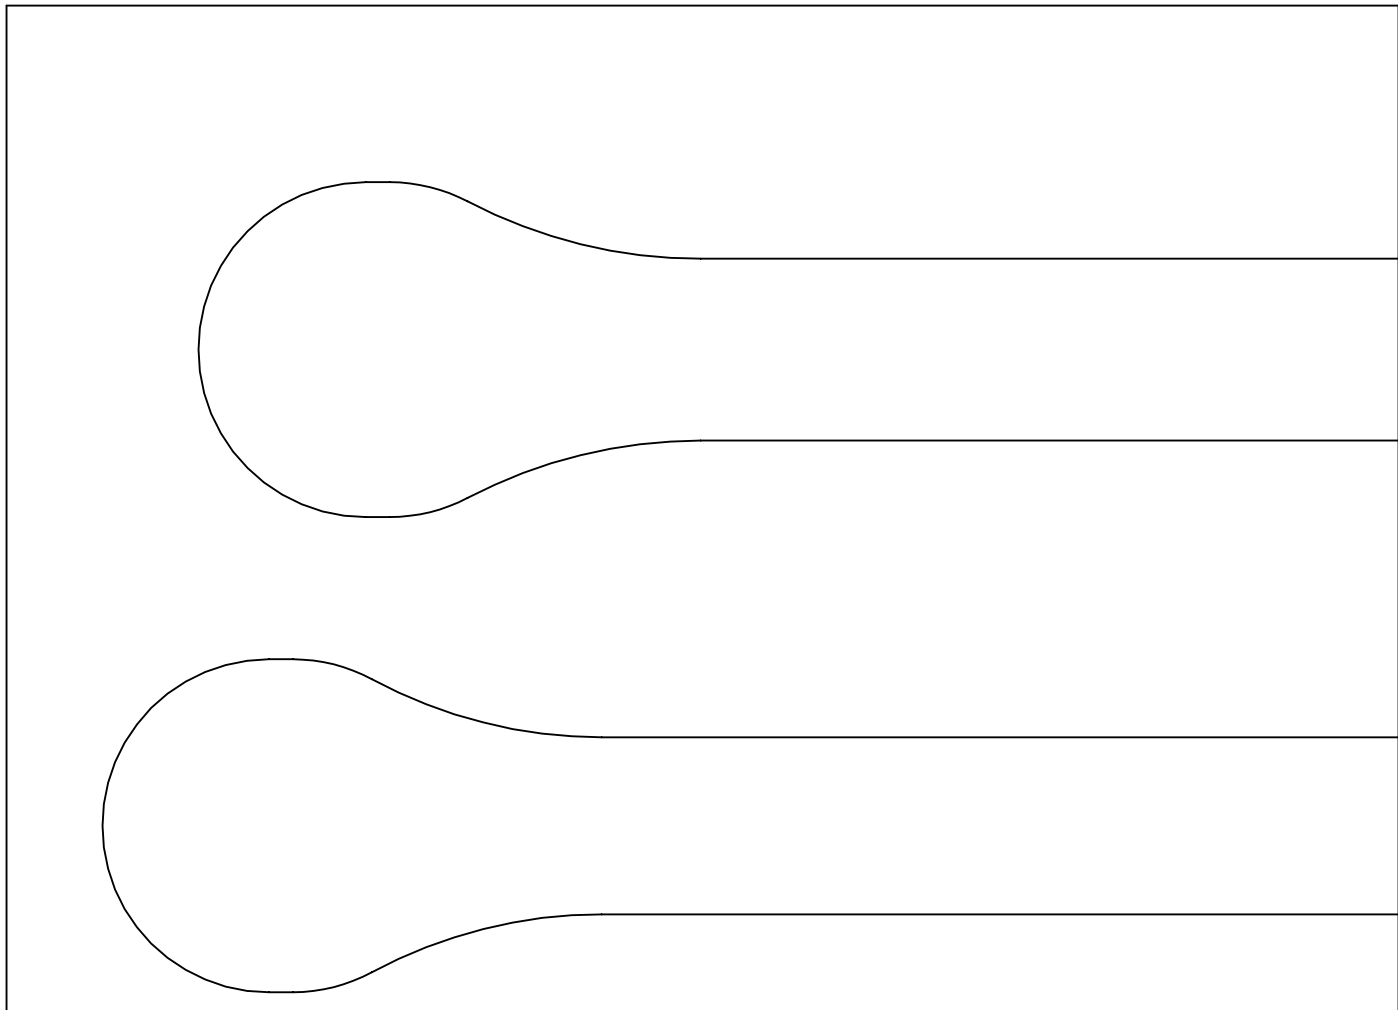

PART NUMBER

F-06393-R

PAGE (ROW-COLUMN)

2-1

Numbering starts
from the front
left corner.


DATE CREATED

27 FEB 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%

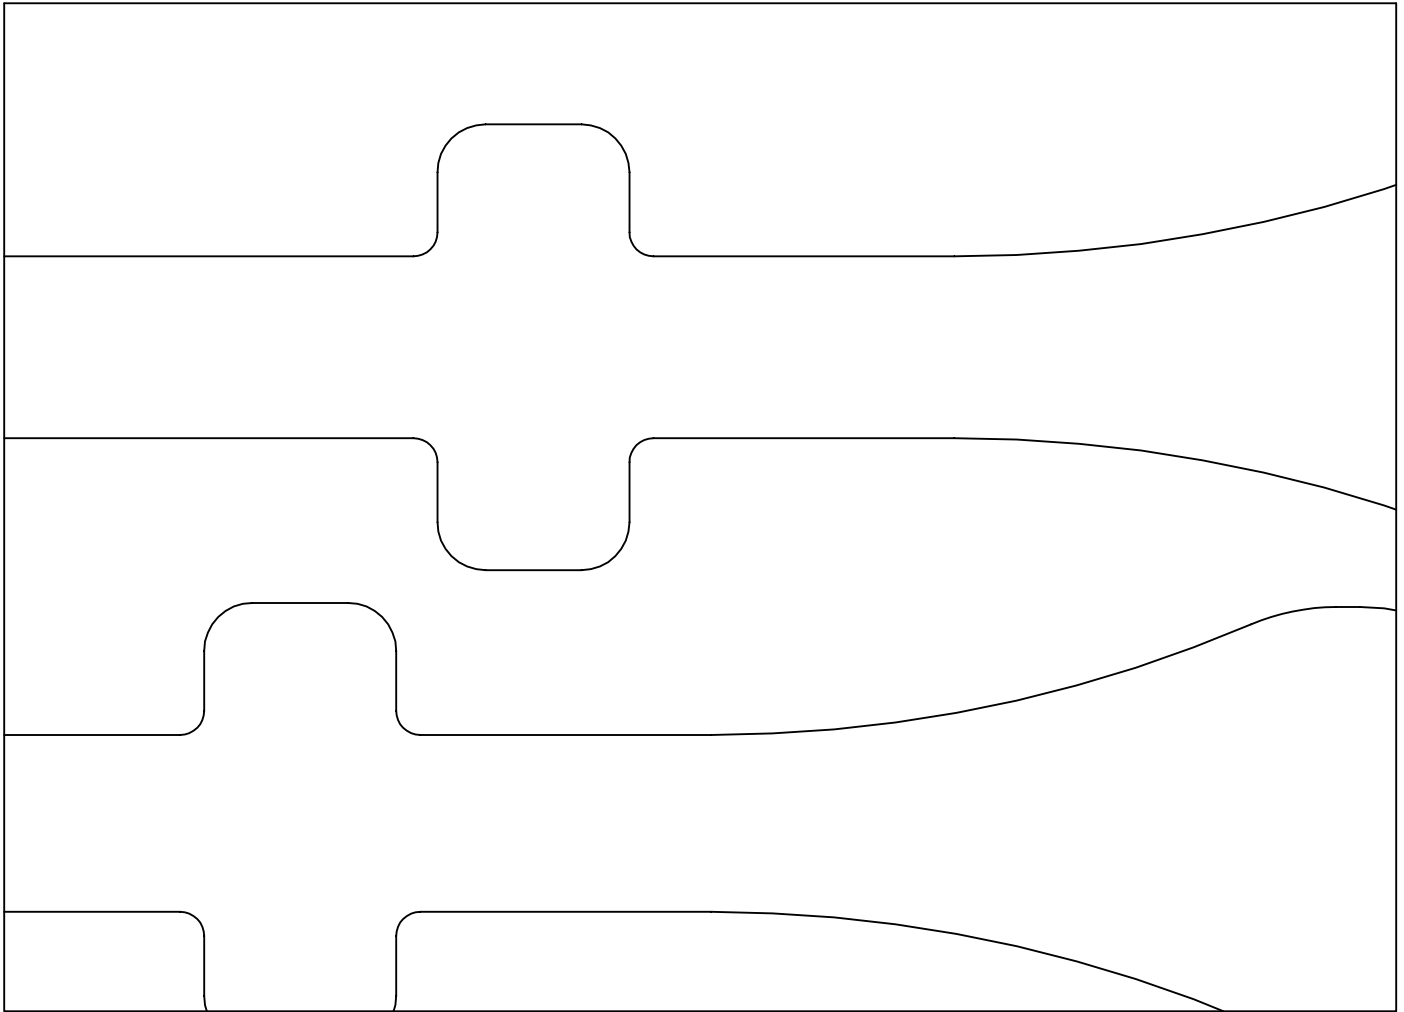

PART NUMBER

F-06393-R

PAGE (ROW-COLUMN)

2-2

Numbering starts
from the front
left corner.


DATE CREATED

27 FEB 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%

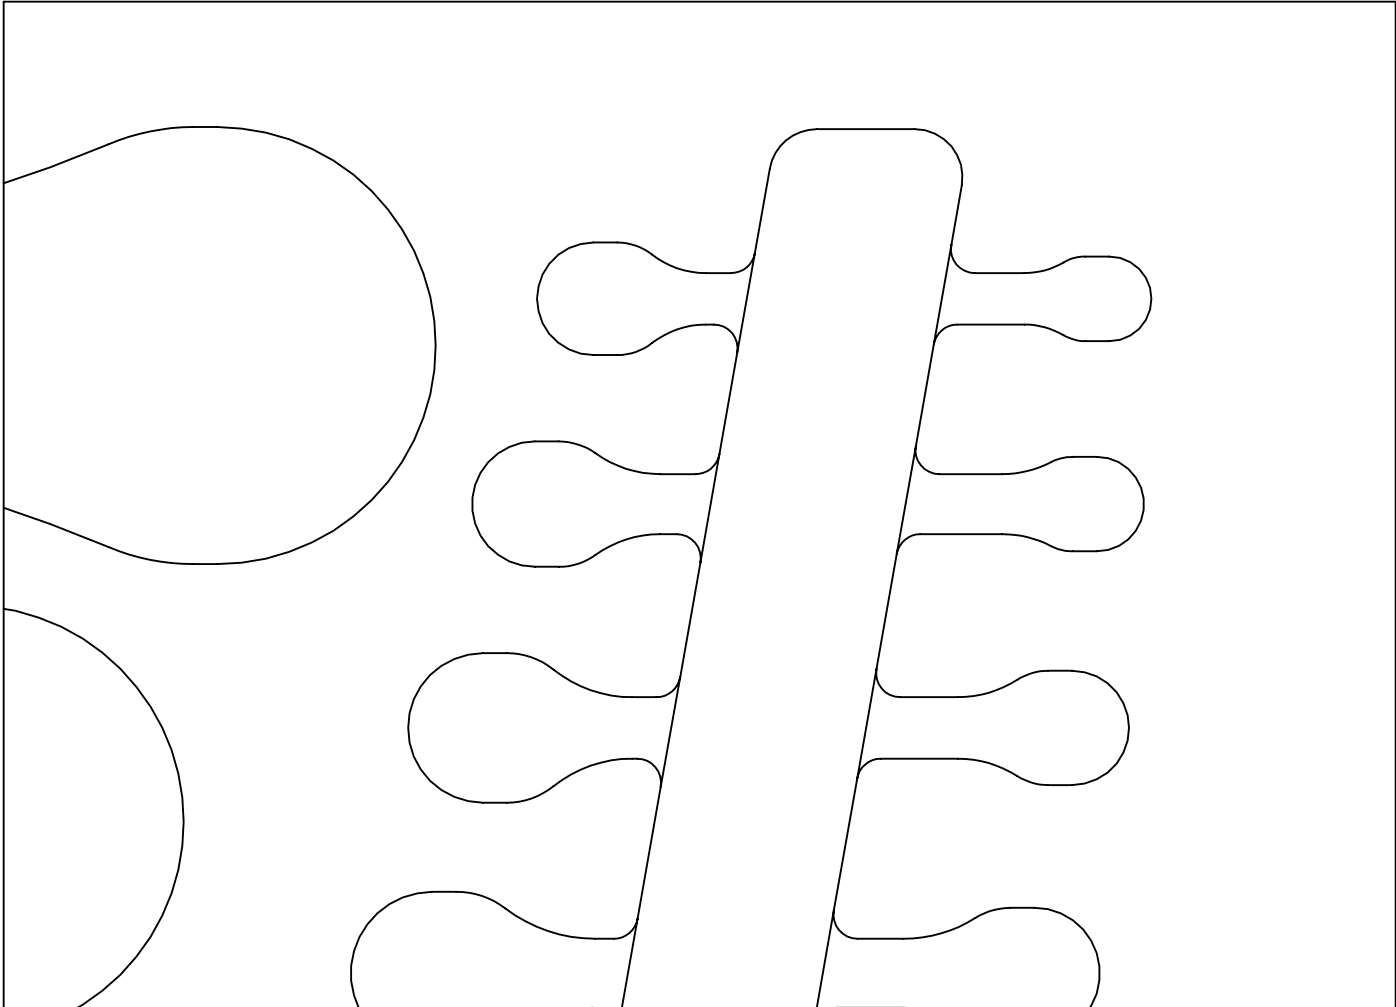

PART NUMBER

F-06393-R

PAGE (ROW-COLUMN)

2-3

Numbering starts
from the front
left corner.

 
DATE CREATED

27 FEB 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER

F-06393-R

PAGE (ROW-COLUMN)

2-4

Numbering starts
from the front
left corner.

DATE CREATED

27 FEB 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%