


PRINTING INSTRUCTIONS

Print at full-scale and place tools over the paper to verify the fit.

Option 1: Print this page full-scale on a large-format printer (E-Size, 44 inches X 34 inches).

Option 2: Print page 3 - 14 on 8-1/2 X 11 inch paper and assemble.

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION. Copyright 2026 FoamFit Tools

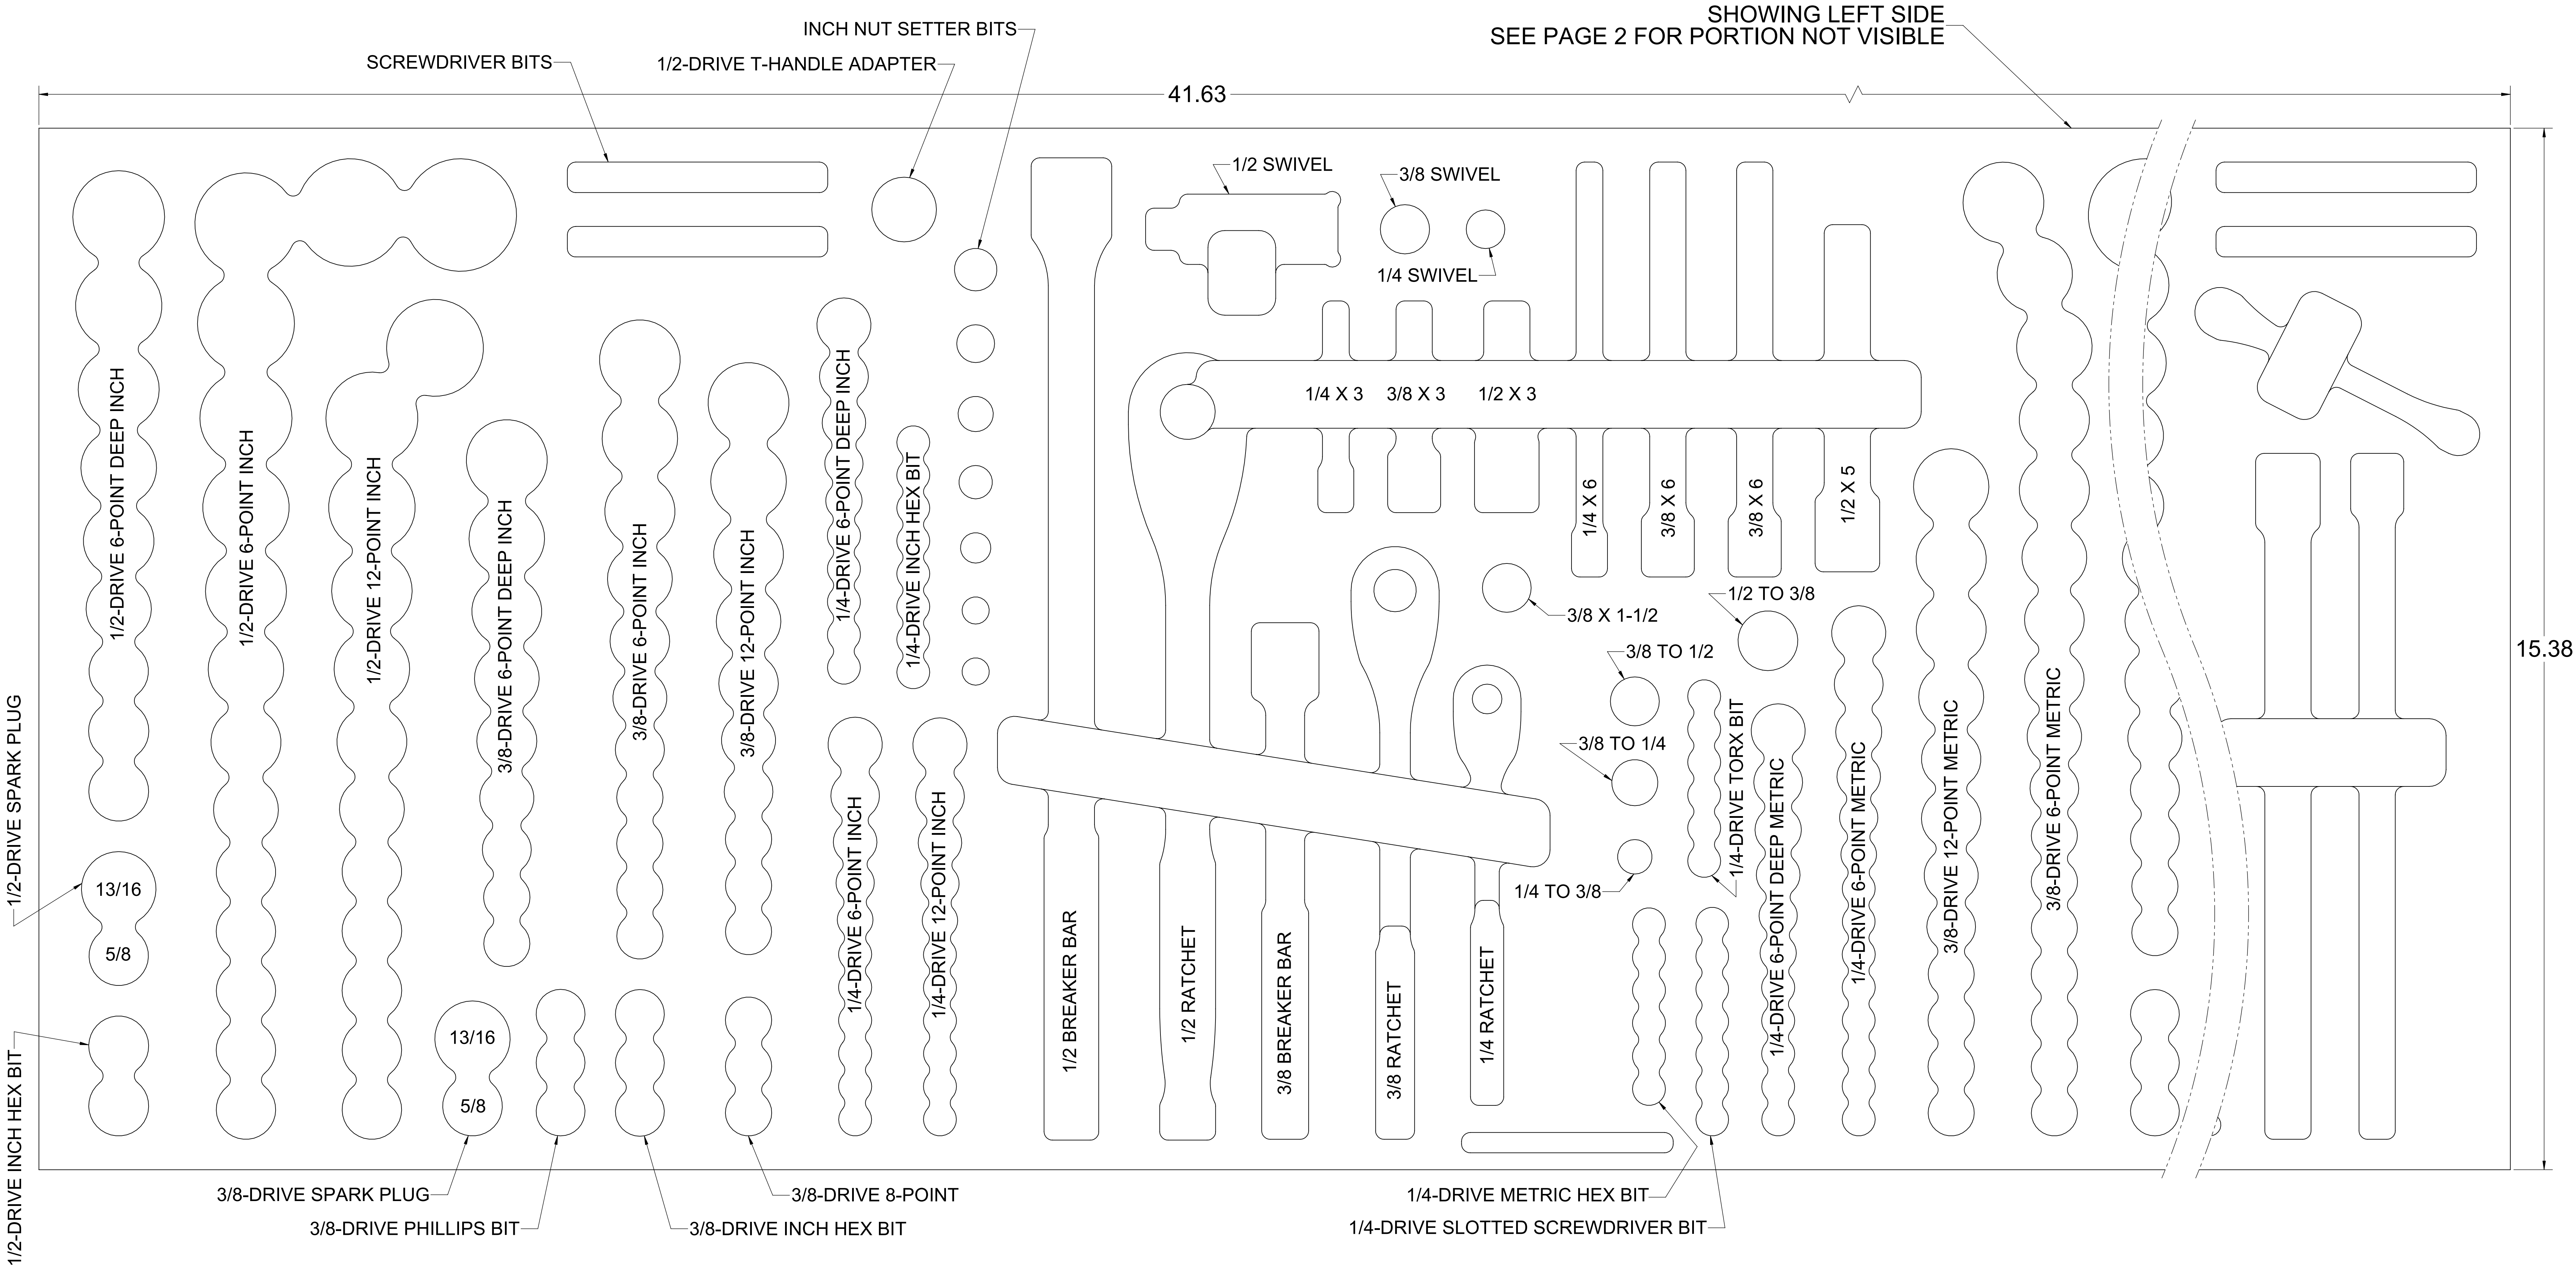 

SHOWING LEFT SIDE
SEE PAGE 2 FOR PORTION NOT VISIBLE

CAUTION
SUGGESTED DRAWER HEIGHT
2.25 MIN

APPROXIMATE TOP OF TALLEST TOOL



PRINTING INSTRUCTIONS

Print at full-scale and place tools over the paper to verify the fit.

Option 1: Print this page full-scale on a large-format printer (E-Size, 44 inches X 34 inches).

Option 2: Print page 2 - 14 on 8-1/2 X 11 inch paper and assemble.

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION.
Copyright 2026 FoamFit Tools

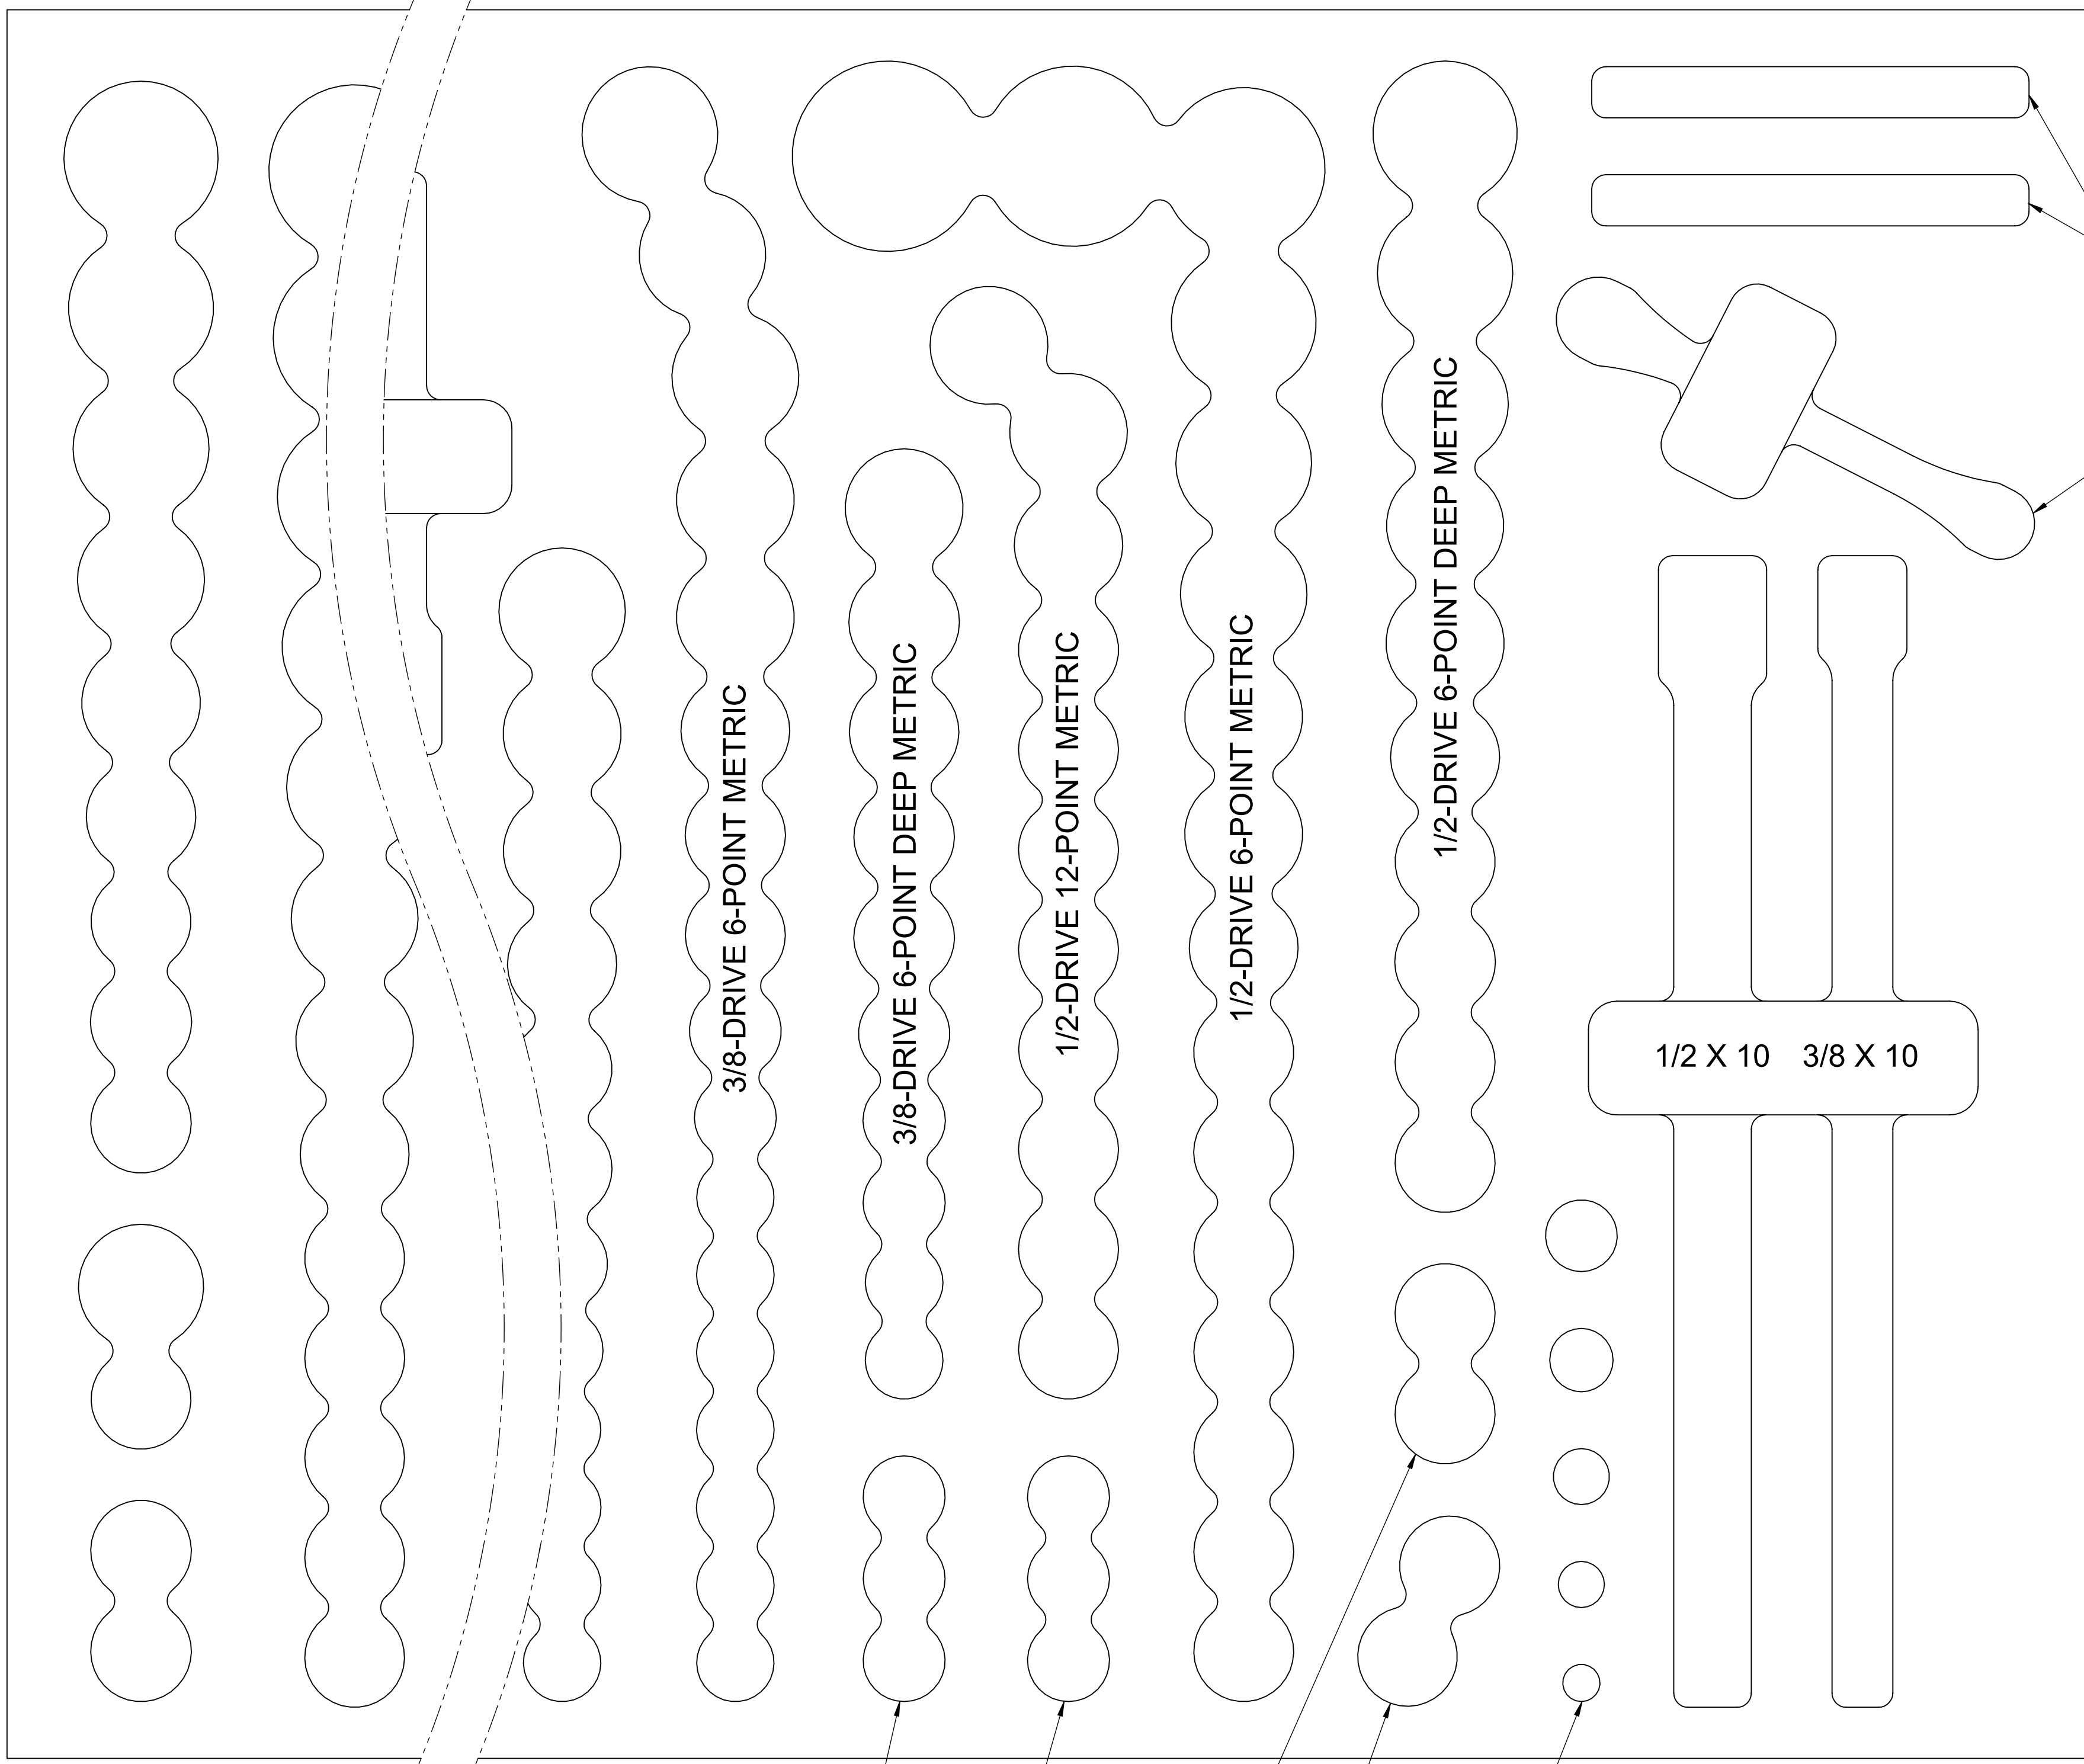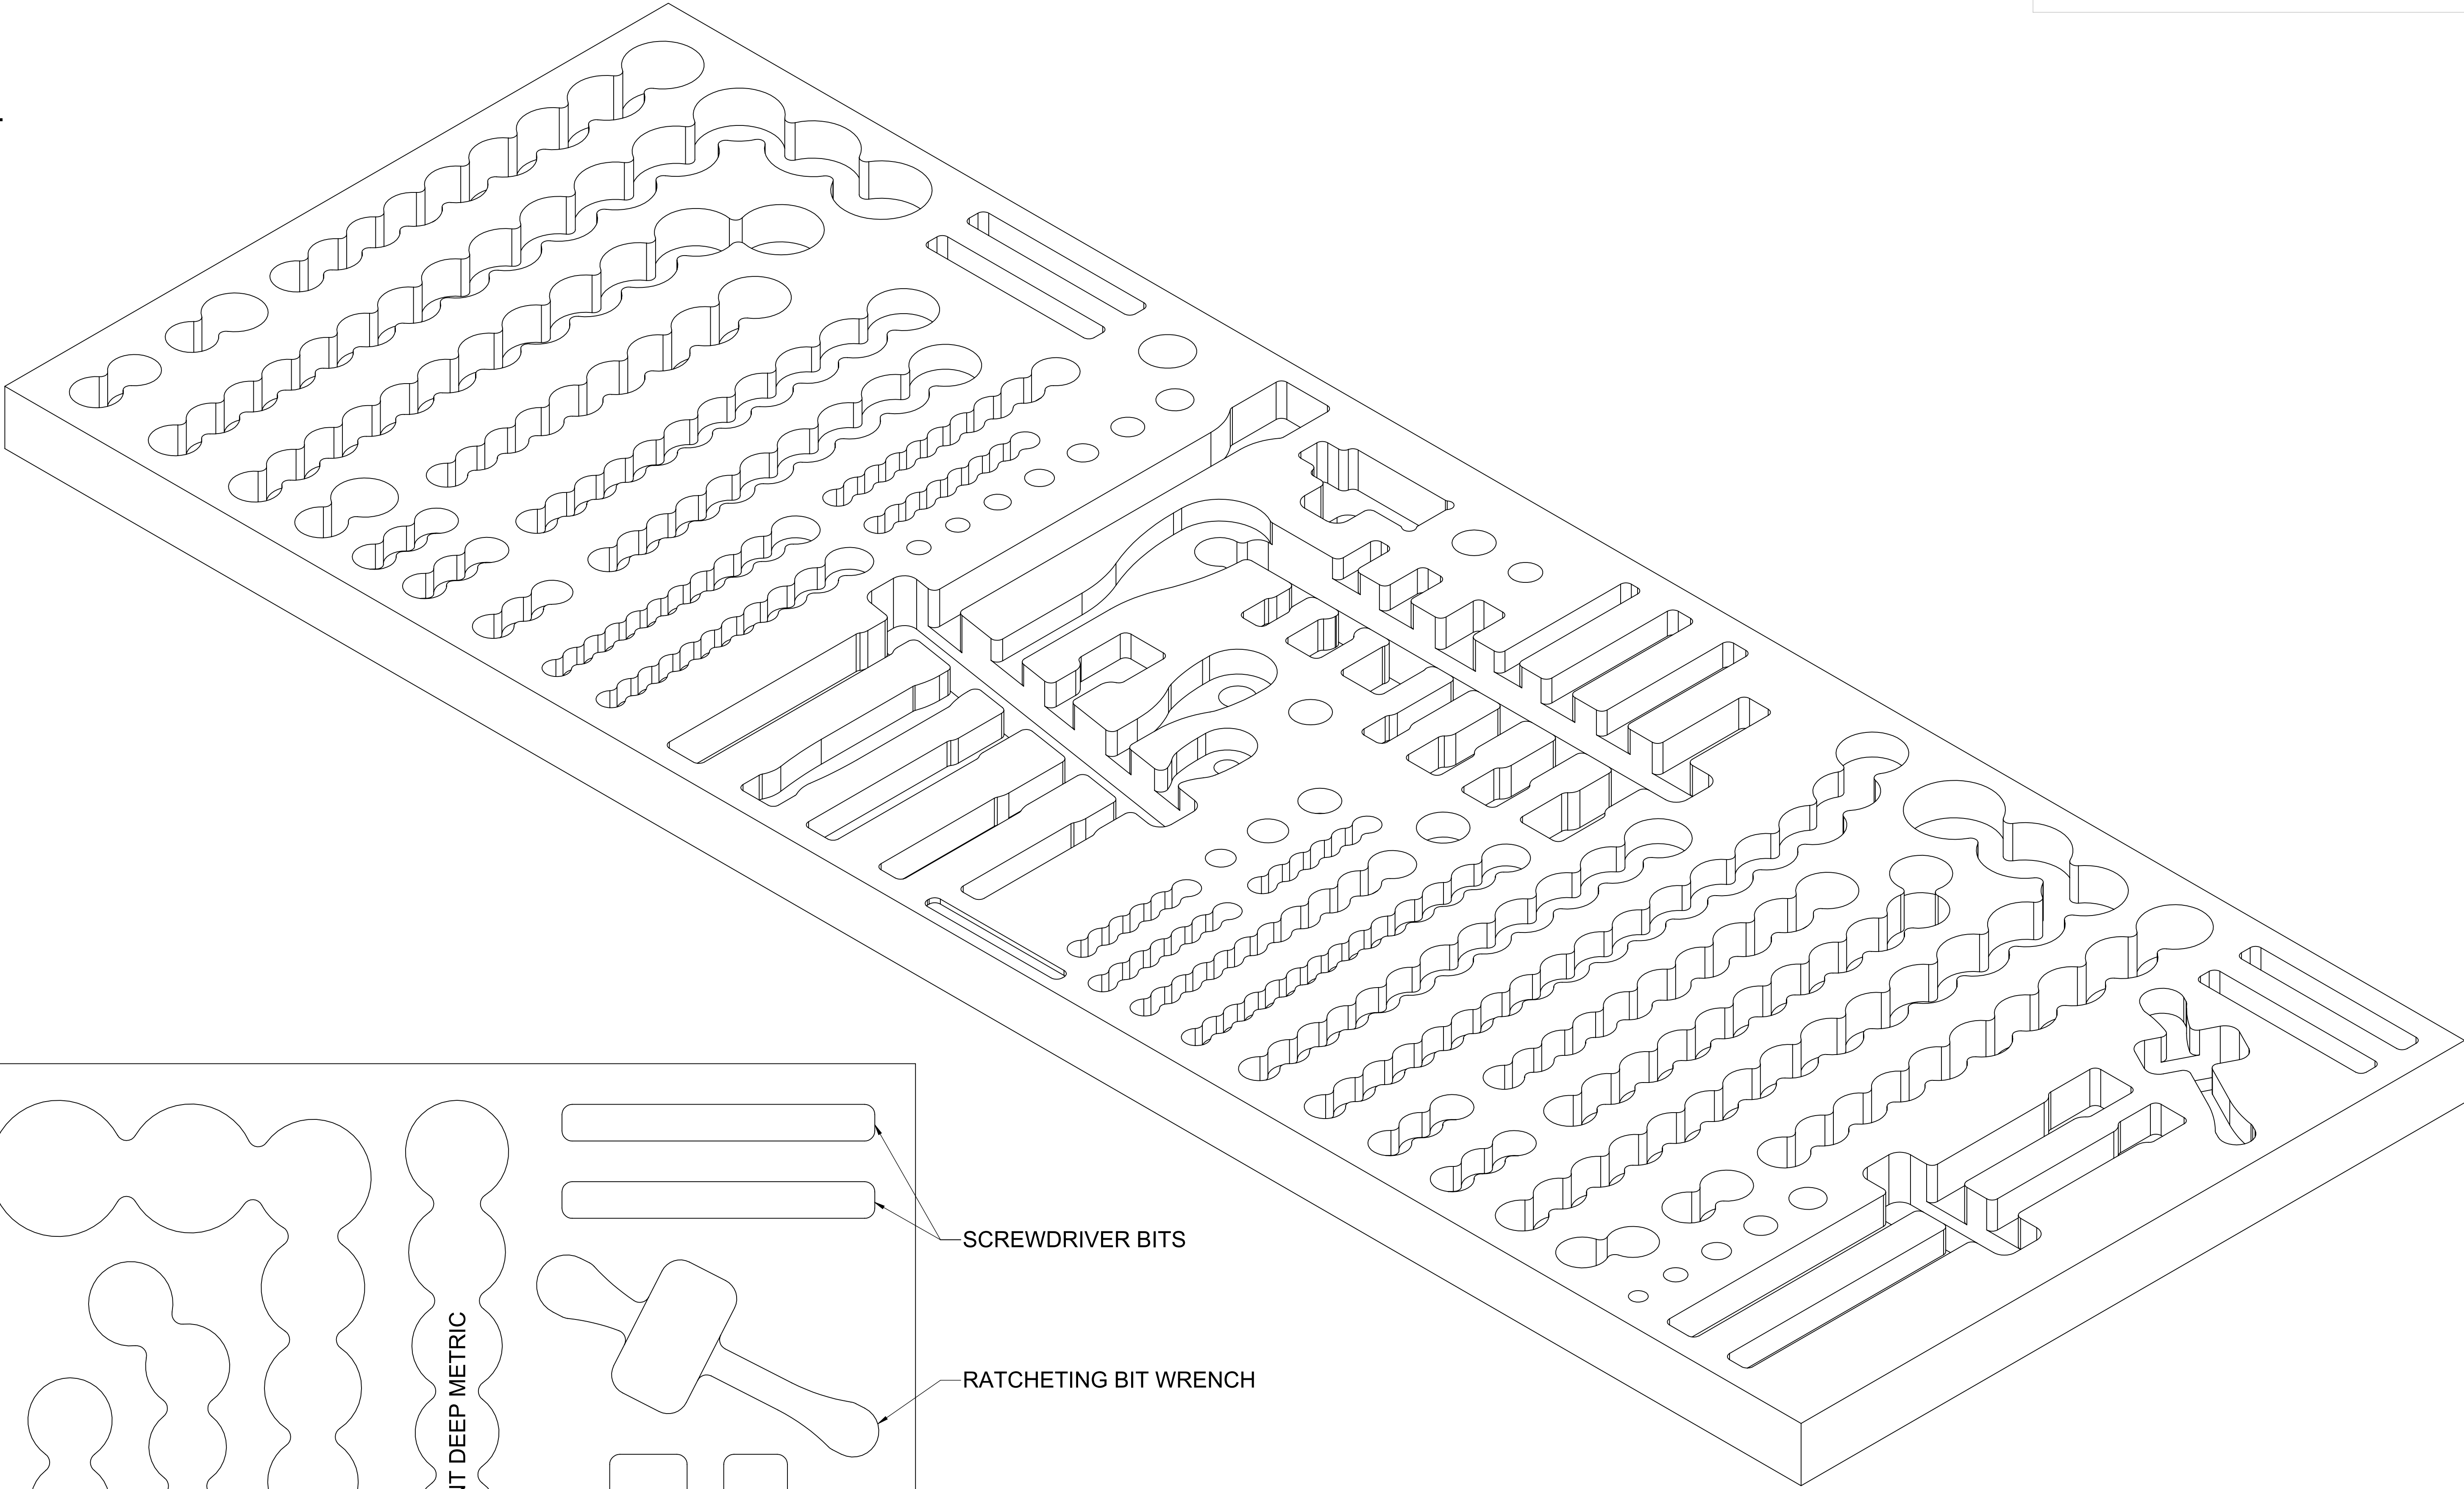  

SCREWDRIVER BITS

RATCHETING BIT WRENCH

SHOWING RIGHT SIDE
SEE PAGE 1 FOR PORTION NOT VISIBLE

1/2 X 10 3/8 X 10

 
3/8-DRIVE METRIC HEX BIT

3/8-DRIVE TORX BIT

1/2-DRIVE TORX BIT

1/2-DRIVE METRIC HEX BIT

METRIC NUT SETTER BITS

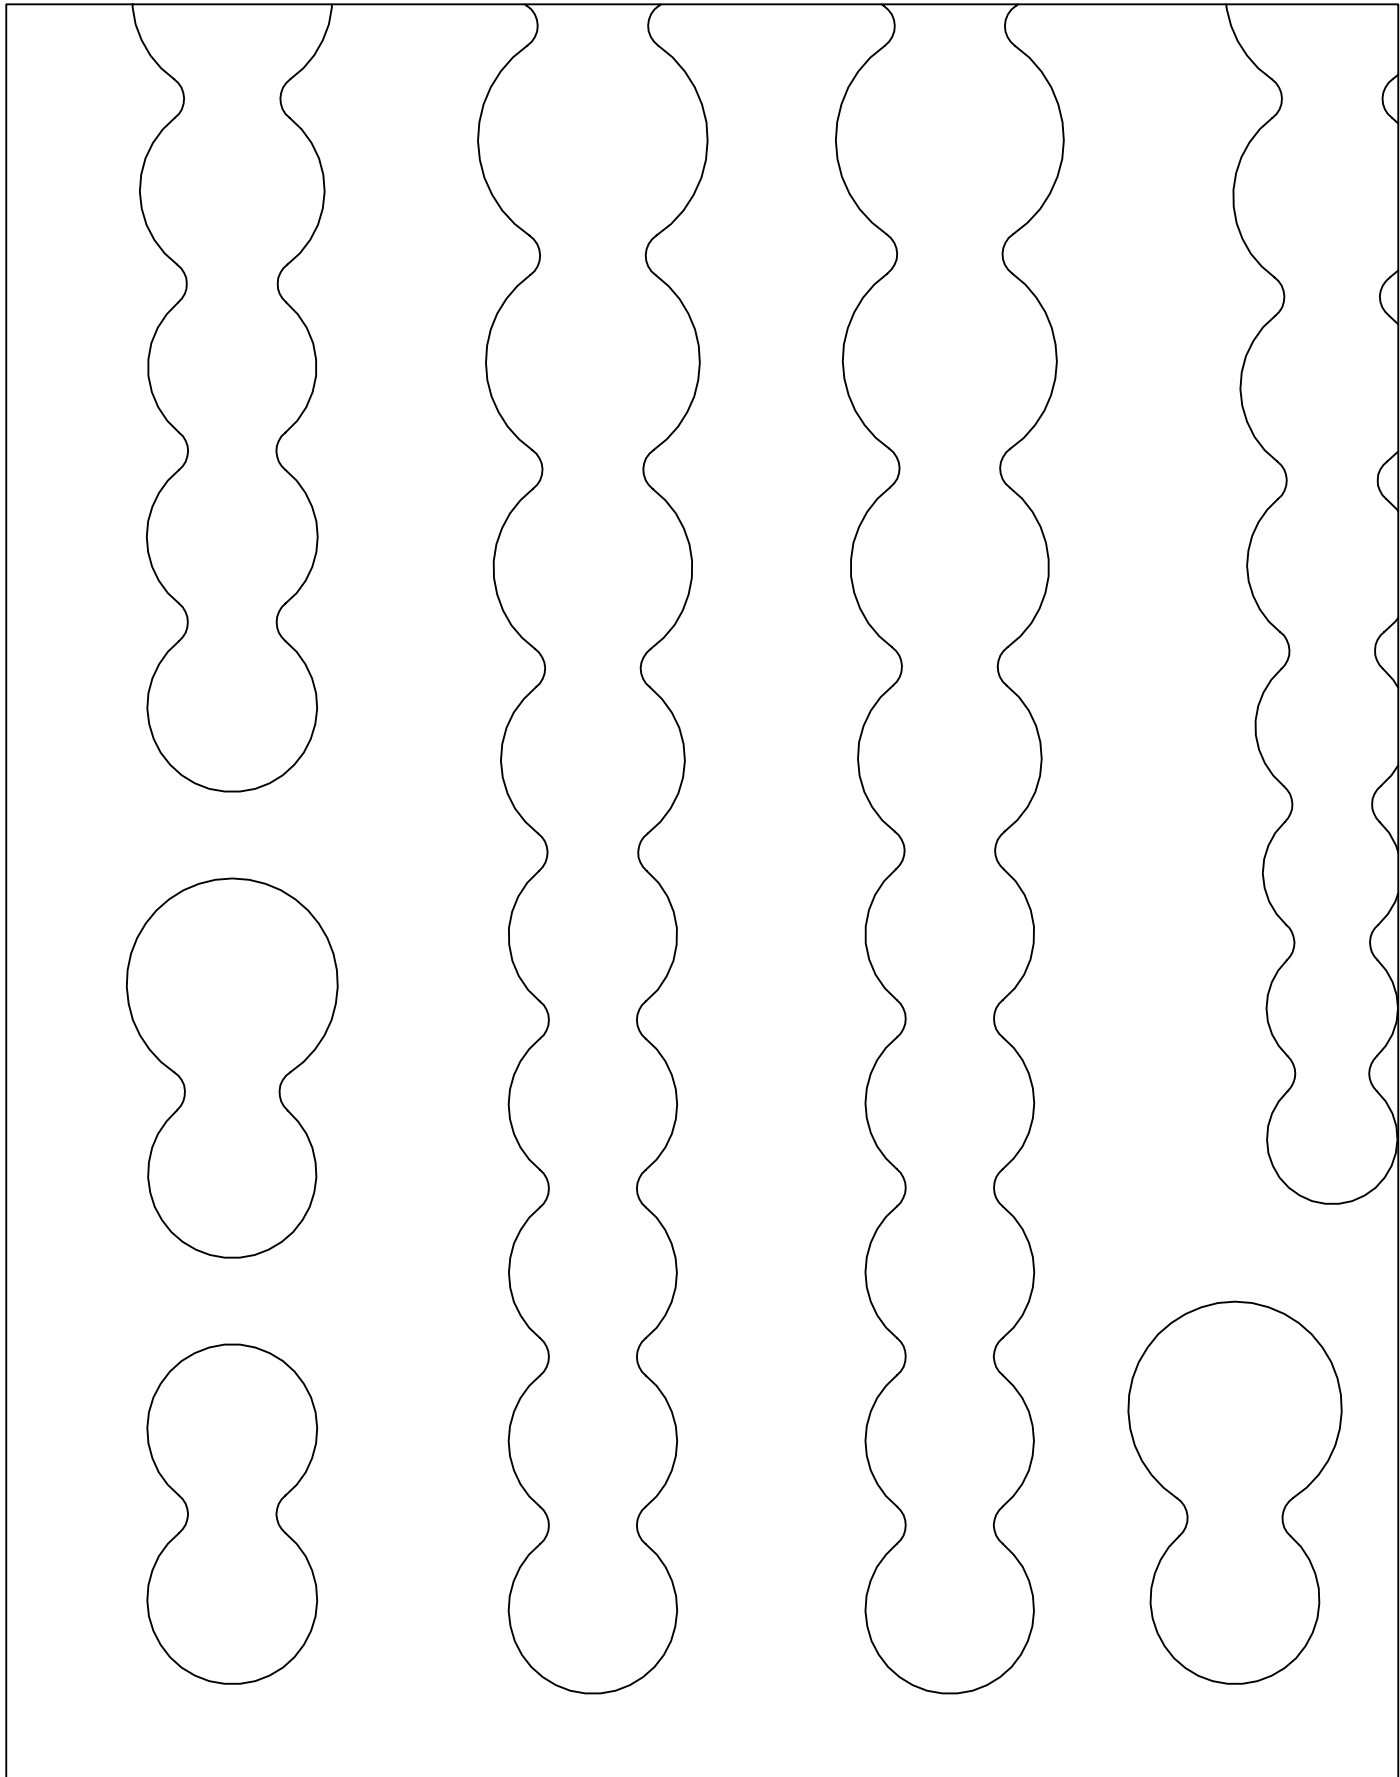

PART NUMBER

F-06532-T

PAGE (ROW-COLUMN)

1-1

Numbering starts
from the front
left corner.

DATE CREATED

 
08 JUL 2026

DATE REVISED

16 JUL 2026

FoamFit Tools

Print on Letter at 100%

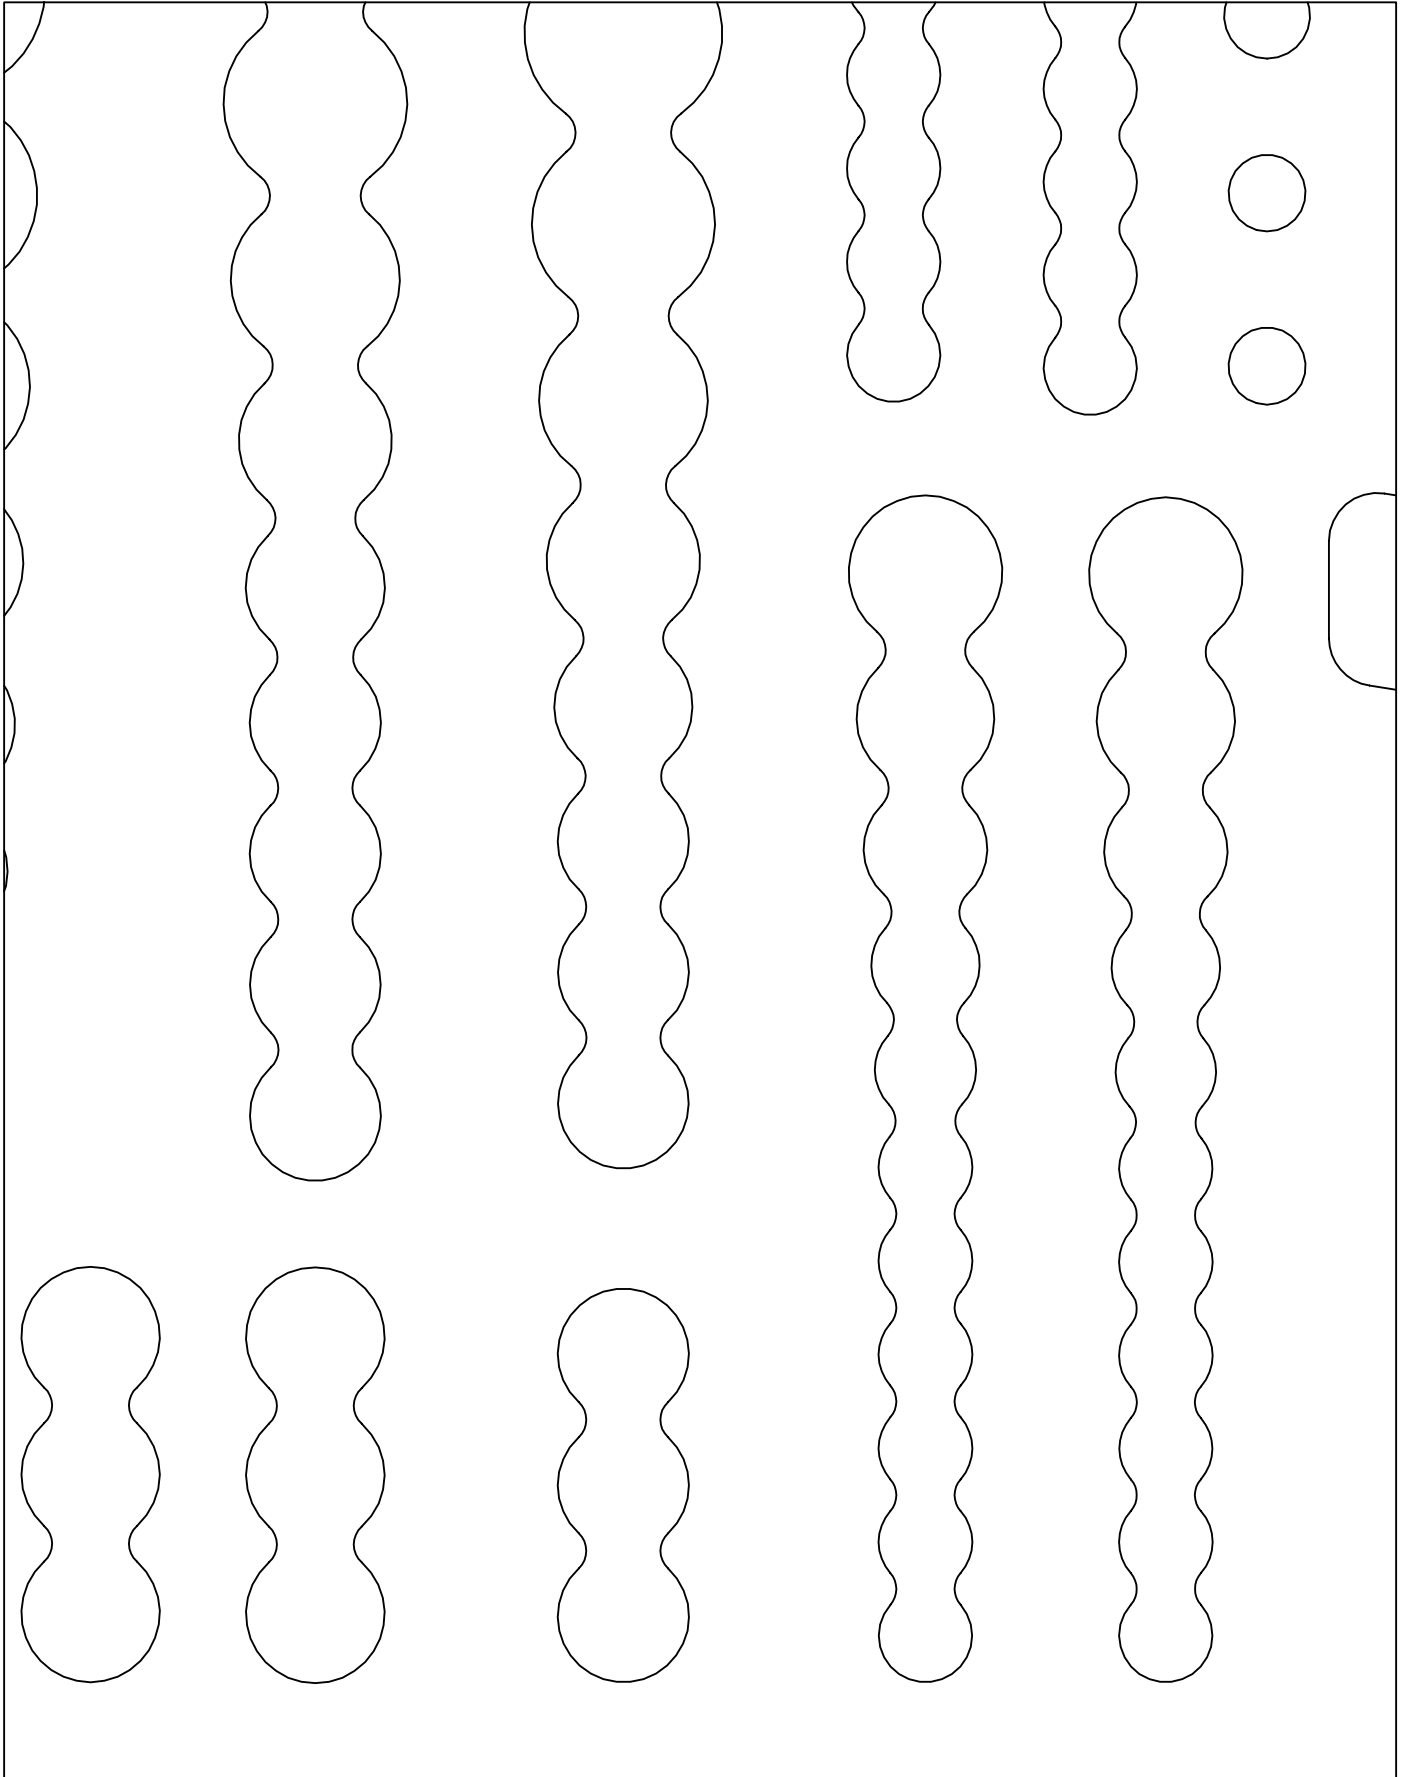

PART NUMBER

F-06532-T

PAGE (ROW-COLUMN)

1-2

Numbering starts
from the front
left corner.

DATE CREATED

 
08 JUL 2026

DATE REVISED

16 JUL 2026

FoamFit Tools

Print on Letter at 100%

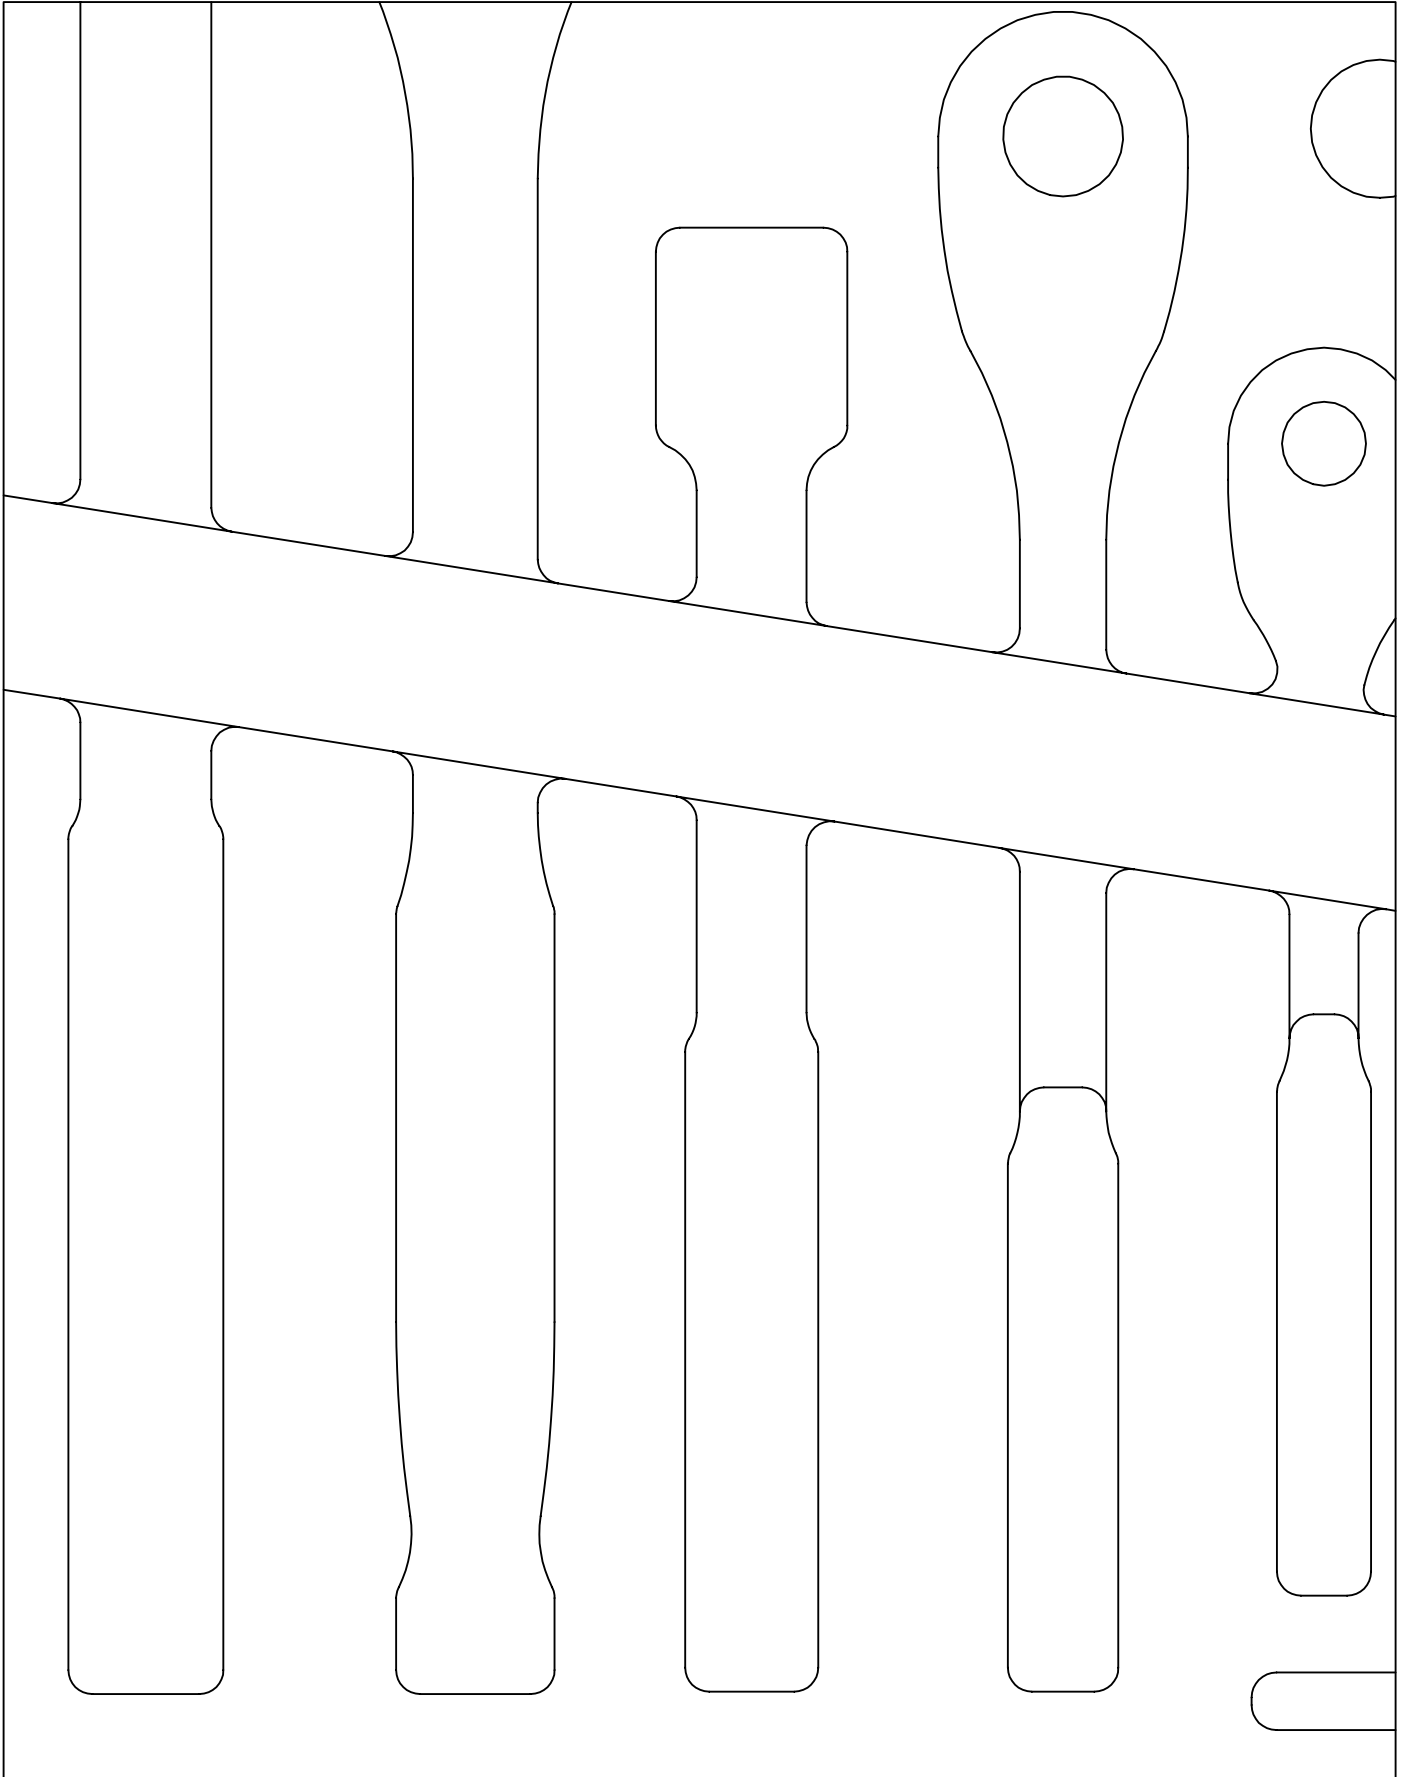

PART NUMBER

F-06532-T

PAGE (ROW-COLUMN)

1-3

Numbering starts
from the front
left corner.

DATE CREATED

 
08 JUL 2026

DATE REVISED

16 JUL 2026

FoamFit Tools

Print on Letter at 100%

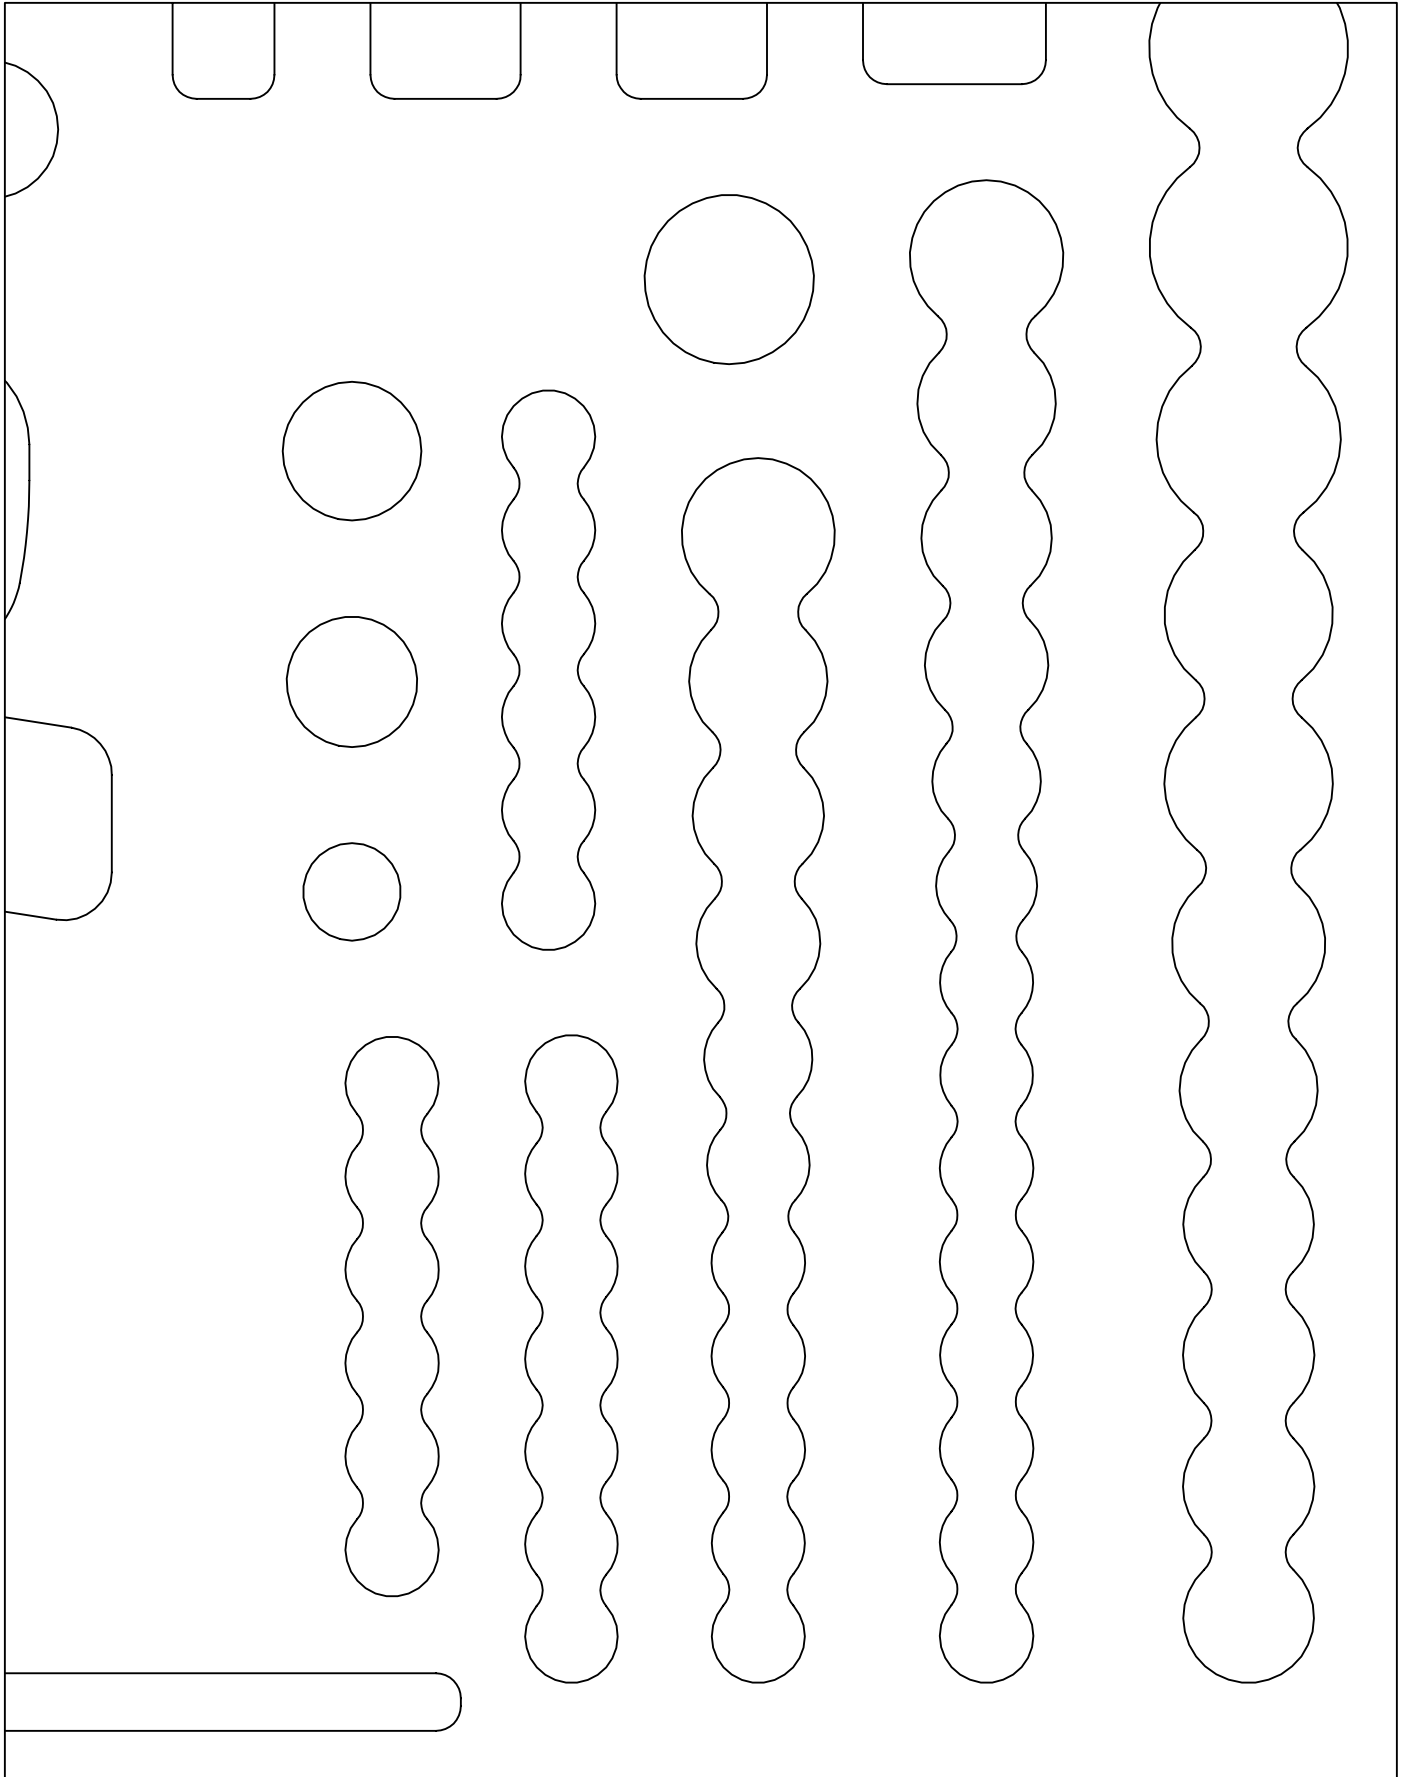

PART NUMBER

F-06532-T

PAGE (ROW-COLUMN)

1-4

Numbering starts
from the front
left corner.

DATE CREATED

 
08 JUL 2026

DATE REVISED

16 JUL 2026

FoamFit Tools

Print on Letter at 100%

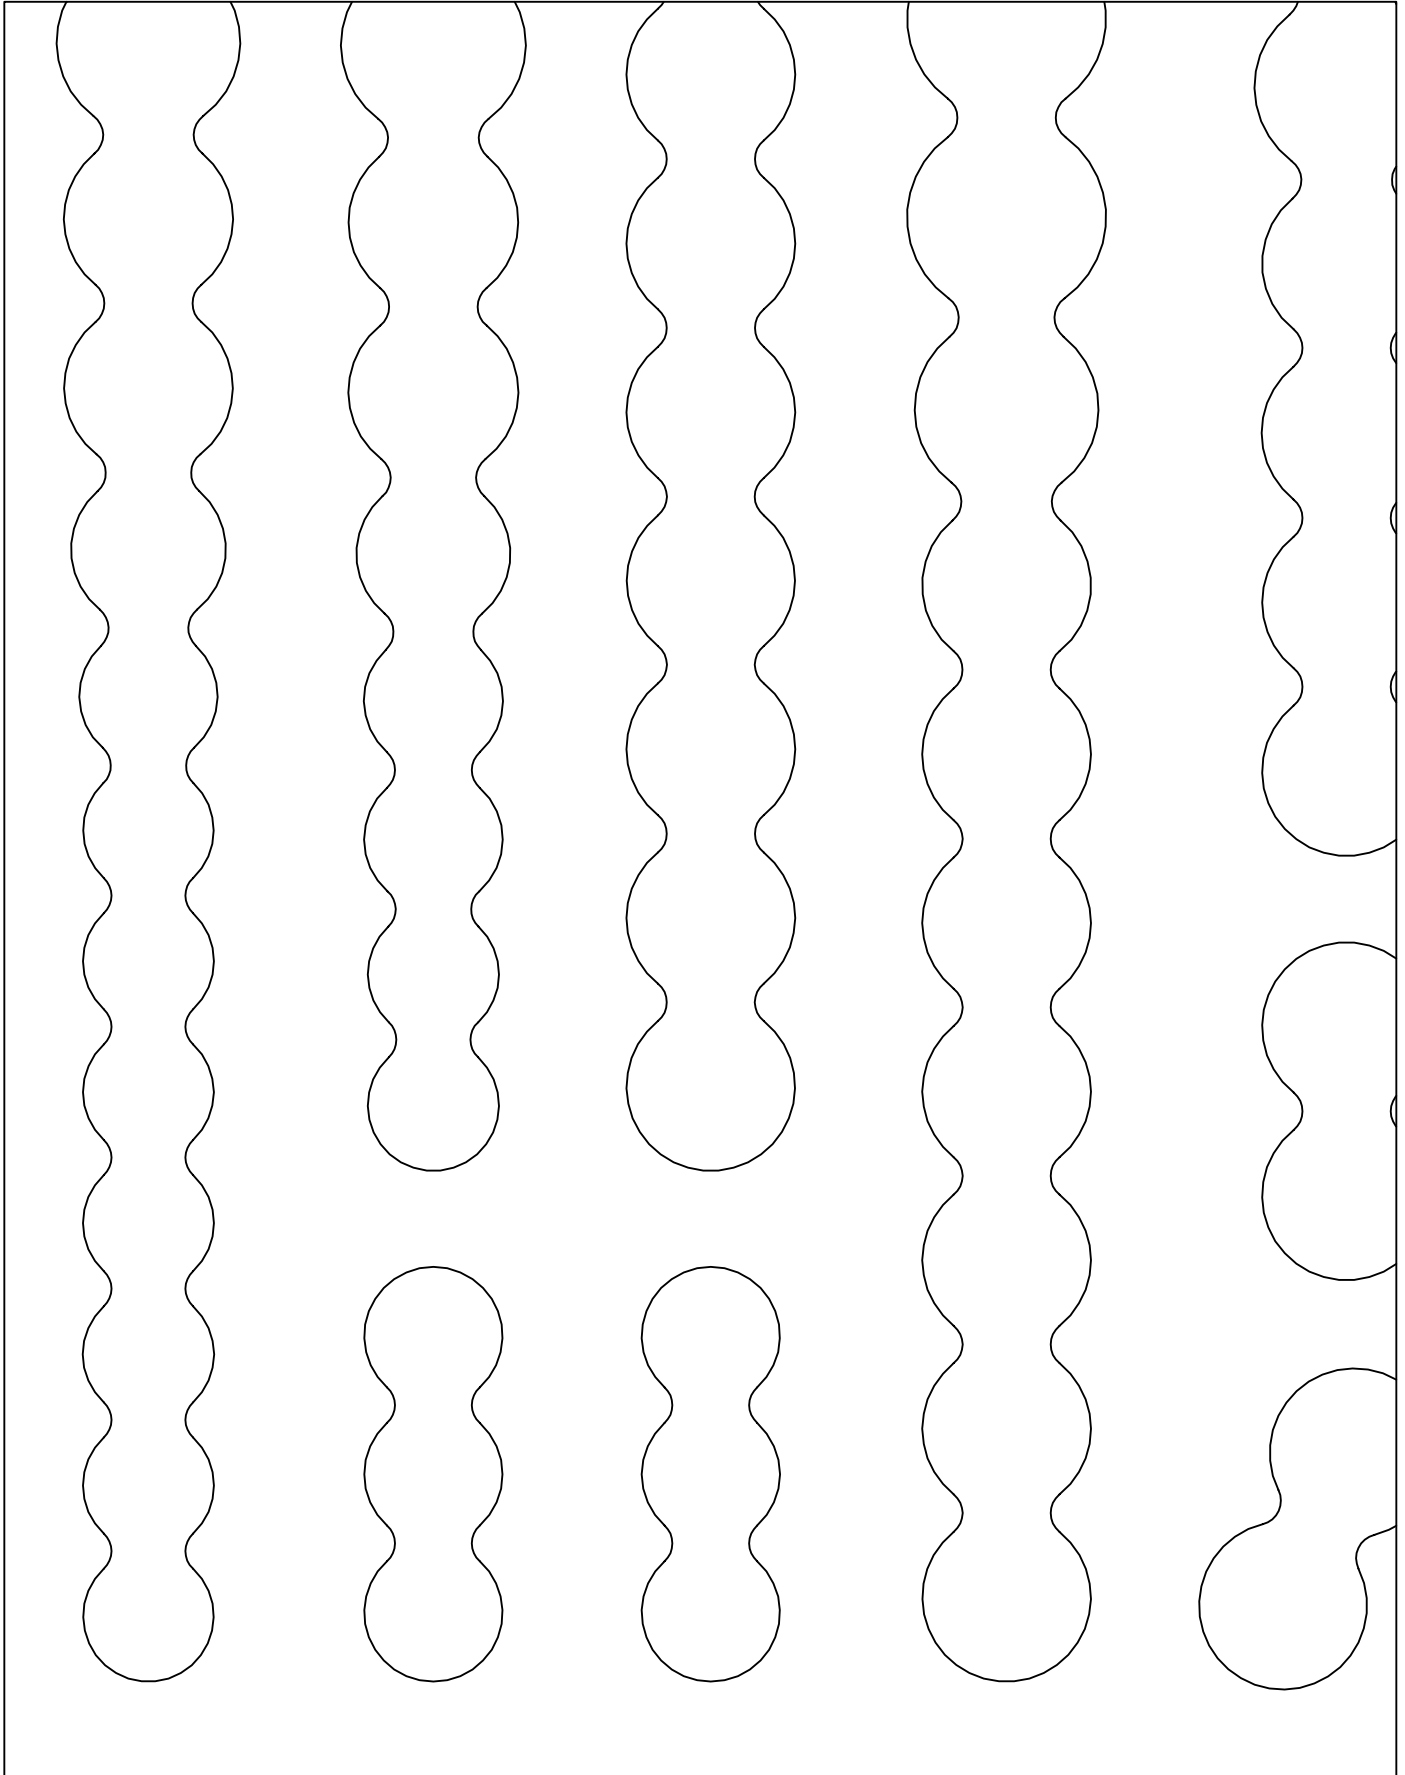

PART NUMBER

F-06532-T

PAGE (ROW-COLUMN)

1-5

Numbering starts
from the front
left corner.

DATE CREATED

 
08 JUL 2026

 
DATE REVISED

16 JUL 2026

FoamFit Tools

Print on Letter at 100%

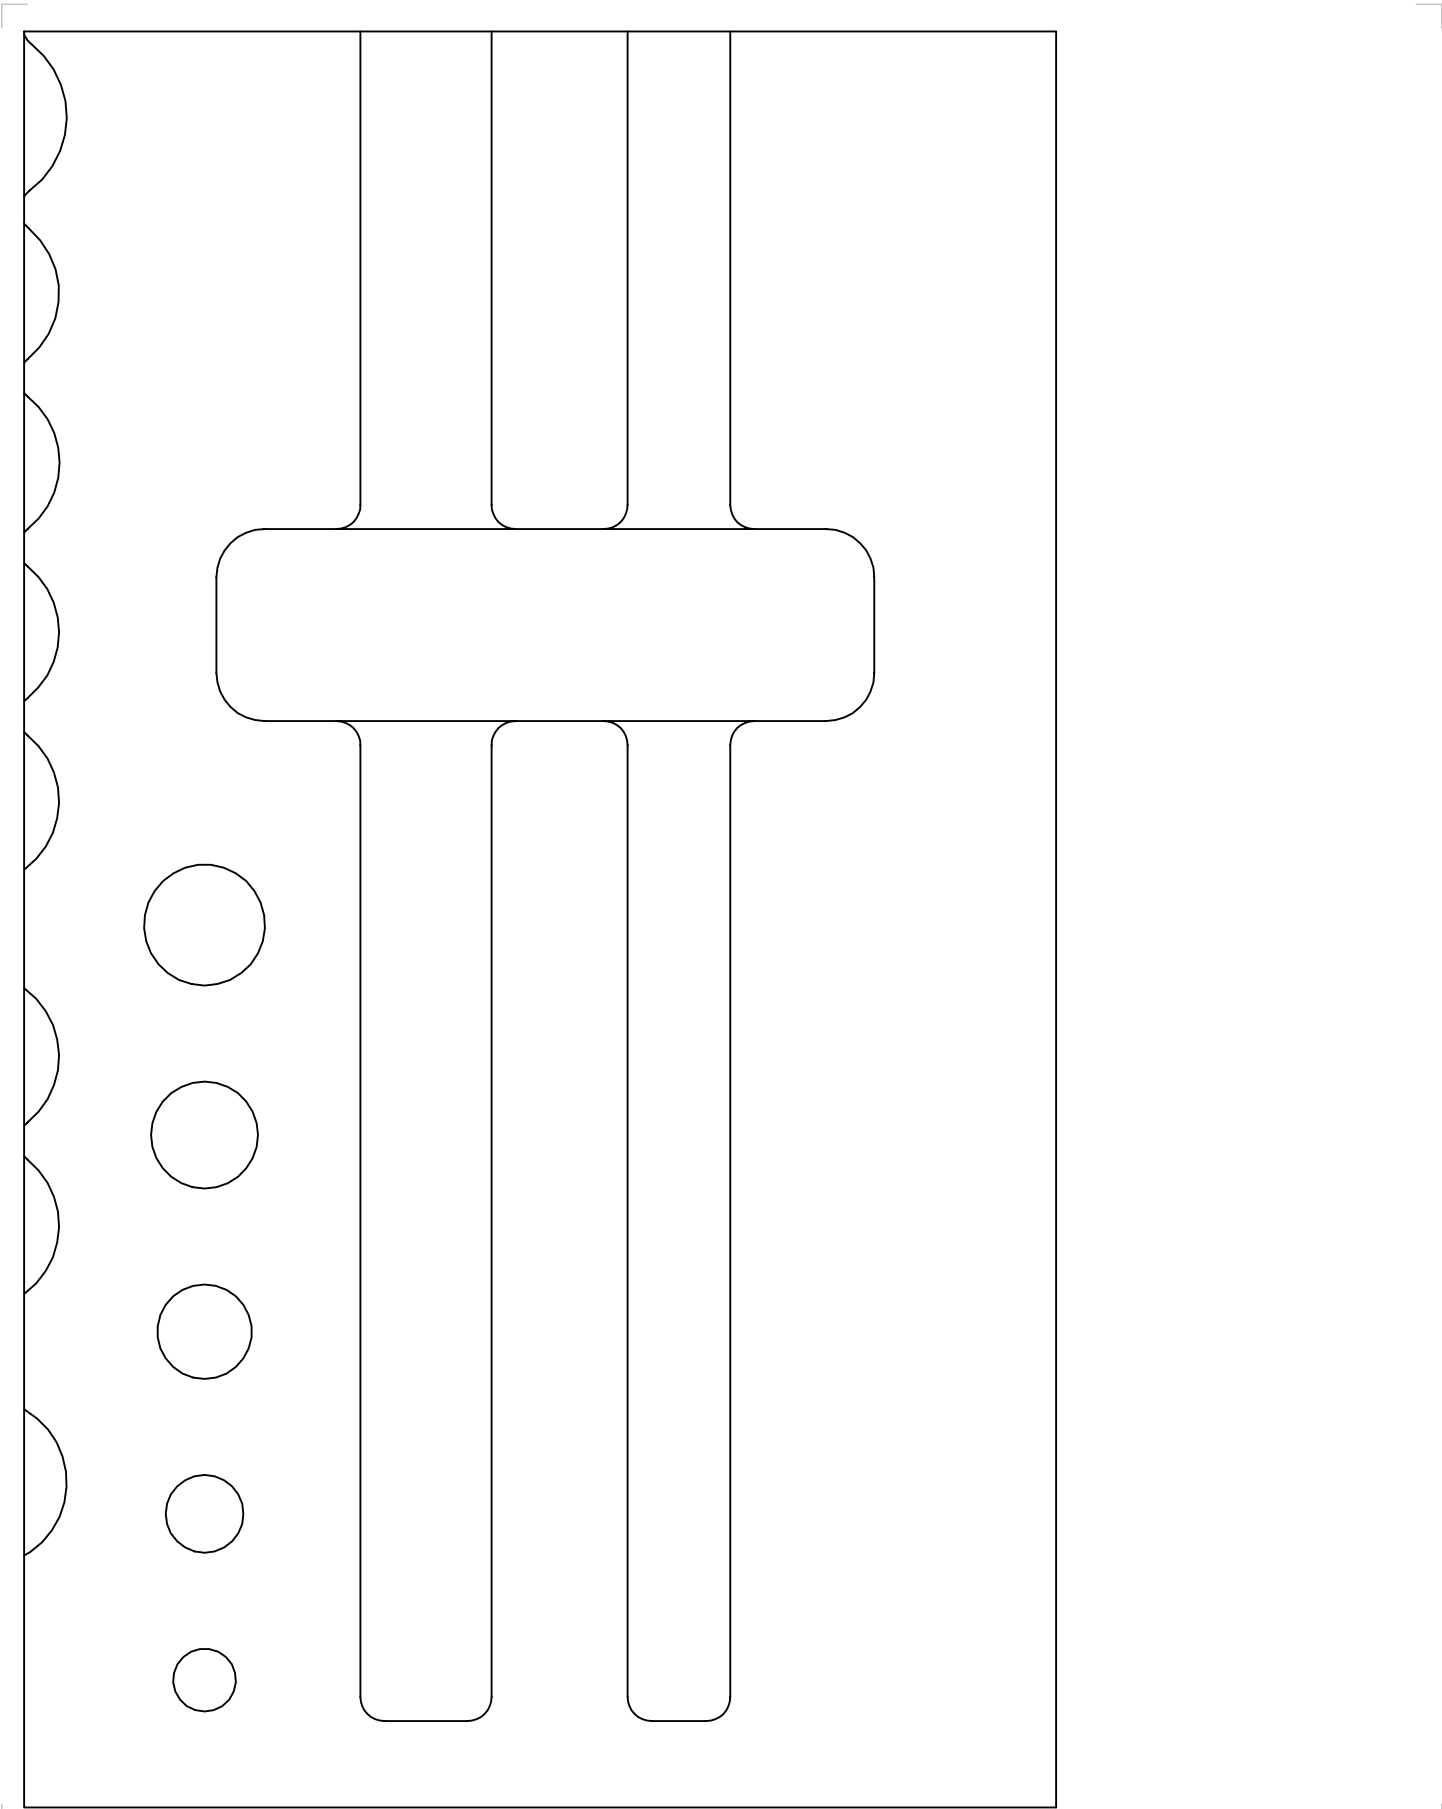

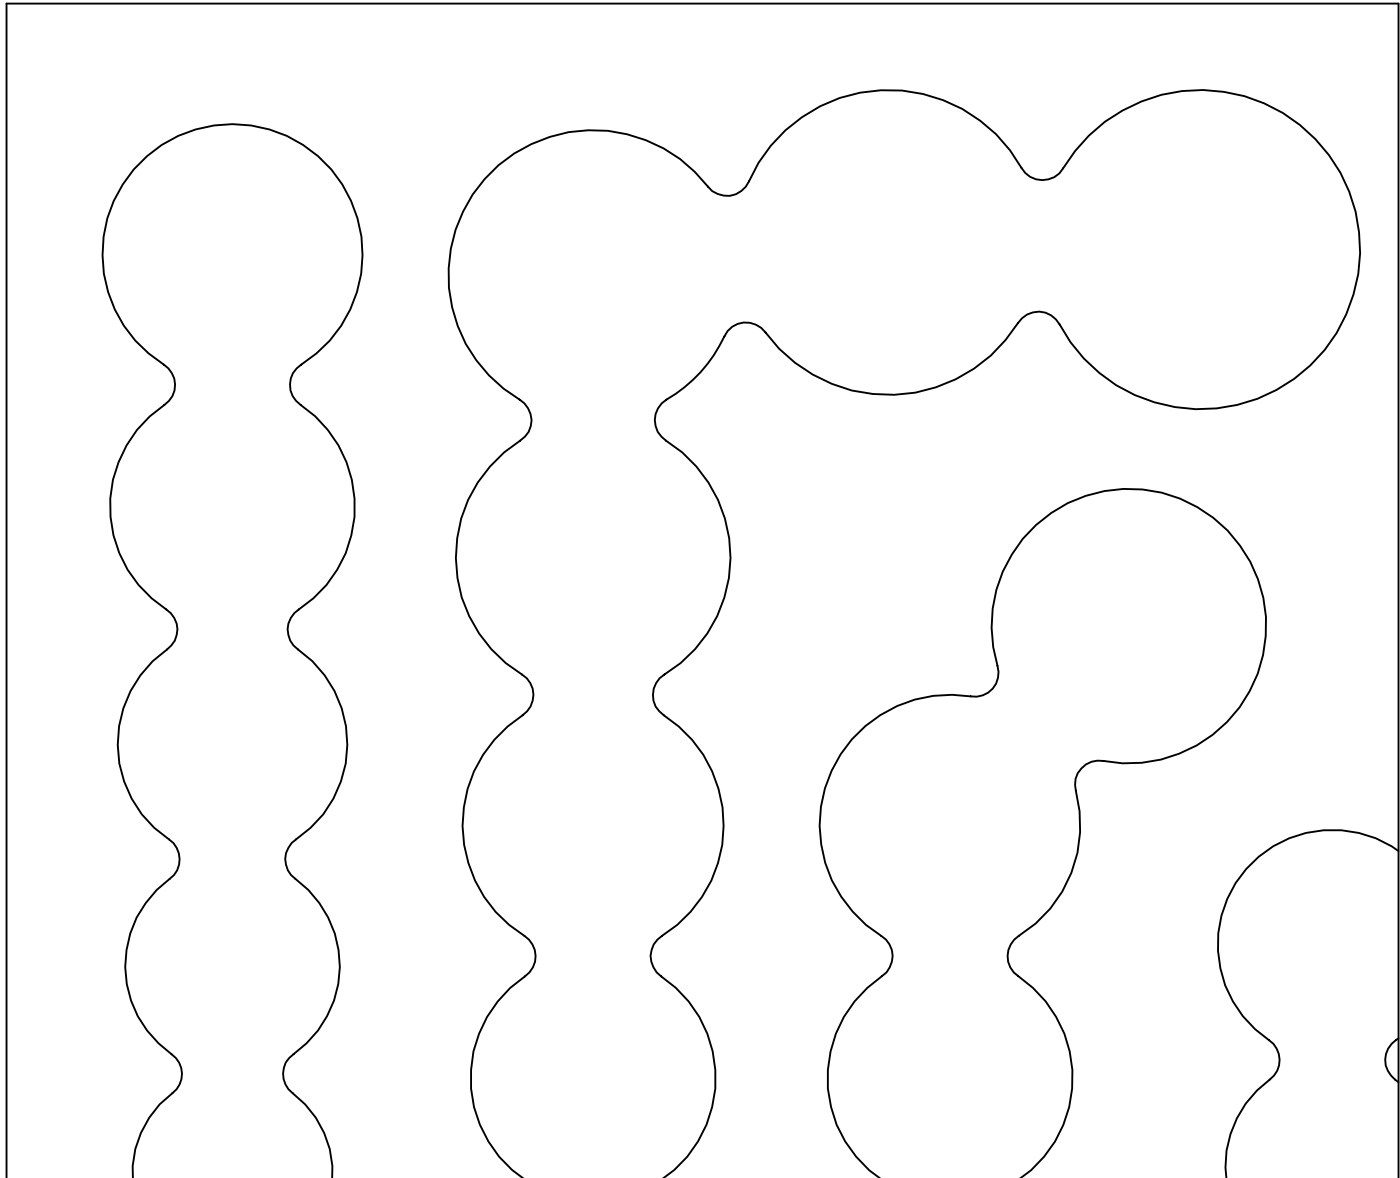

PART NUMBER

F-06532-T

PAGE (ROW-COLUMN)

2-1

Numbering starts
from the front
left corner.

DATE CREATED

 
08 JUL 2026

DATE REVISED

16 JUL 2026

FoamFit Tools

Print on Letter at 100%

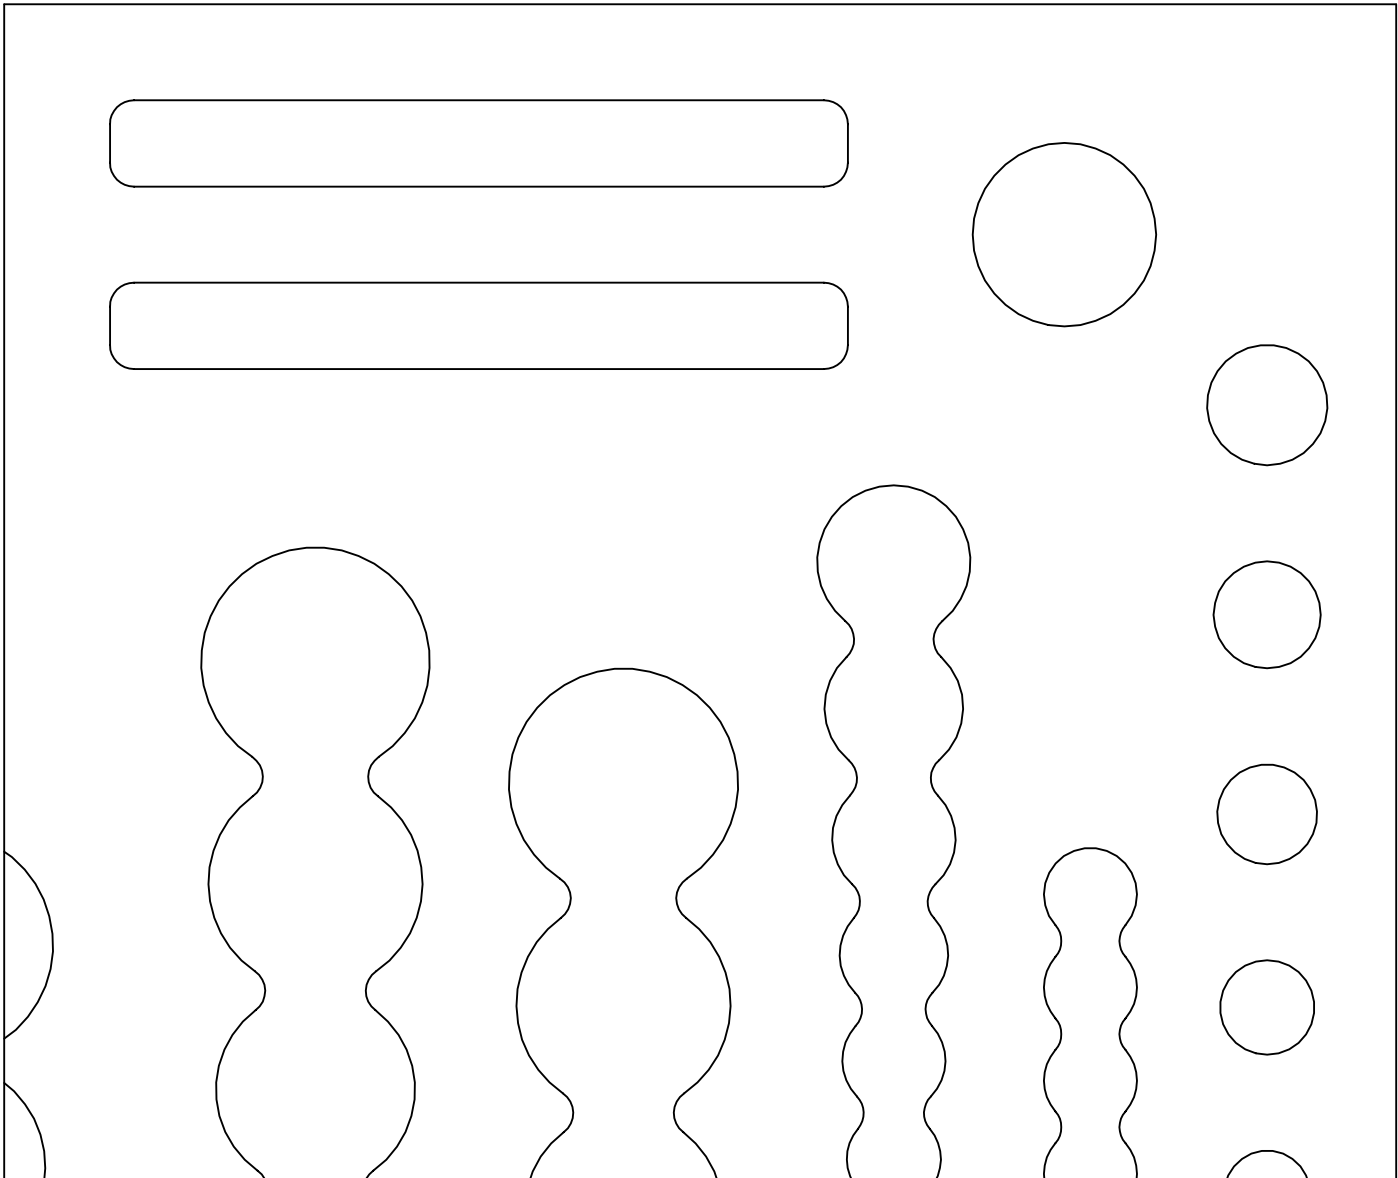

PART NUMBER

F-06532-T

PAGE (ROW-COLUMN)

2-2

Numbering starts
from the front
left corner.

DATE CREATED

 
08 JUL 2026

DATE REVISED

16 JUL 2026

FoamFit Tools

Print on Letter at 100%

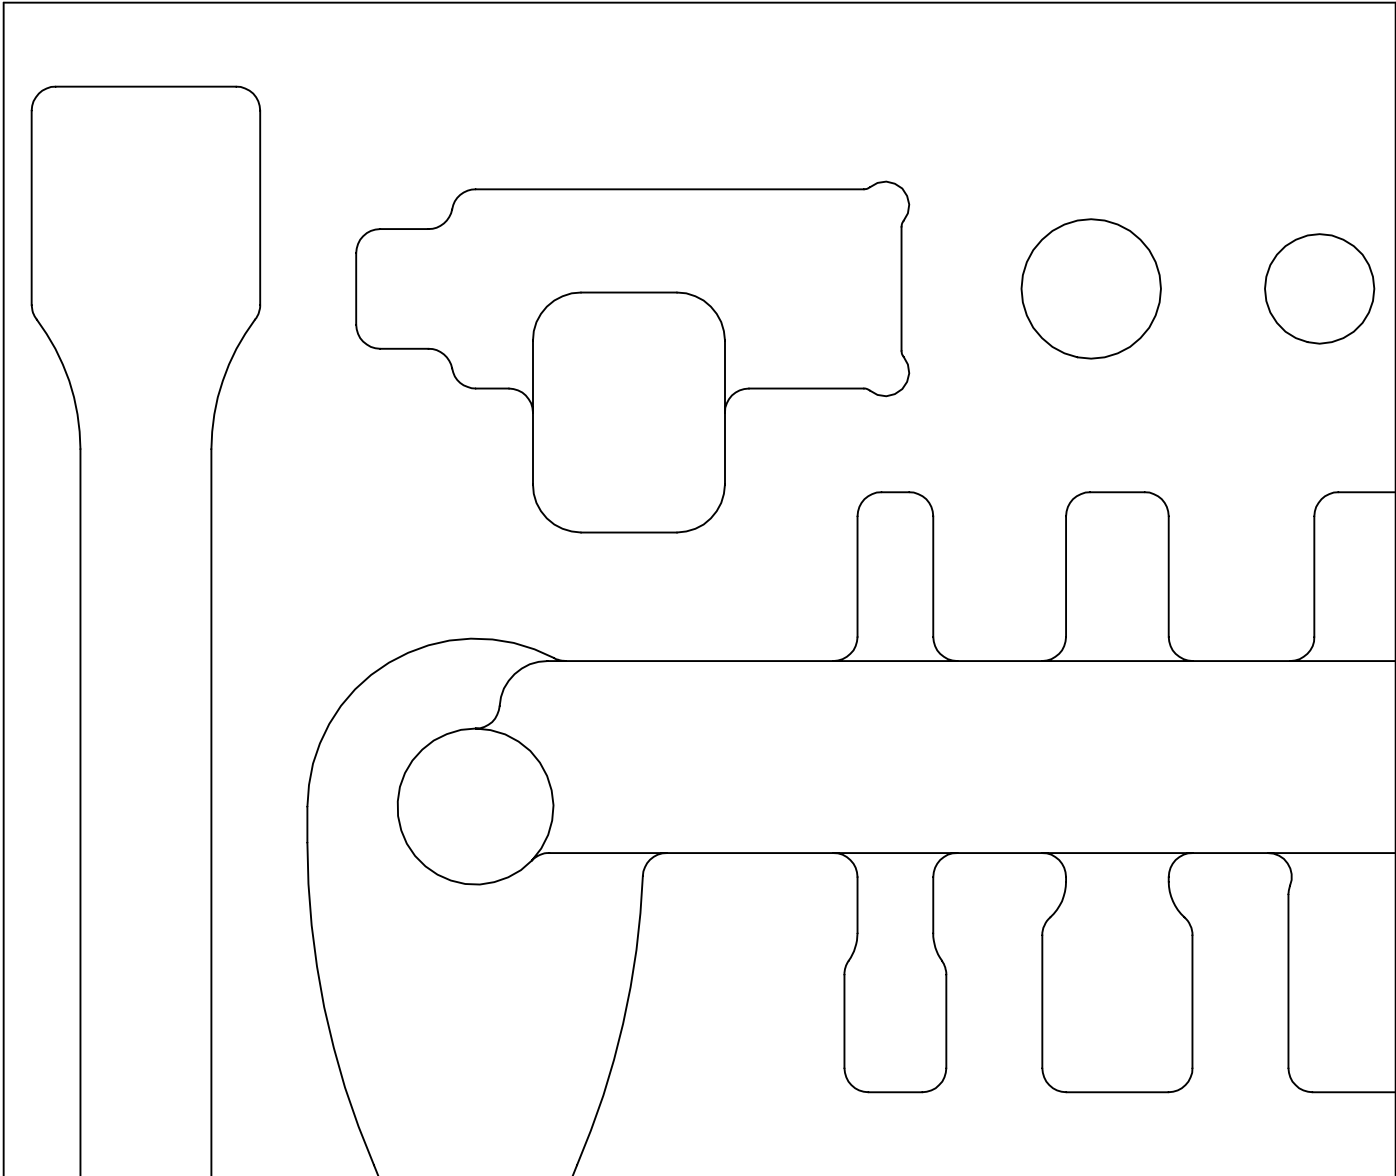

PART NUMBER

F-06532-T

PAGE (ROW-COLUMN)

2-3

Numbering starts
from the front
left corner.

DATE CREATED

 
08 JUL 2026

DATE REVISED

16 JUL 2026

FoamFit Tools

Print on Letter at 100%

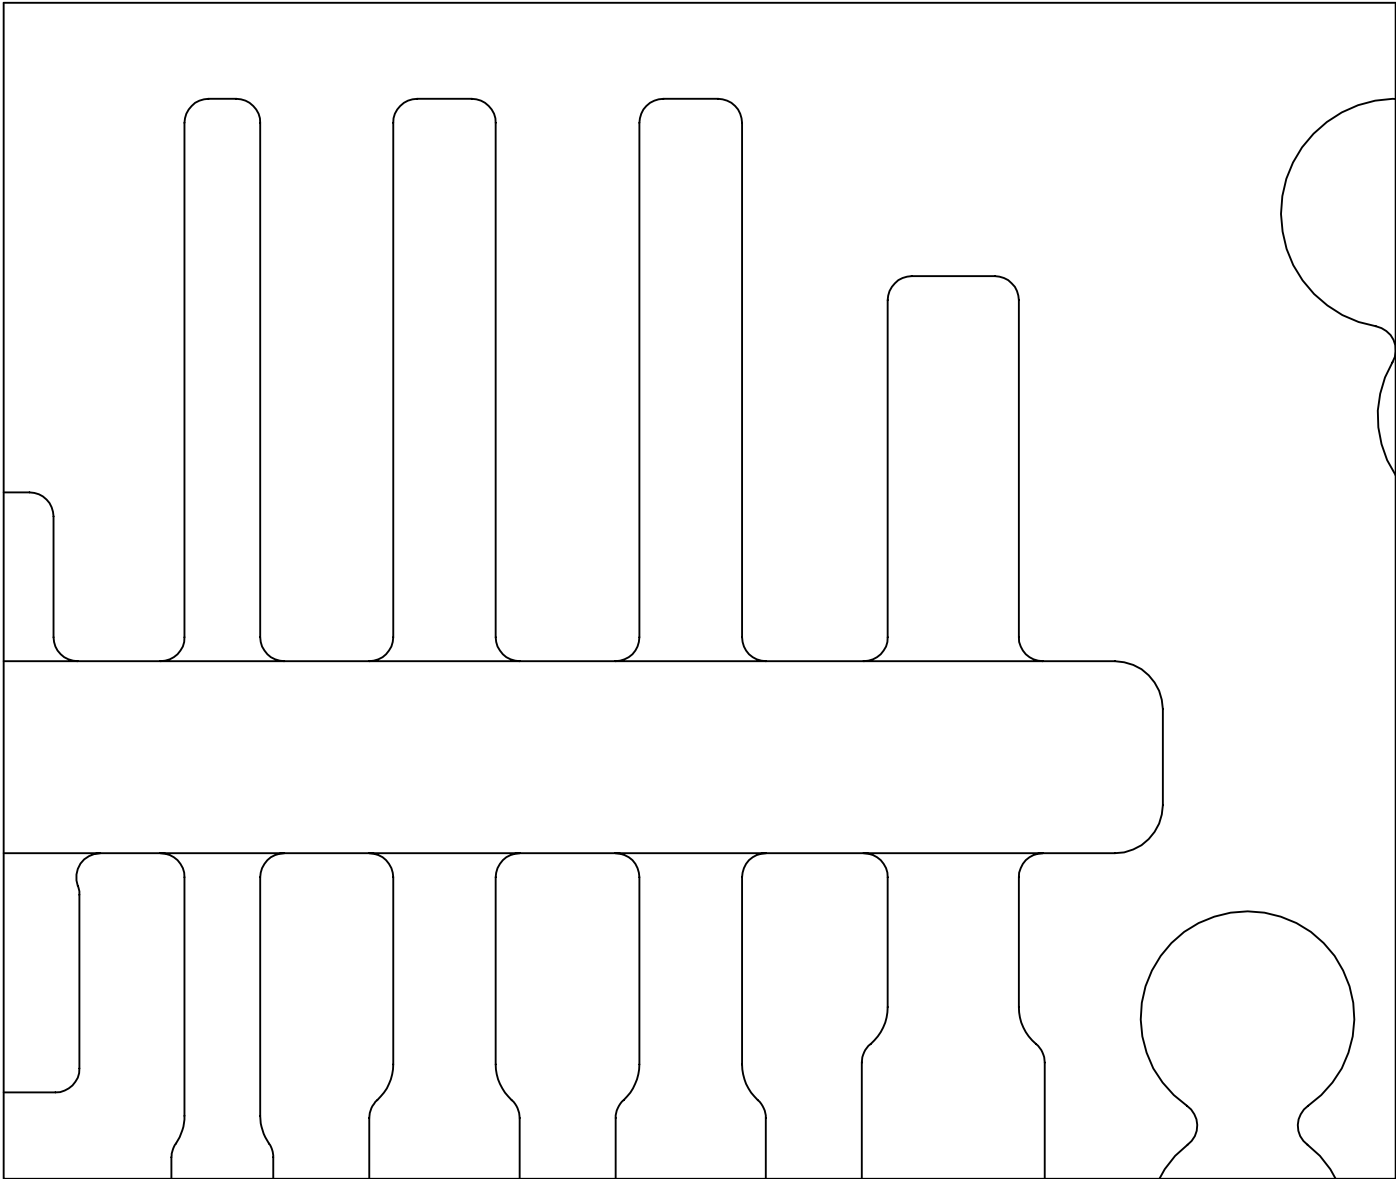

PART NUMBER

F-06532-T

PAGE (ROW-COLUMN)

2-4

Numbering starts
from the front
left corner.

DATE CREATED

 
08 JUL 2026

DATE REVISED

16 JUL 2026

FoamFit Tools

Print on Letter at 100%

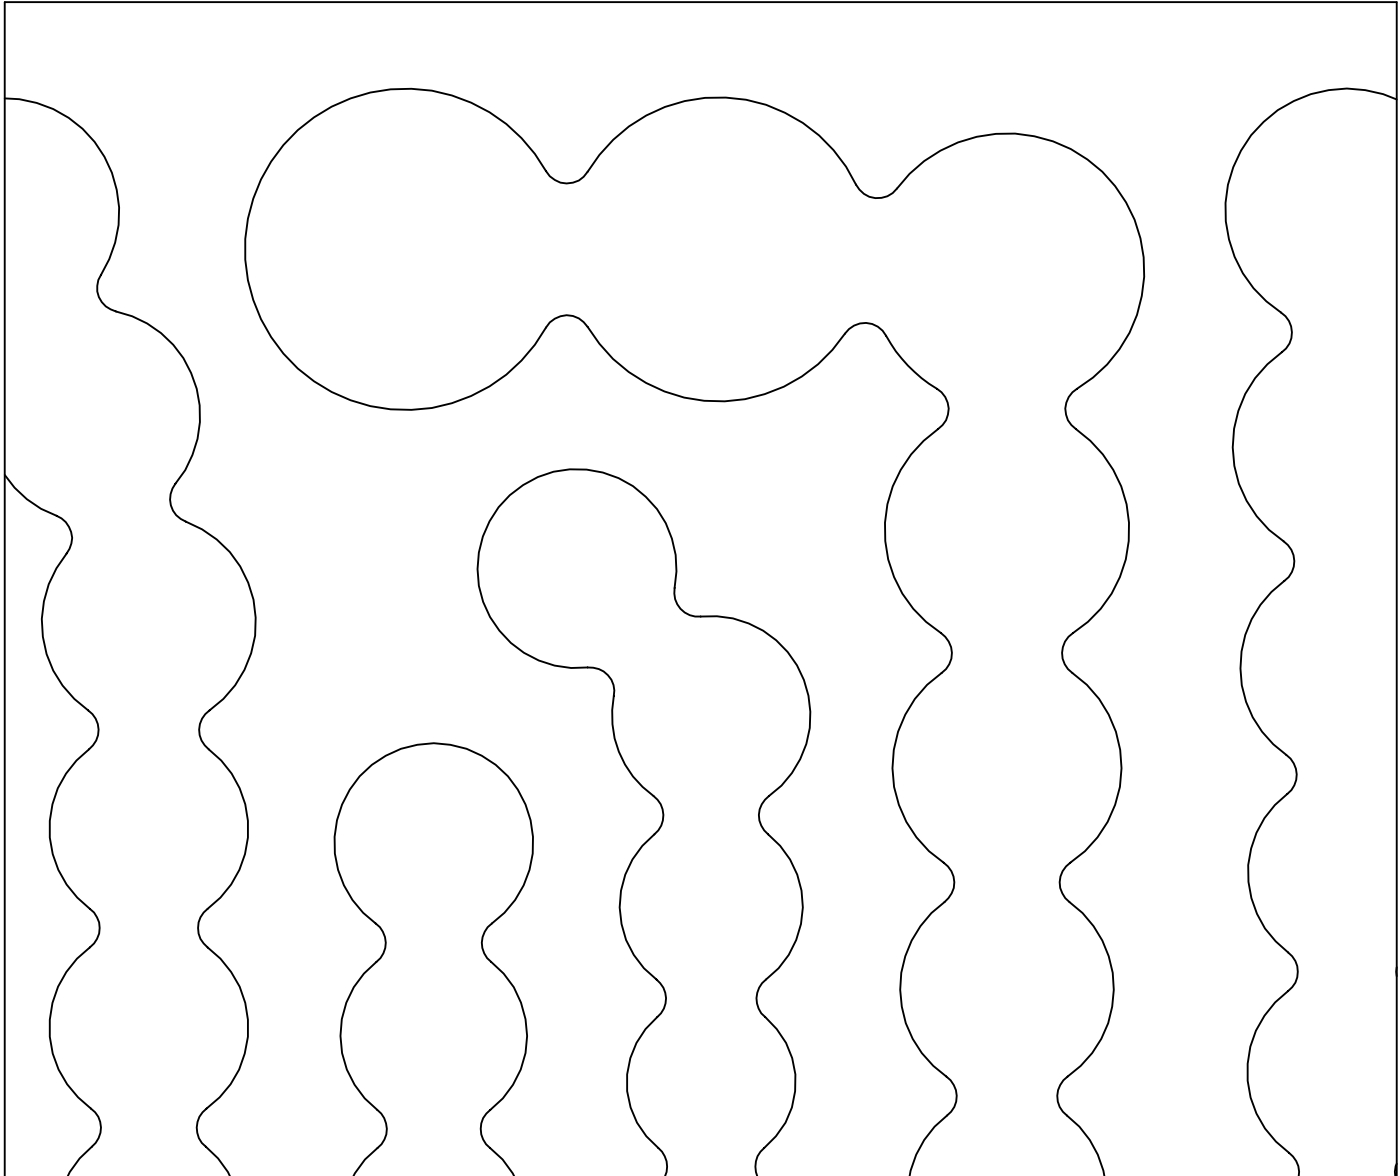

PART NUMBER

F-06532-T

PAGE (ROW-COLUMN)

2-5

Numbering starts
from the front
left corner.

DATE CREATED

 
08 JUL 2026

DATE REVISED

16 JUL 2026

FoamFit Tools

Print on Letter at 100%

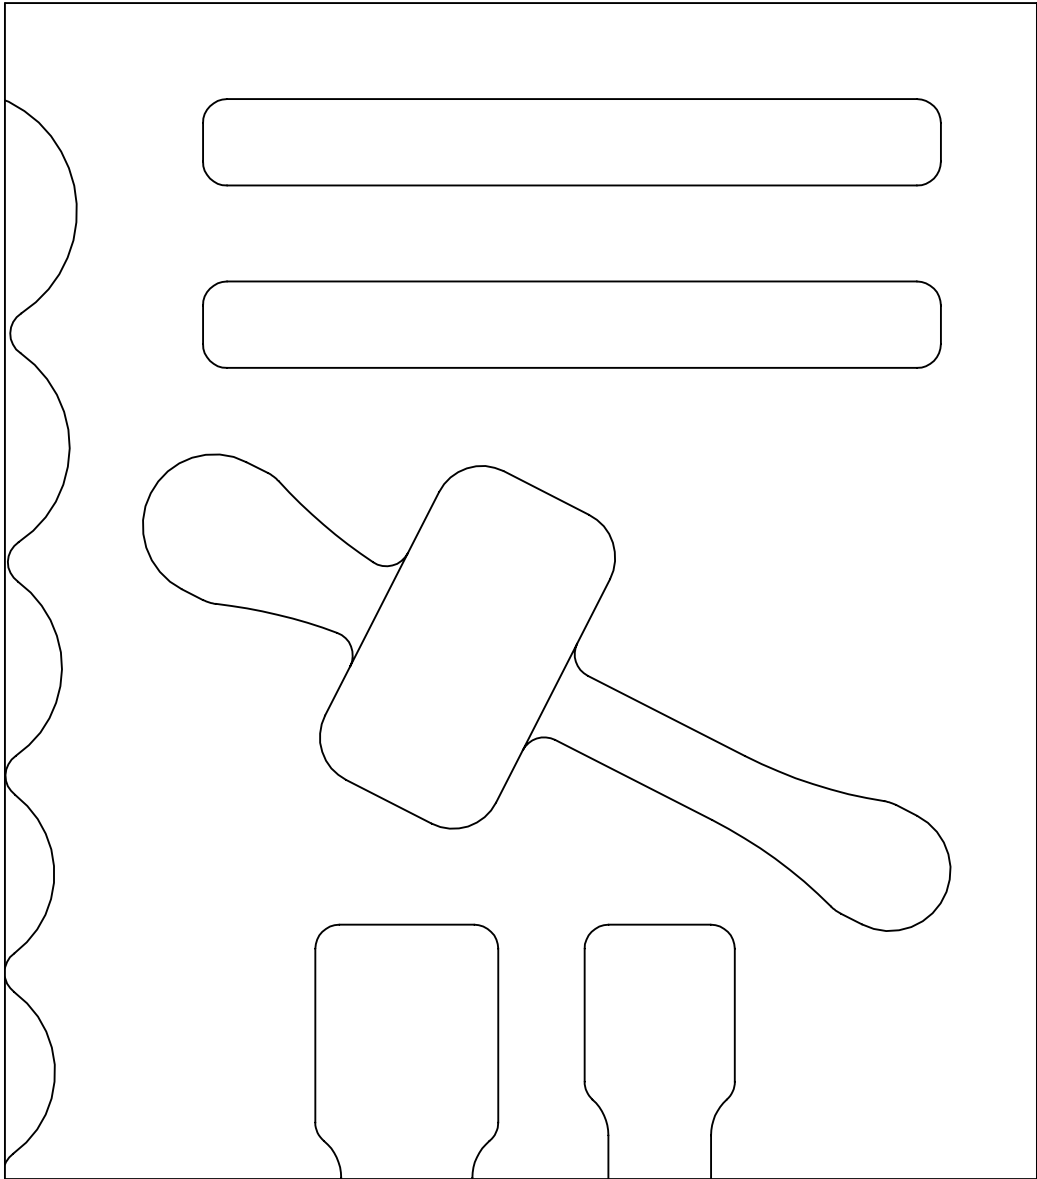

PART NUMBER

F-06532-T

PAGE (ROW-COLUMN)

2-6

Numbering starts
from the front
left corner.

DATE CREATED

08 JUL 2026

DATE REVISED

16 JUL 2026

FoamFit Tools

Print on Letter at 100%