


PRINTING INSTRUCTIONS

Print at full-scale and place tools over the paper to verify the fit.

Option 1: Print this page full-scale on a large-format printer (E-Size, 44 inches X 34 inches).

Option 2: Print page 3 - 14 on 8-1/2 X 11 inch paper and assemble.

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION.
Copyright 2026 FoamFit Tools

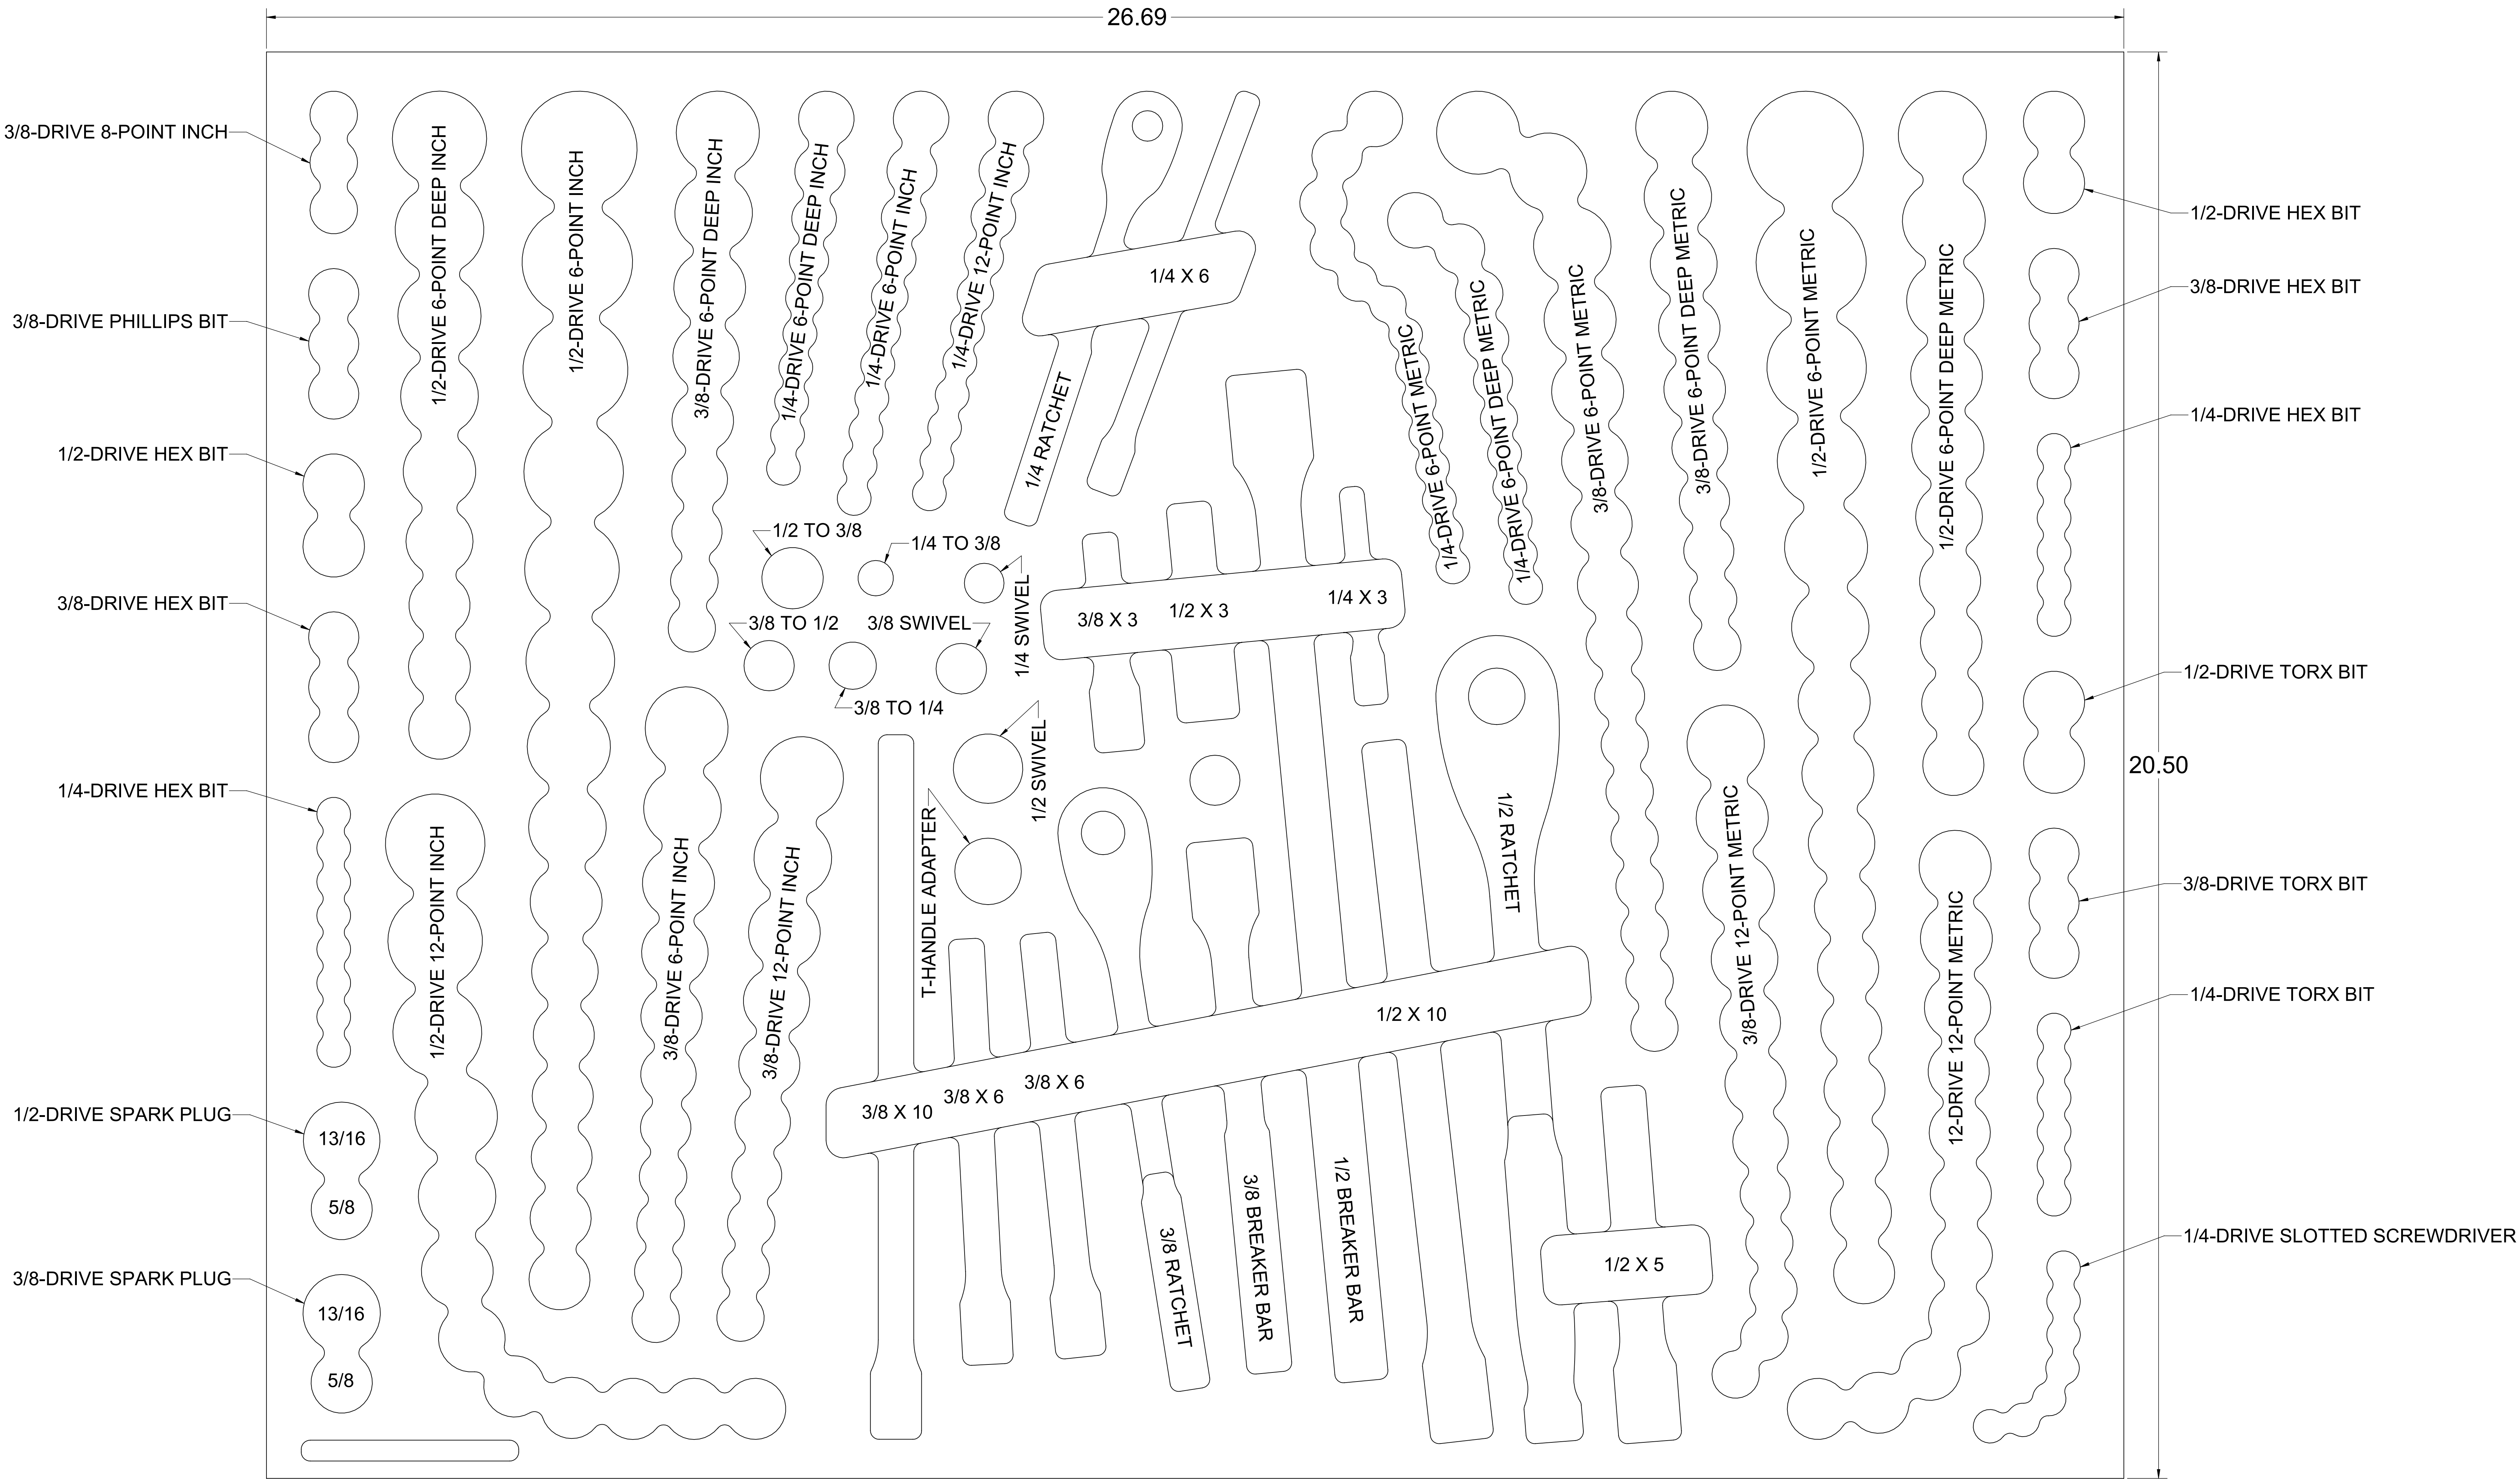 

CAUTION
SUGGESTED DRAWER HEIGHT
3.5 MIN

APPROXIMATE TOP OF TALLEST TOOL

3.31

(1.25)


PRINTING INSTRUCTIONS


Print at full-scale and place tools over the paper to verify the fit.

Option 1: Print this page full-scale on a large-format printer
(E-Size, 44 inches X 34 inches).

Option 2: Print page 2 - 14 on 8-1/2 X 11 inch paper and assemble.

  THE INFORMATION CONTAINED ON THIS DRAWING
IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND
MAY NOT BE USED WITHOUT PERMISSION.
Copyright 2026 FoamFit Tools

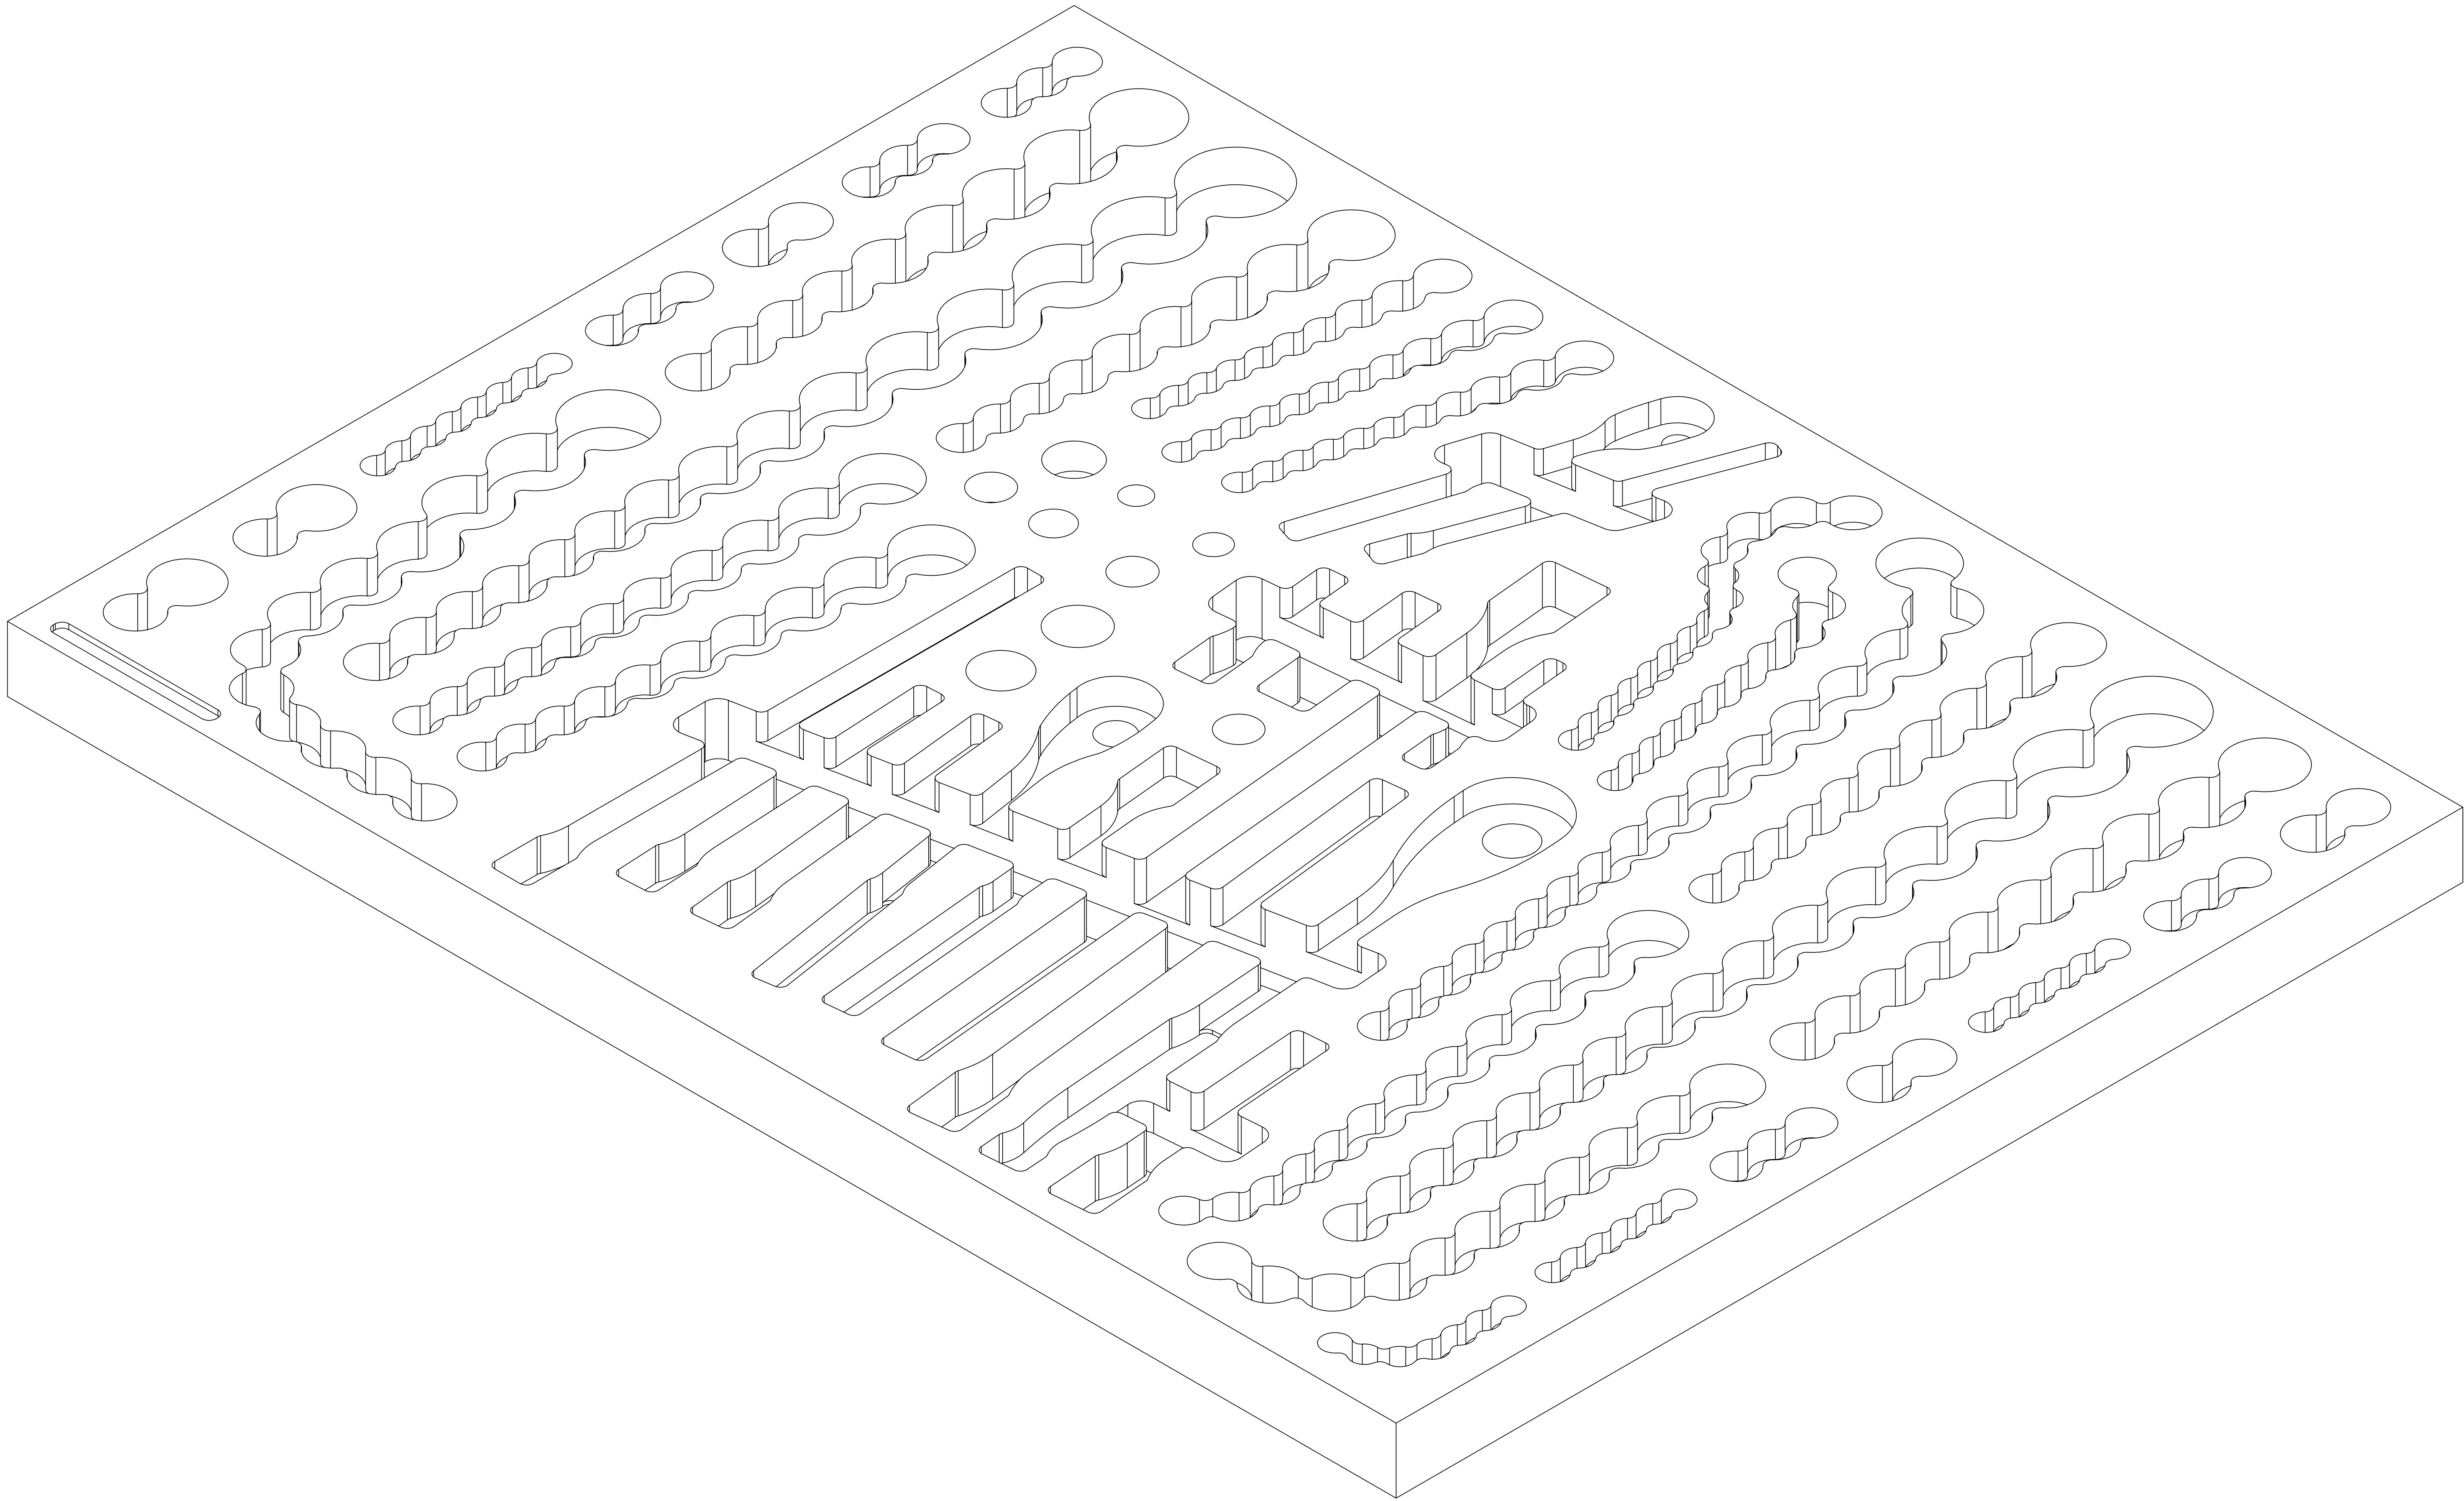

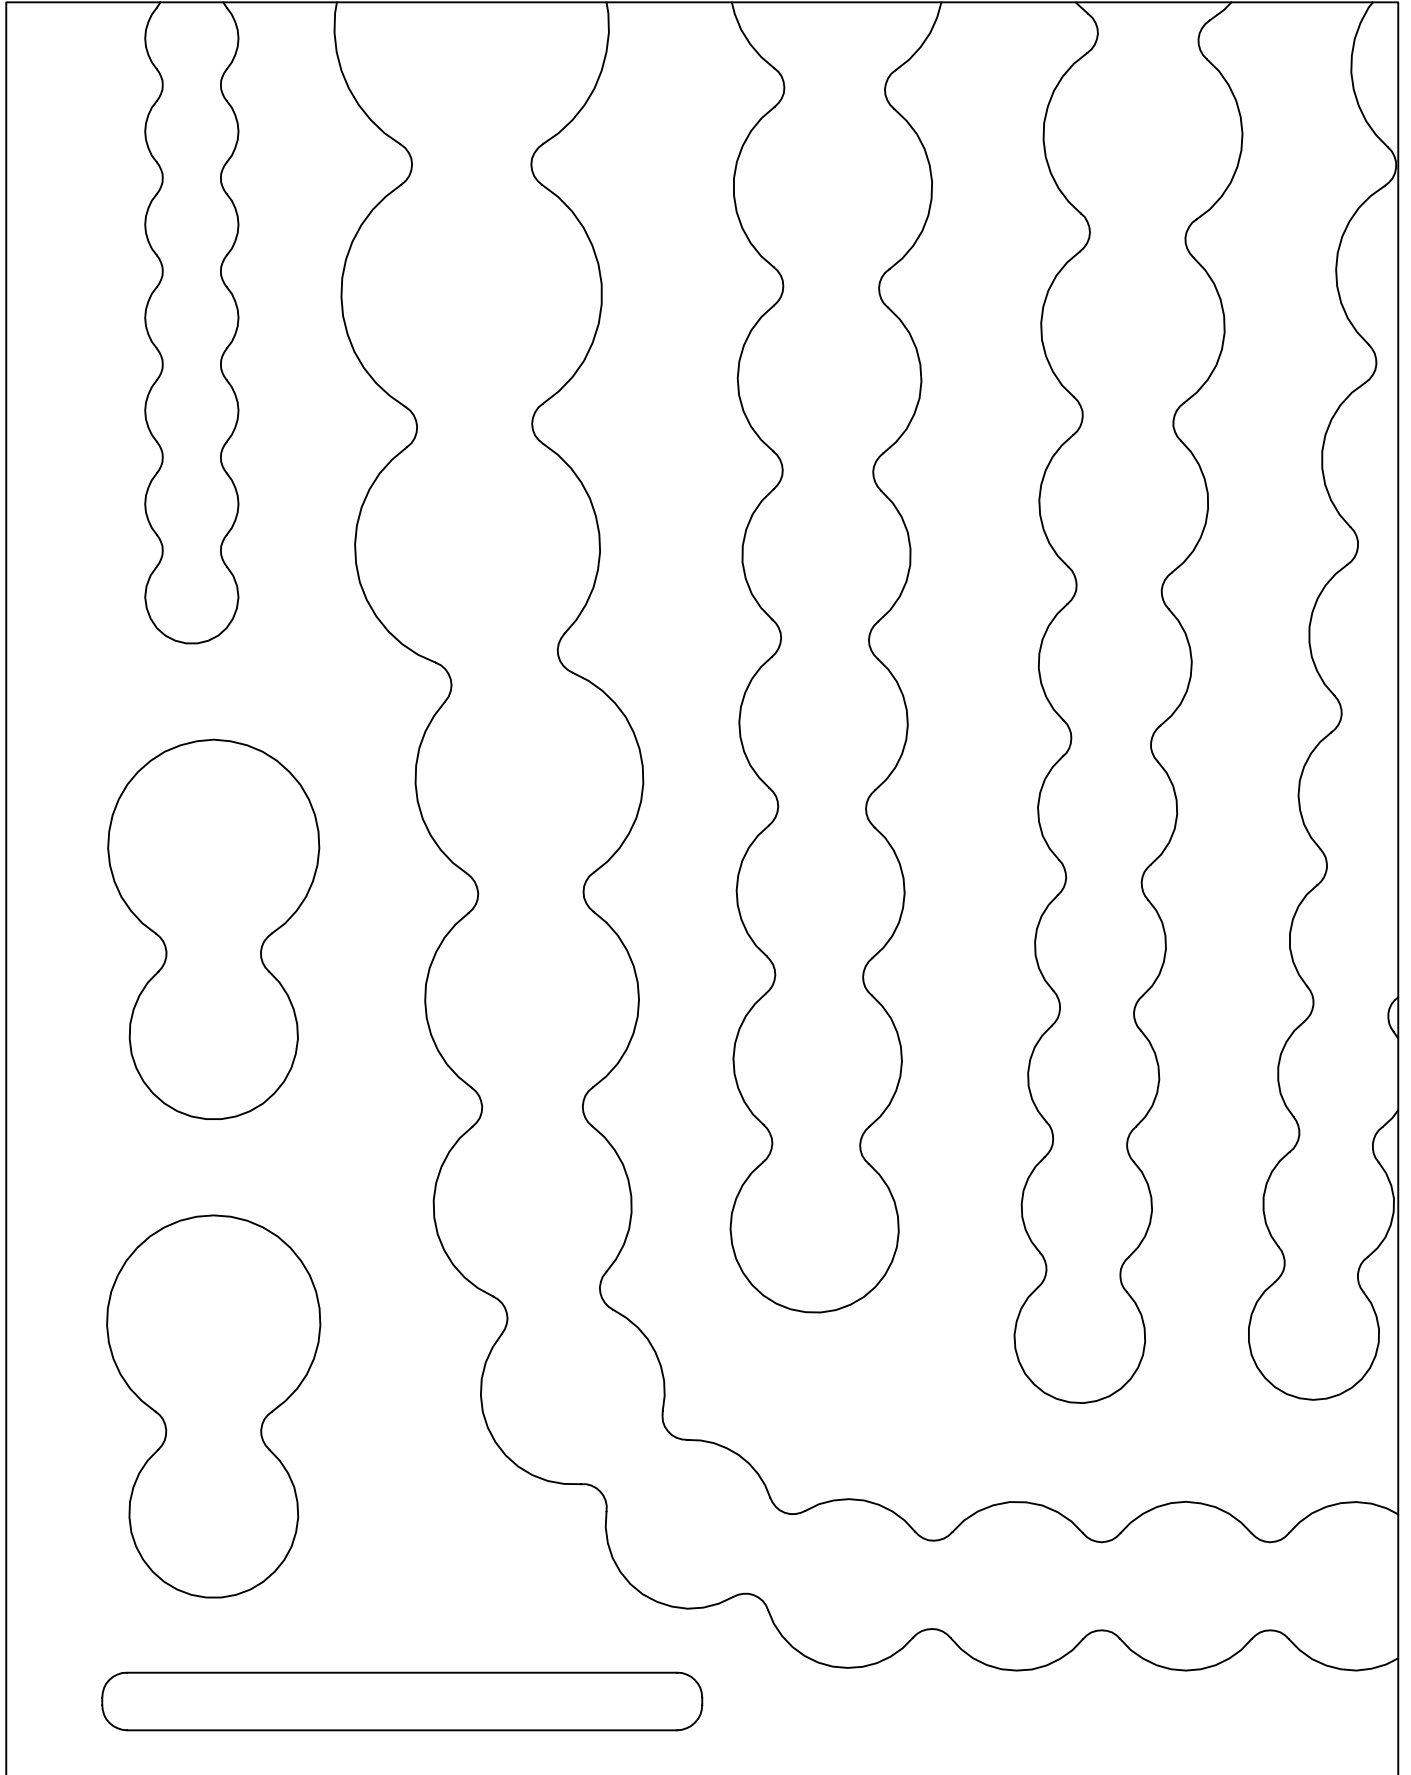

PART NUMBER

F-06533-T

PAGE (ROW-COLUMN)

1-1

Numbering starts
from the front
left corner.

DATE CREATED

 
20 JUL 2026

DATE REVISED

27 JUL 2026

FoamFit Tools

Print on Letter at 100%

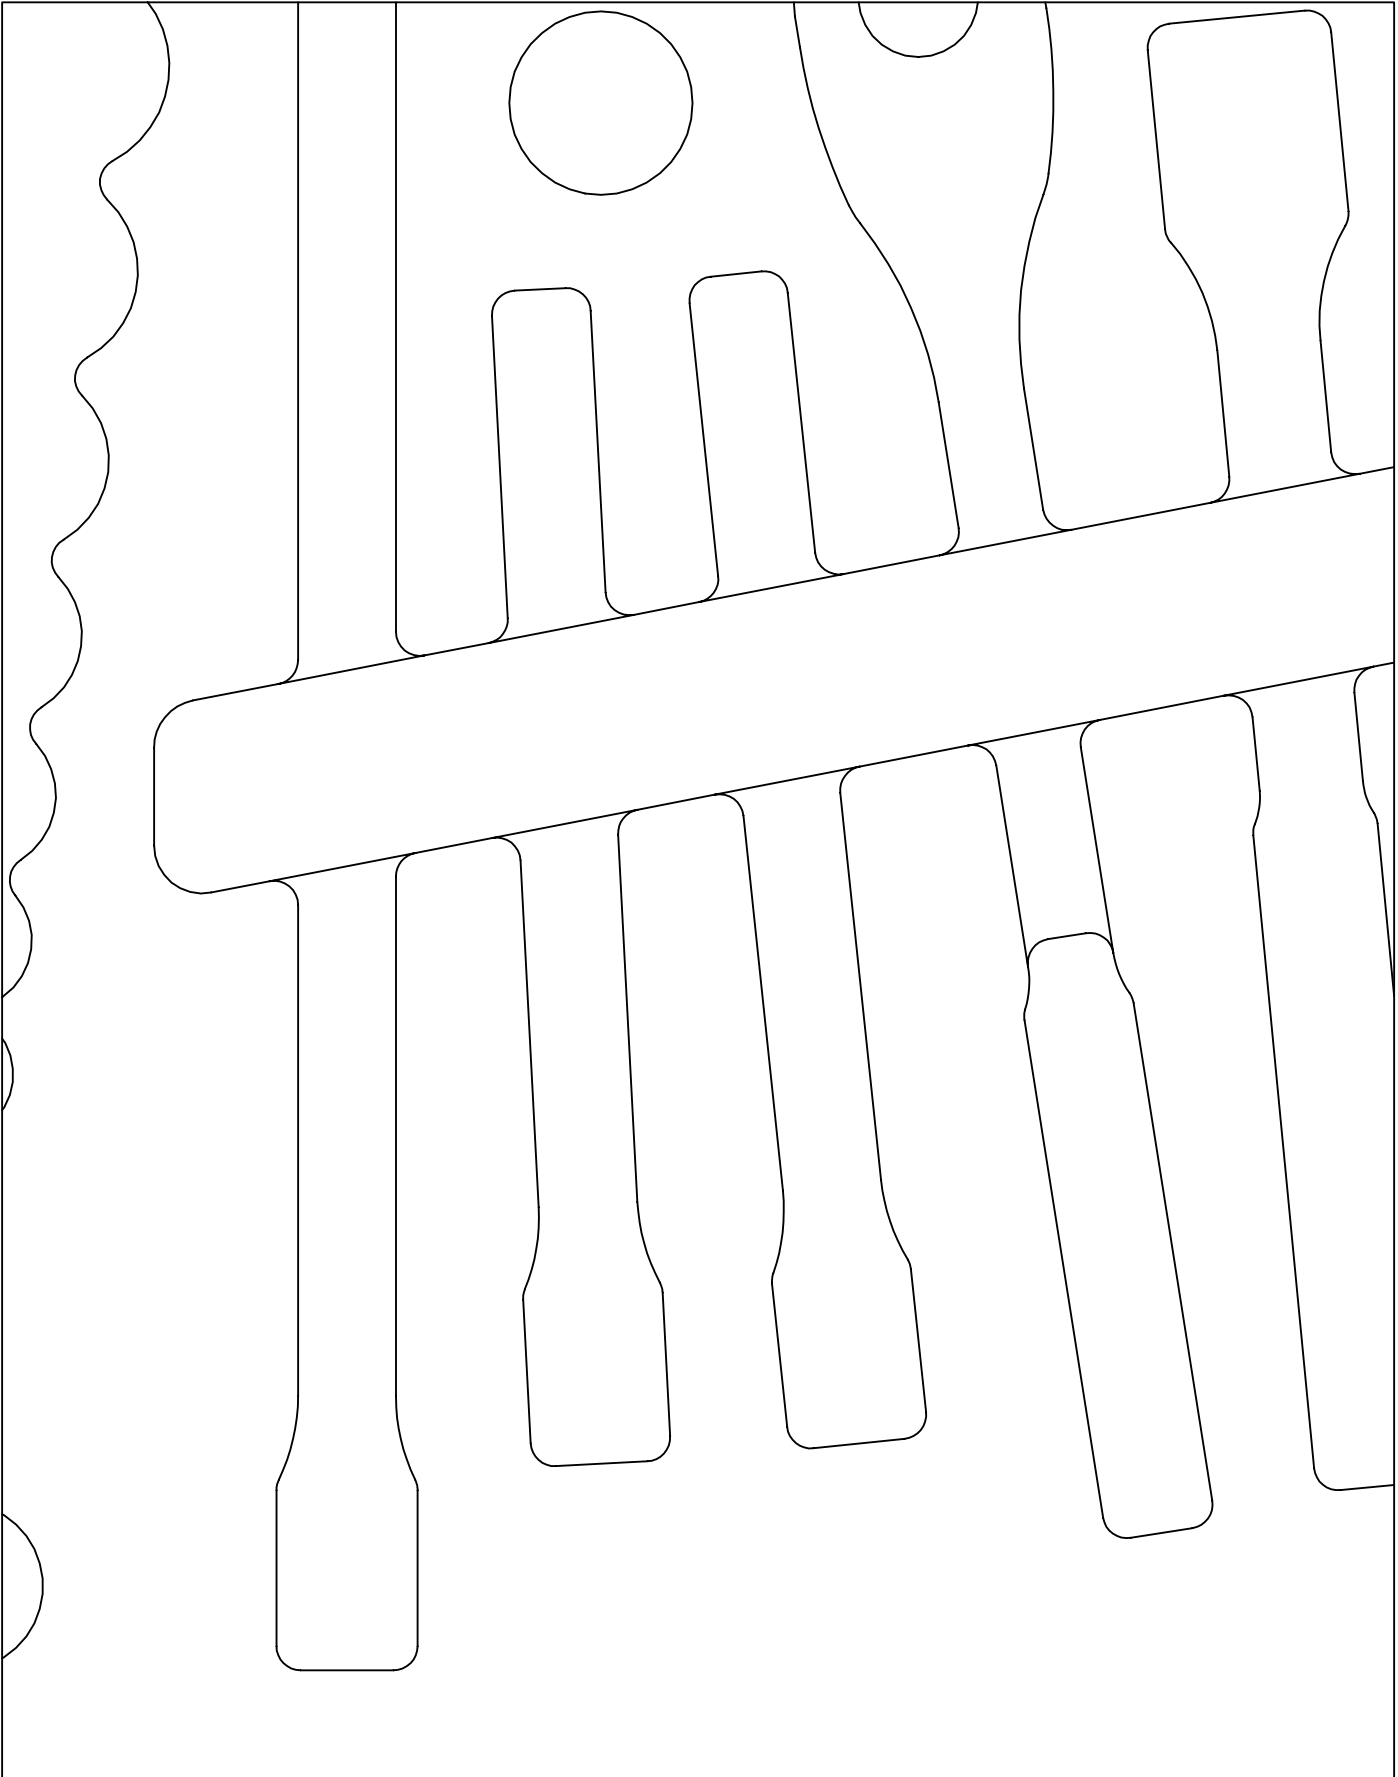

PART NUMBER

F-06533-T

PAGE (ROW-COLUMN)

1-2

Numbering starts
from the front
left corner.

DATE CREATED

 
20 JUL 2026

DATE REVISED

27 JUL 2026

FoamFit Tools

Print on Letter at 100%

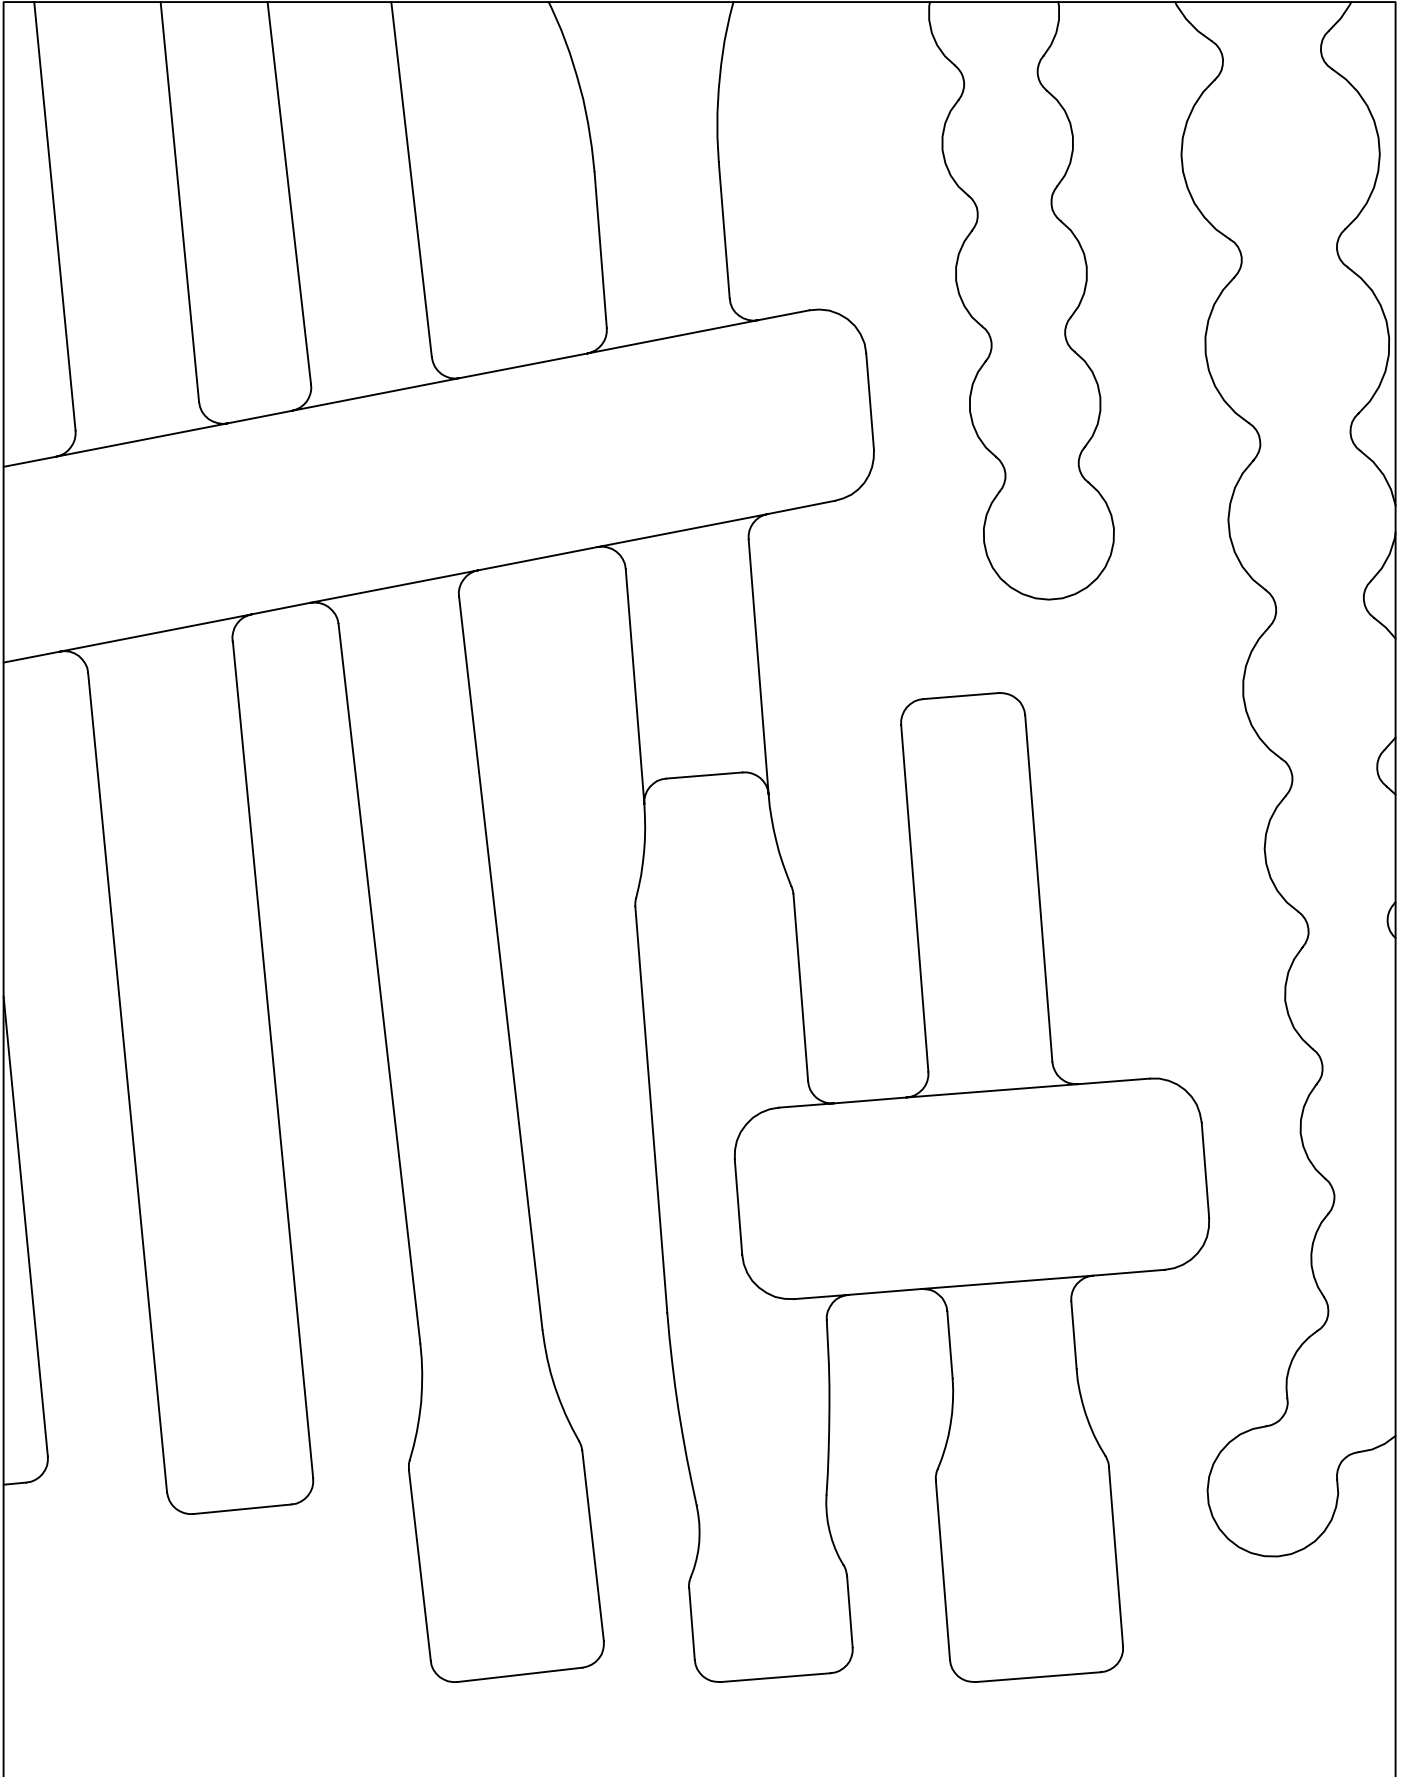

PART NUMBER

F-06533-T

PAGE (ROW-COLUMN)

1-3

Numbering starts
from the front
left corner.

DATE CREATED

 
20 JUL 2026

DATE REVISED

27 JUL 2026

FoamFit Tools

Print on Letter at 100%

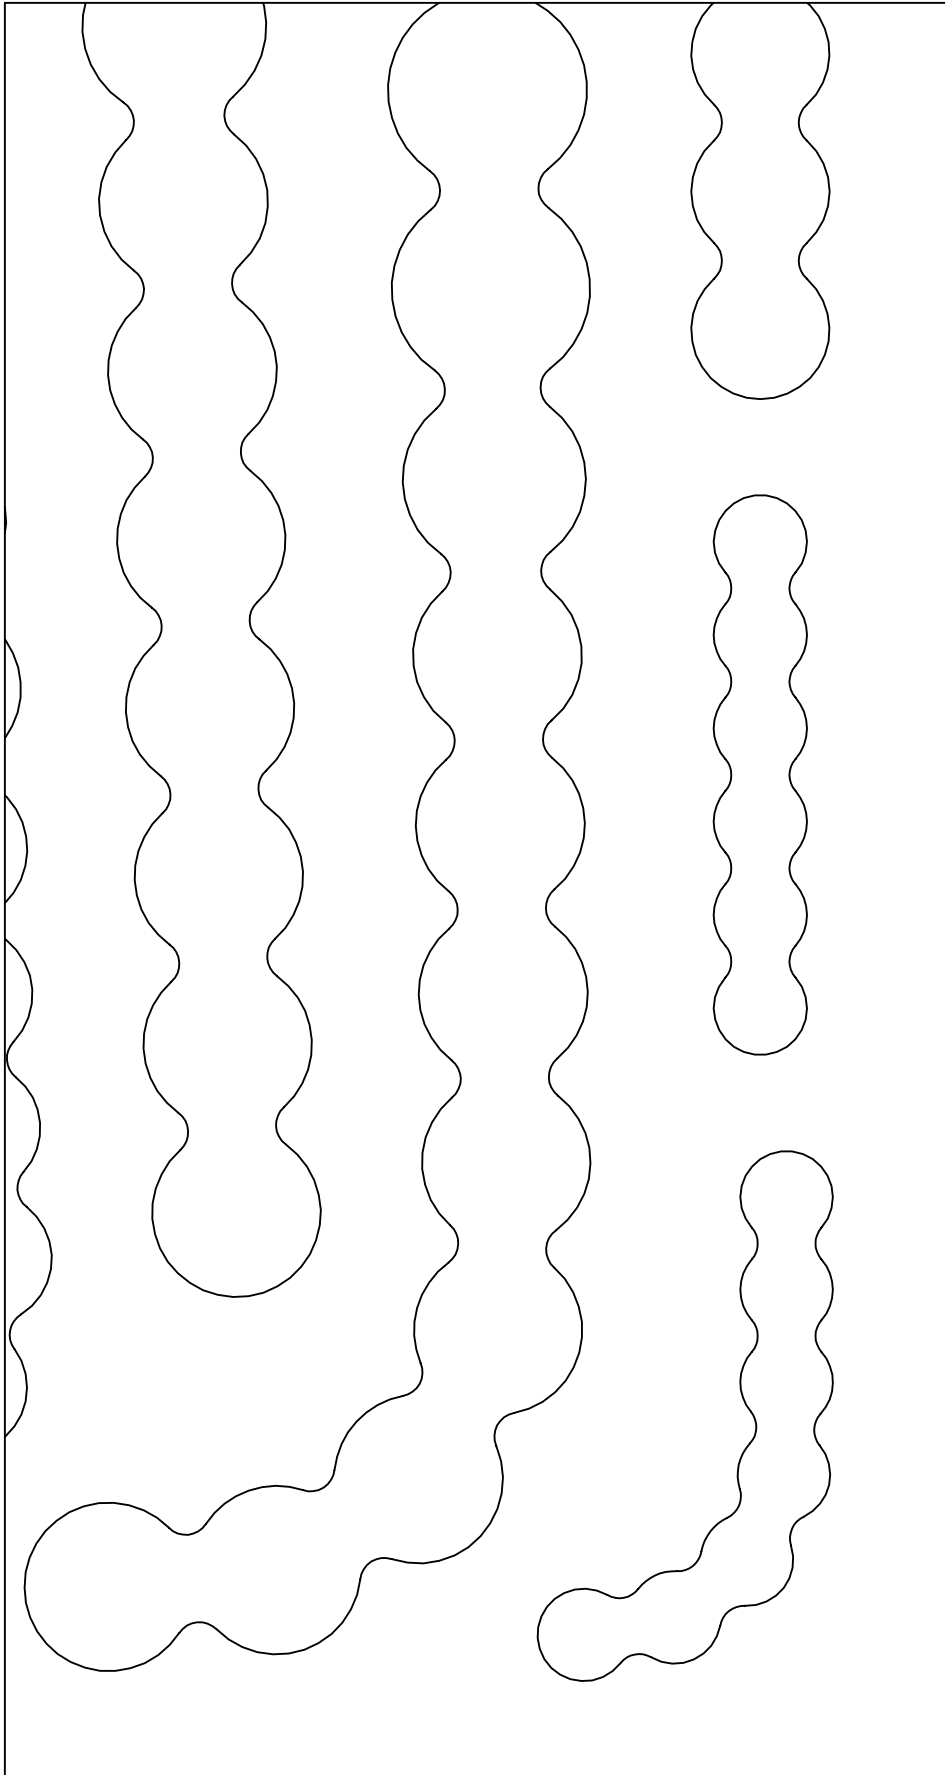

PART NUMBER

F-06533-T

PAGE (ROW-COLUMN)

1-4

Numbering starts
from the front
left corner.

DATE CREATED

 
20 JUL 2026

DATE REVISED

27 JUL 2026

FoamFit Tools

Print on Letter at 100%

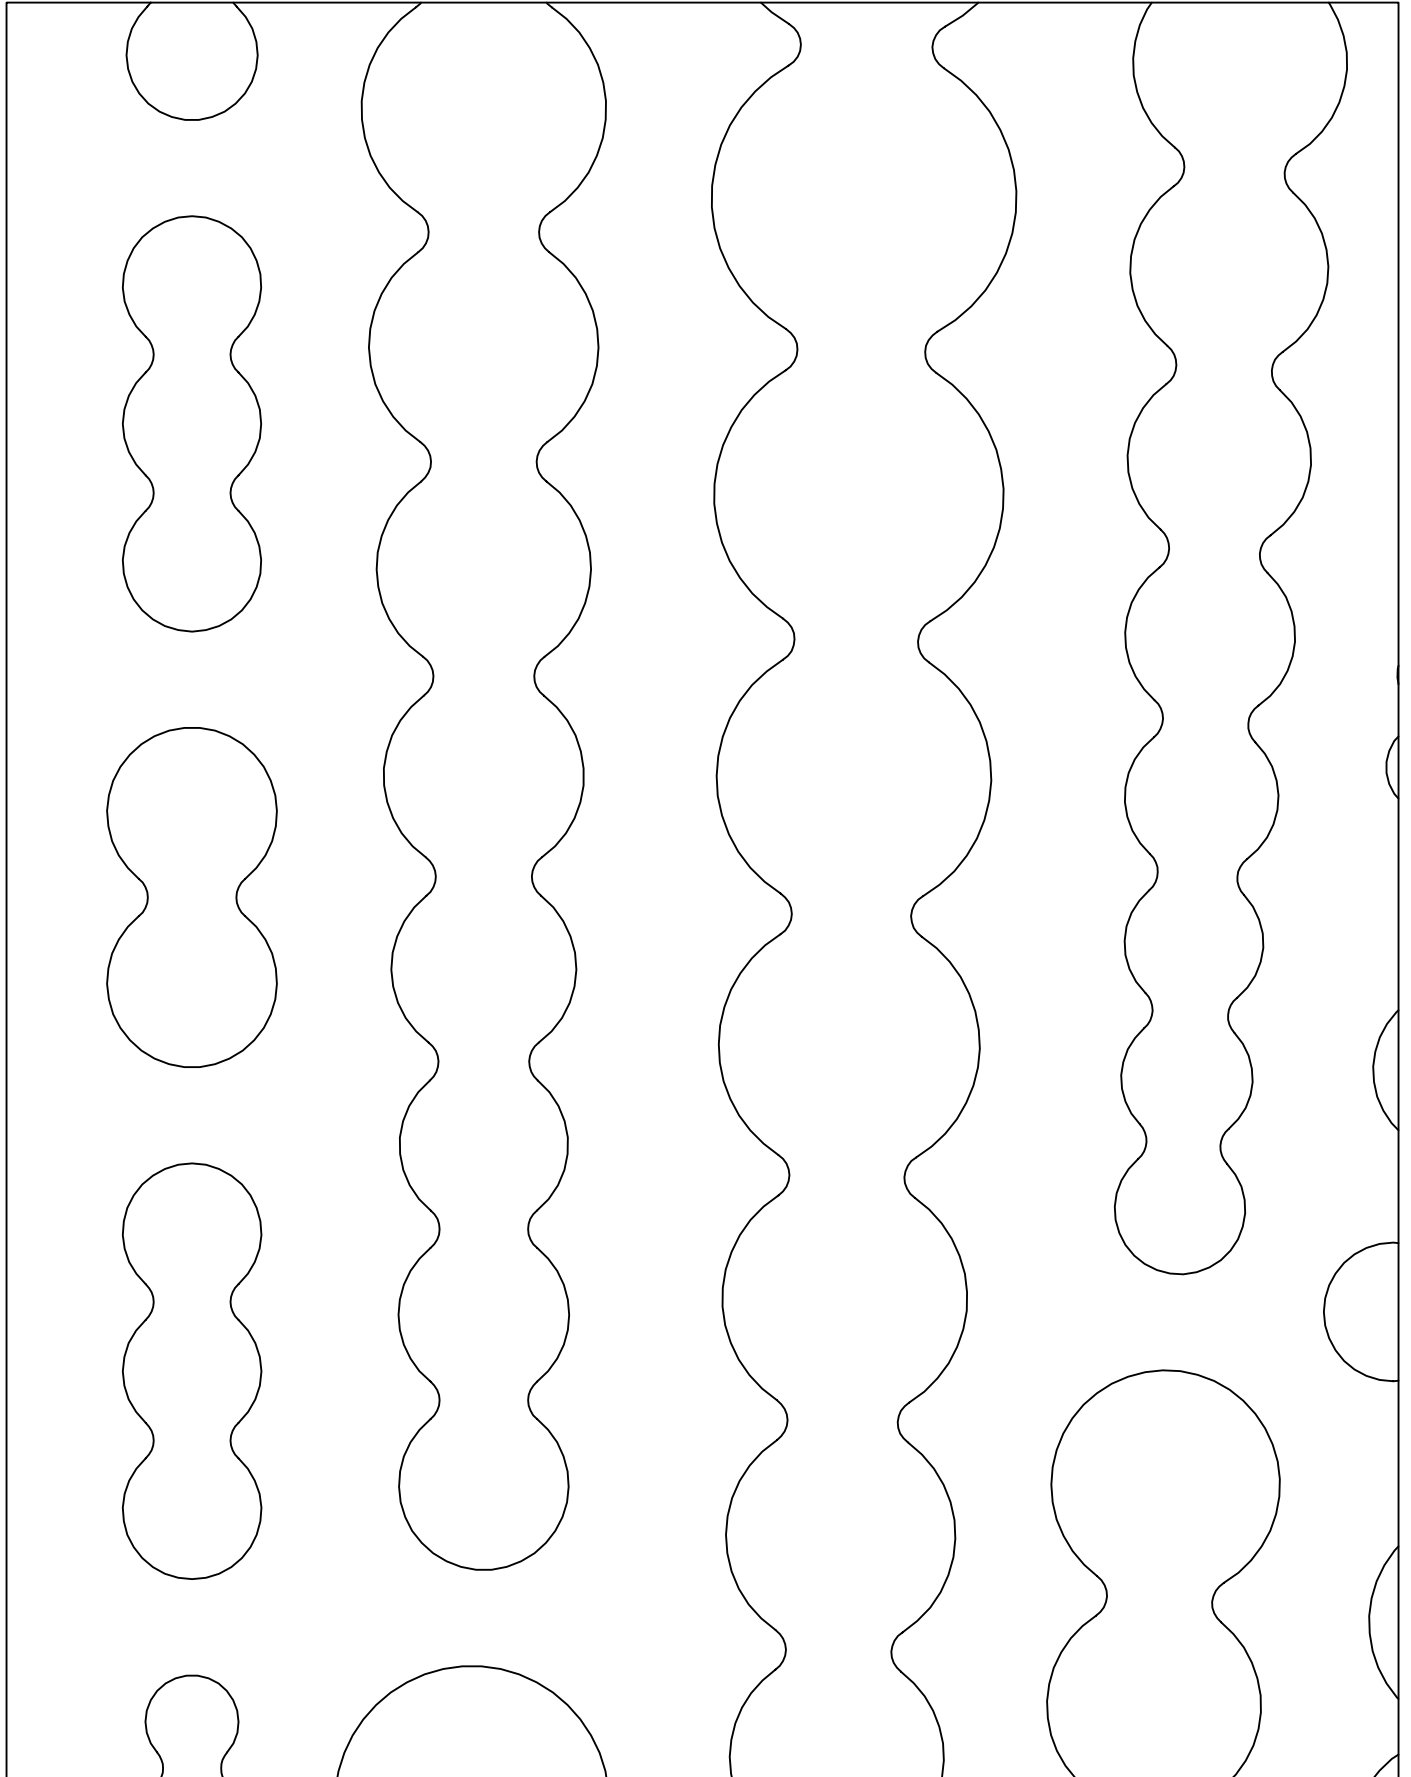

PART NUMBER

F-06533-T

PAGE (ROW-COLUMN)

2-1

Numbering starts
from the front
left corner.

DATE CREATED

 
20 JUL 2026

DATE REVISED

27 JUL 2026

FoamFit Tools

Print on Letter at 100%

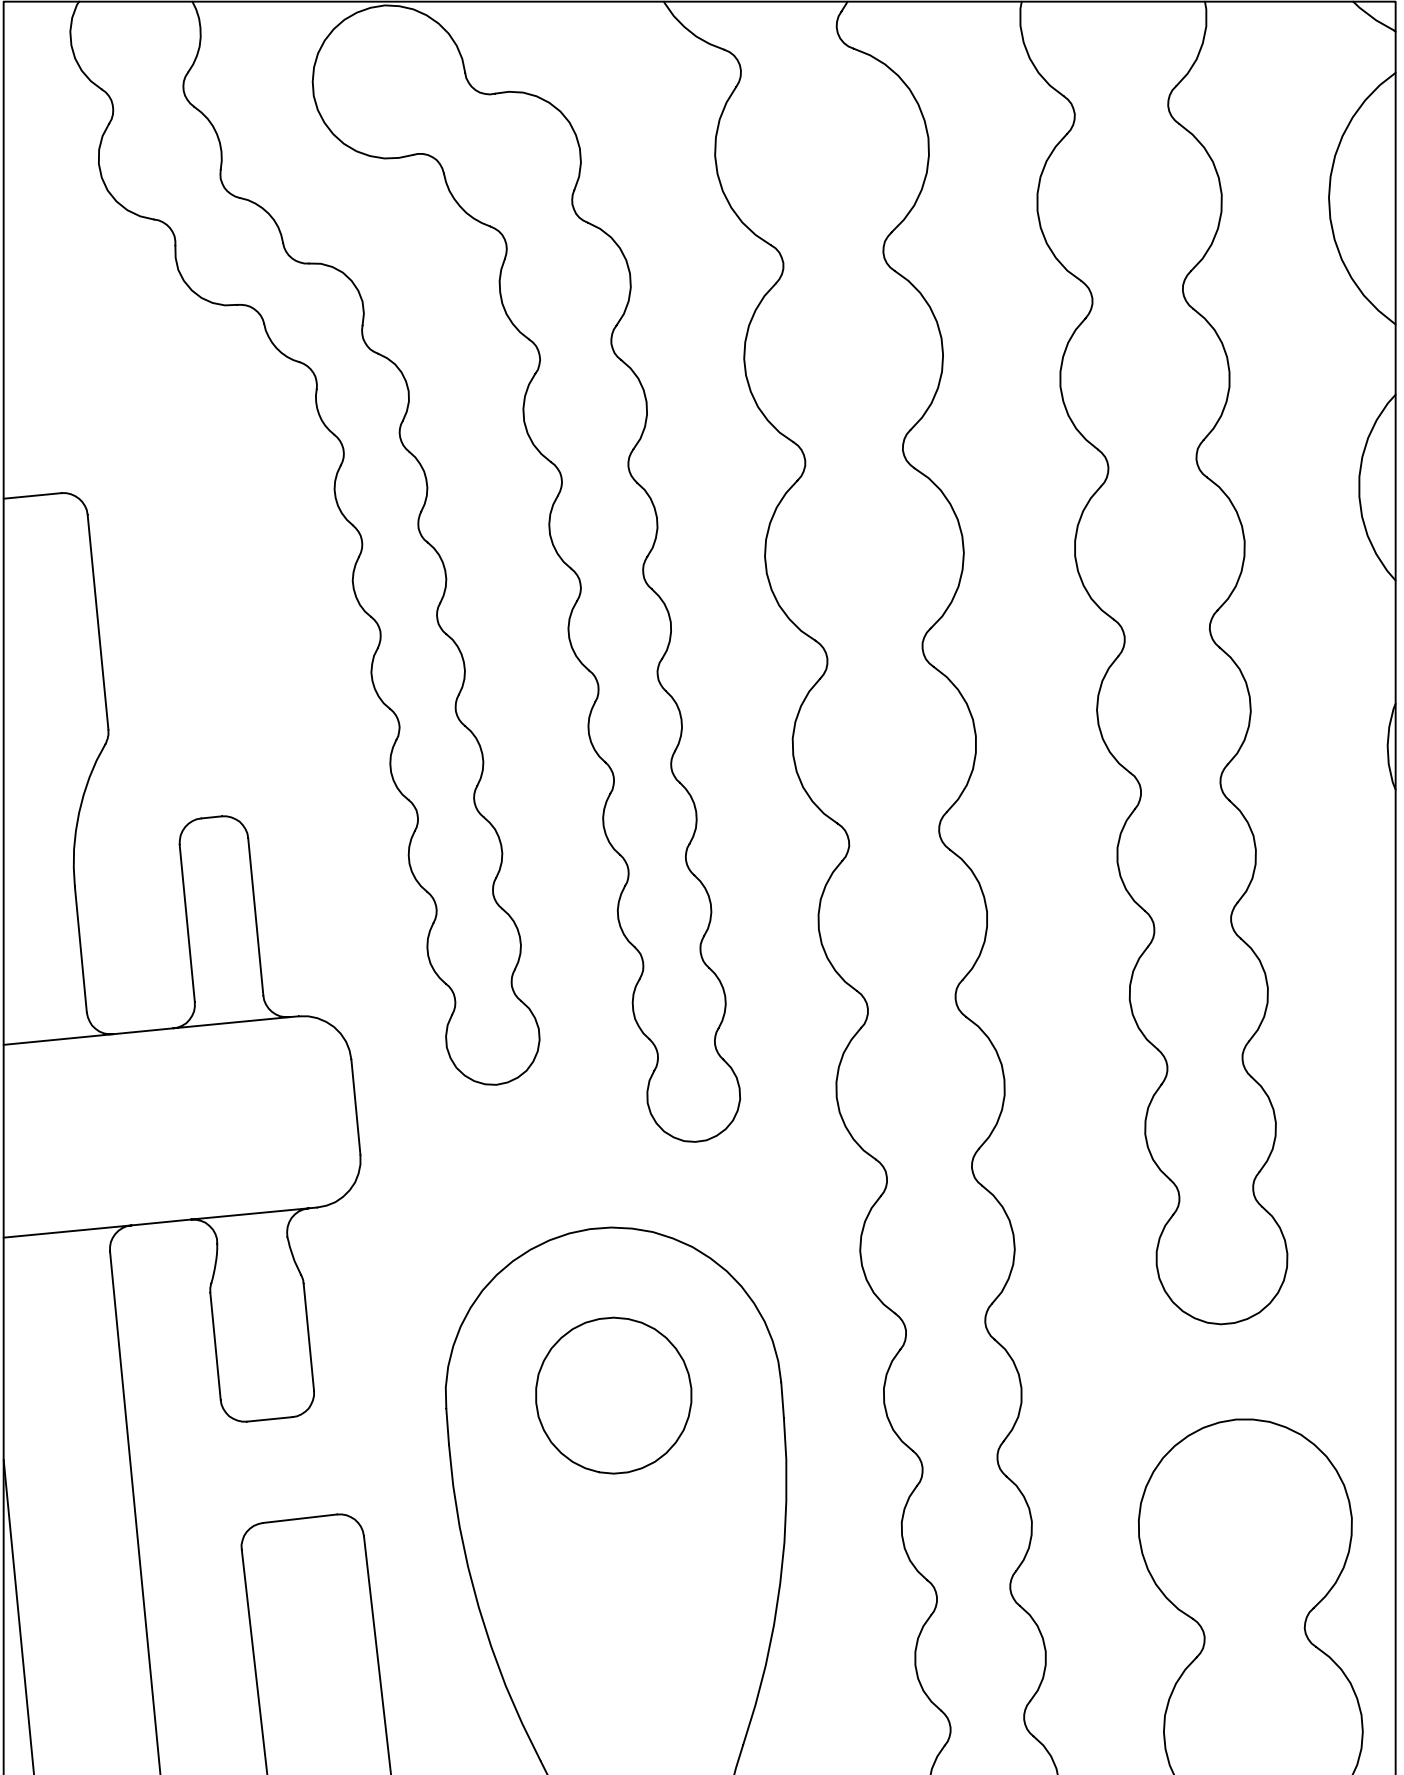

PART NUMBER

F-06533-T

PAGE (ROW-COLUMN)

2-3

Numbering starts
from the front
left corner.

DATE CREATED

 
20 JUL 2026

DATE REVISED

27 JUL 2026

FoamFit Tools

Print on Letter at 100%

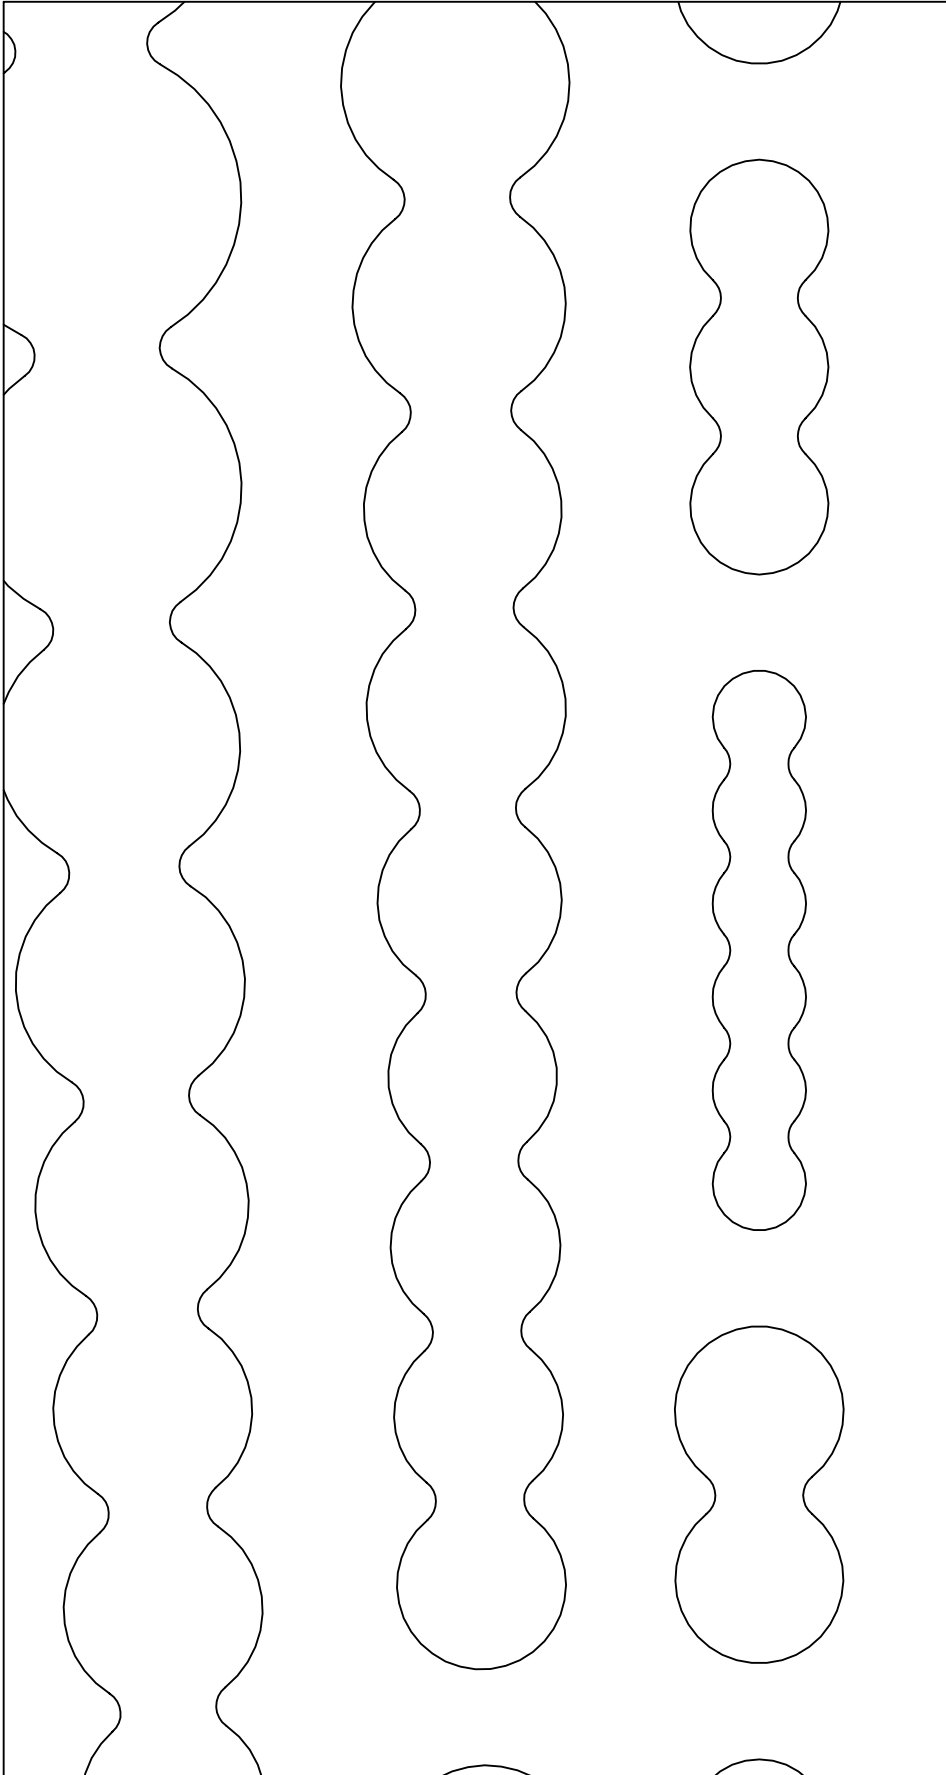

PART NUMBER

F-06533-T

PAGE (ROW-COLUMN)

2-4

Numbering starts
from the front
left corner.

DATE CREATED

 
20 JUL 2026

DATE REVISED

27 JUL 2026

FoamFit Tools

Print on Letter at 100%

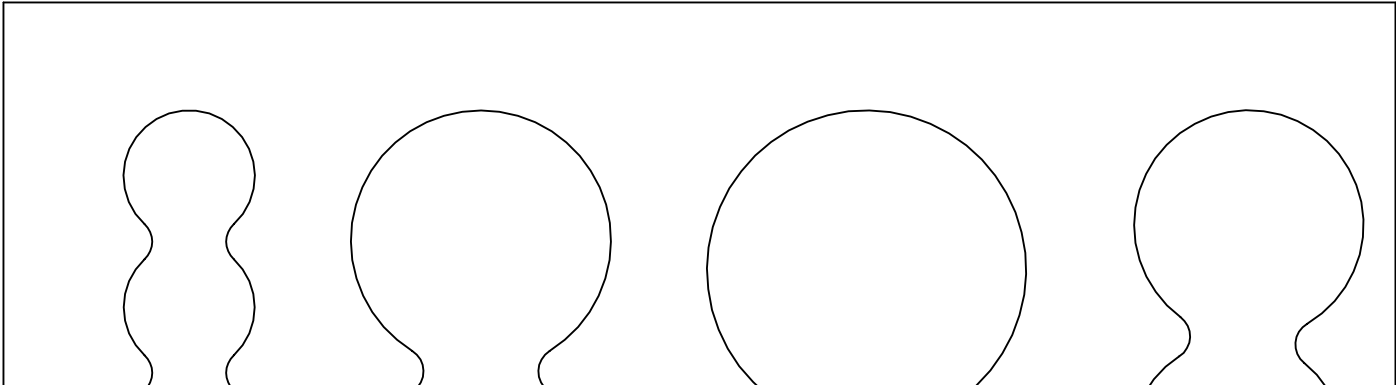

PART NUMBER

F-06533-T

PAGE (ROW-COLUMN)

3-1

Numbering starts
from the front
left corner.

DATE CREATED

 
20 JUL 2026

DATE REVISED

27 JUL 2026

FoamFit Tools

Print on Letter at 100%

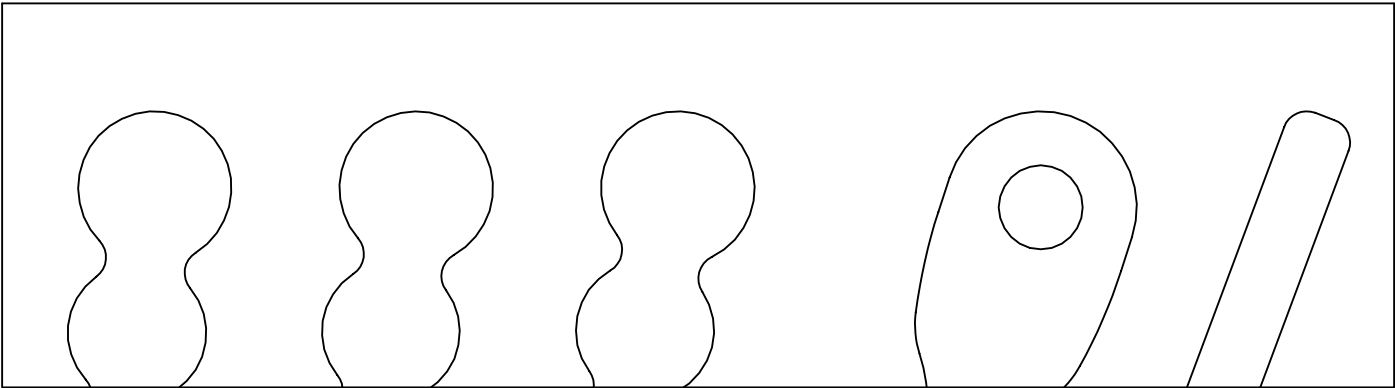

PART NUMBER

F-06533-T

PAGE (ROW-COLUMN)

3-2

Numbering starts
from the front
left corner.

DATE CREATED

 
20 JUL 2026

DATE REVISED

27 JUL 2026

FoamFit Tools

Print on Letter at 100%

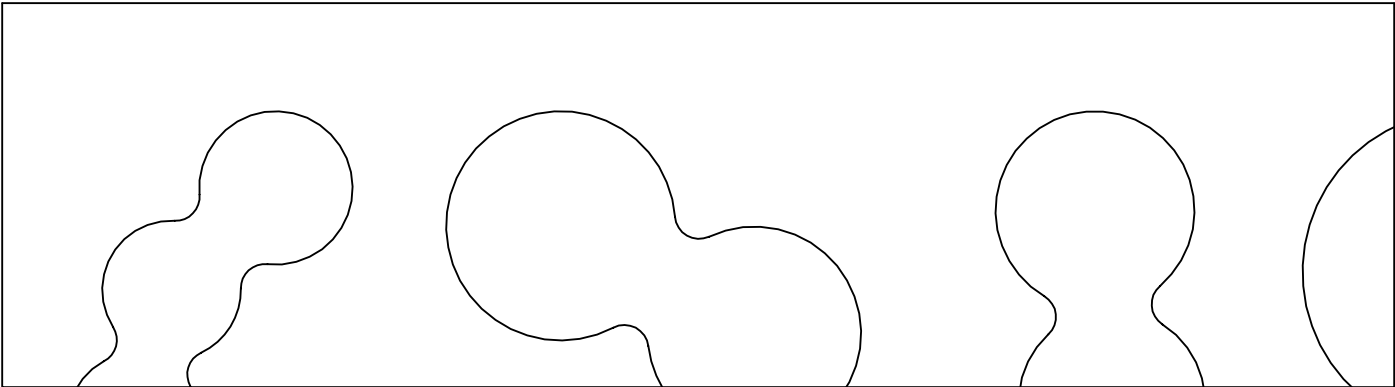

PART NUMBER

F-06533-T

PAGE (ROW-COLUMN)

3-3

Numbering starts
from the front
left corner.

DATE CREATED

 
20 JUL 2026

DATE REVISED

27 JUL 2026

FoamFit Tools

Print on Letter at 100%

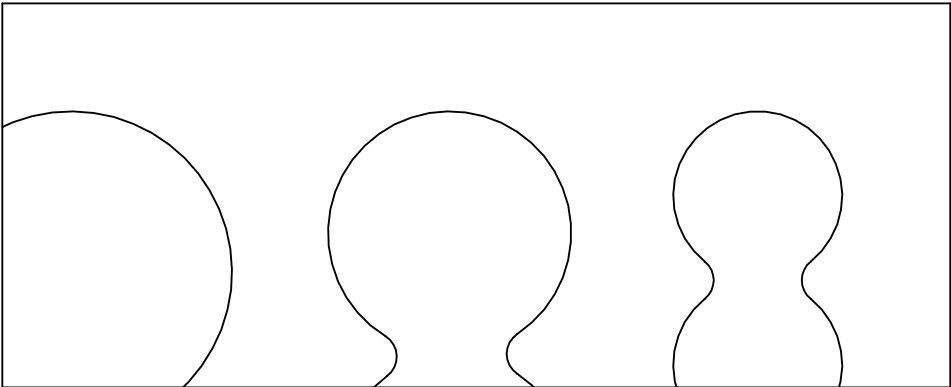

PART NUMBER

F-06533-T

PAGE (ROW-COLUMN)

3-4

Numbering starts
from the front
left corner.

DATE CREATED

20 JUL 2026

DATE REVISED

27 JUL 2026

FoamFit Tools

Print on Letter at 100%