


PRINTING INSTRUCTIONS

Print at full-scale and place tools over the paper to verify the fit.

Option 1: Print this page full-scale on a large-format printer (E-Size, 44 inches X 34 inches).

Option 2: Print page 3 - 21 on 8-1/2 X 11 inch paper and assemble.

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION.
Copyright 2020 FoamFit Tools

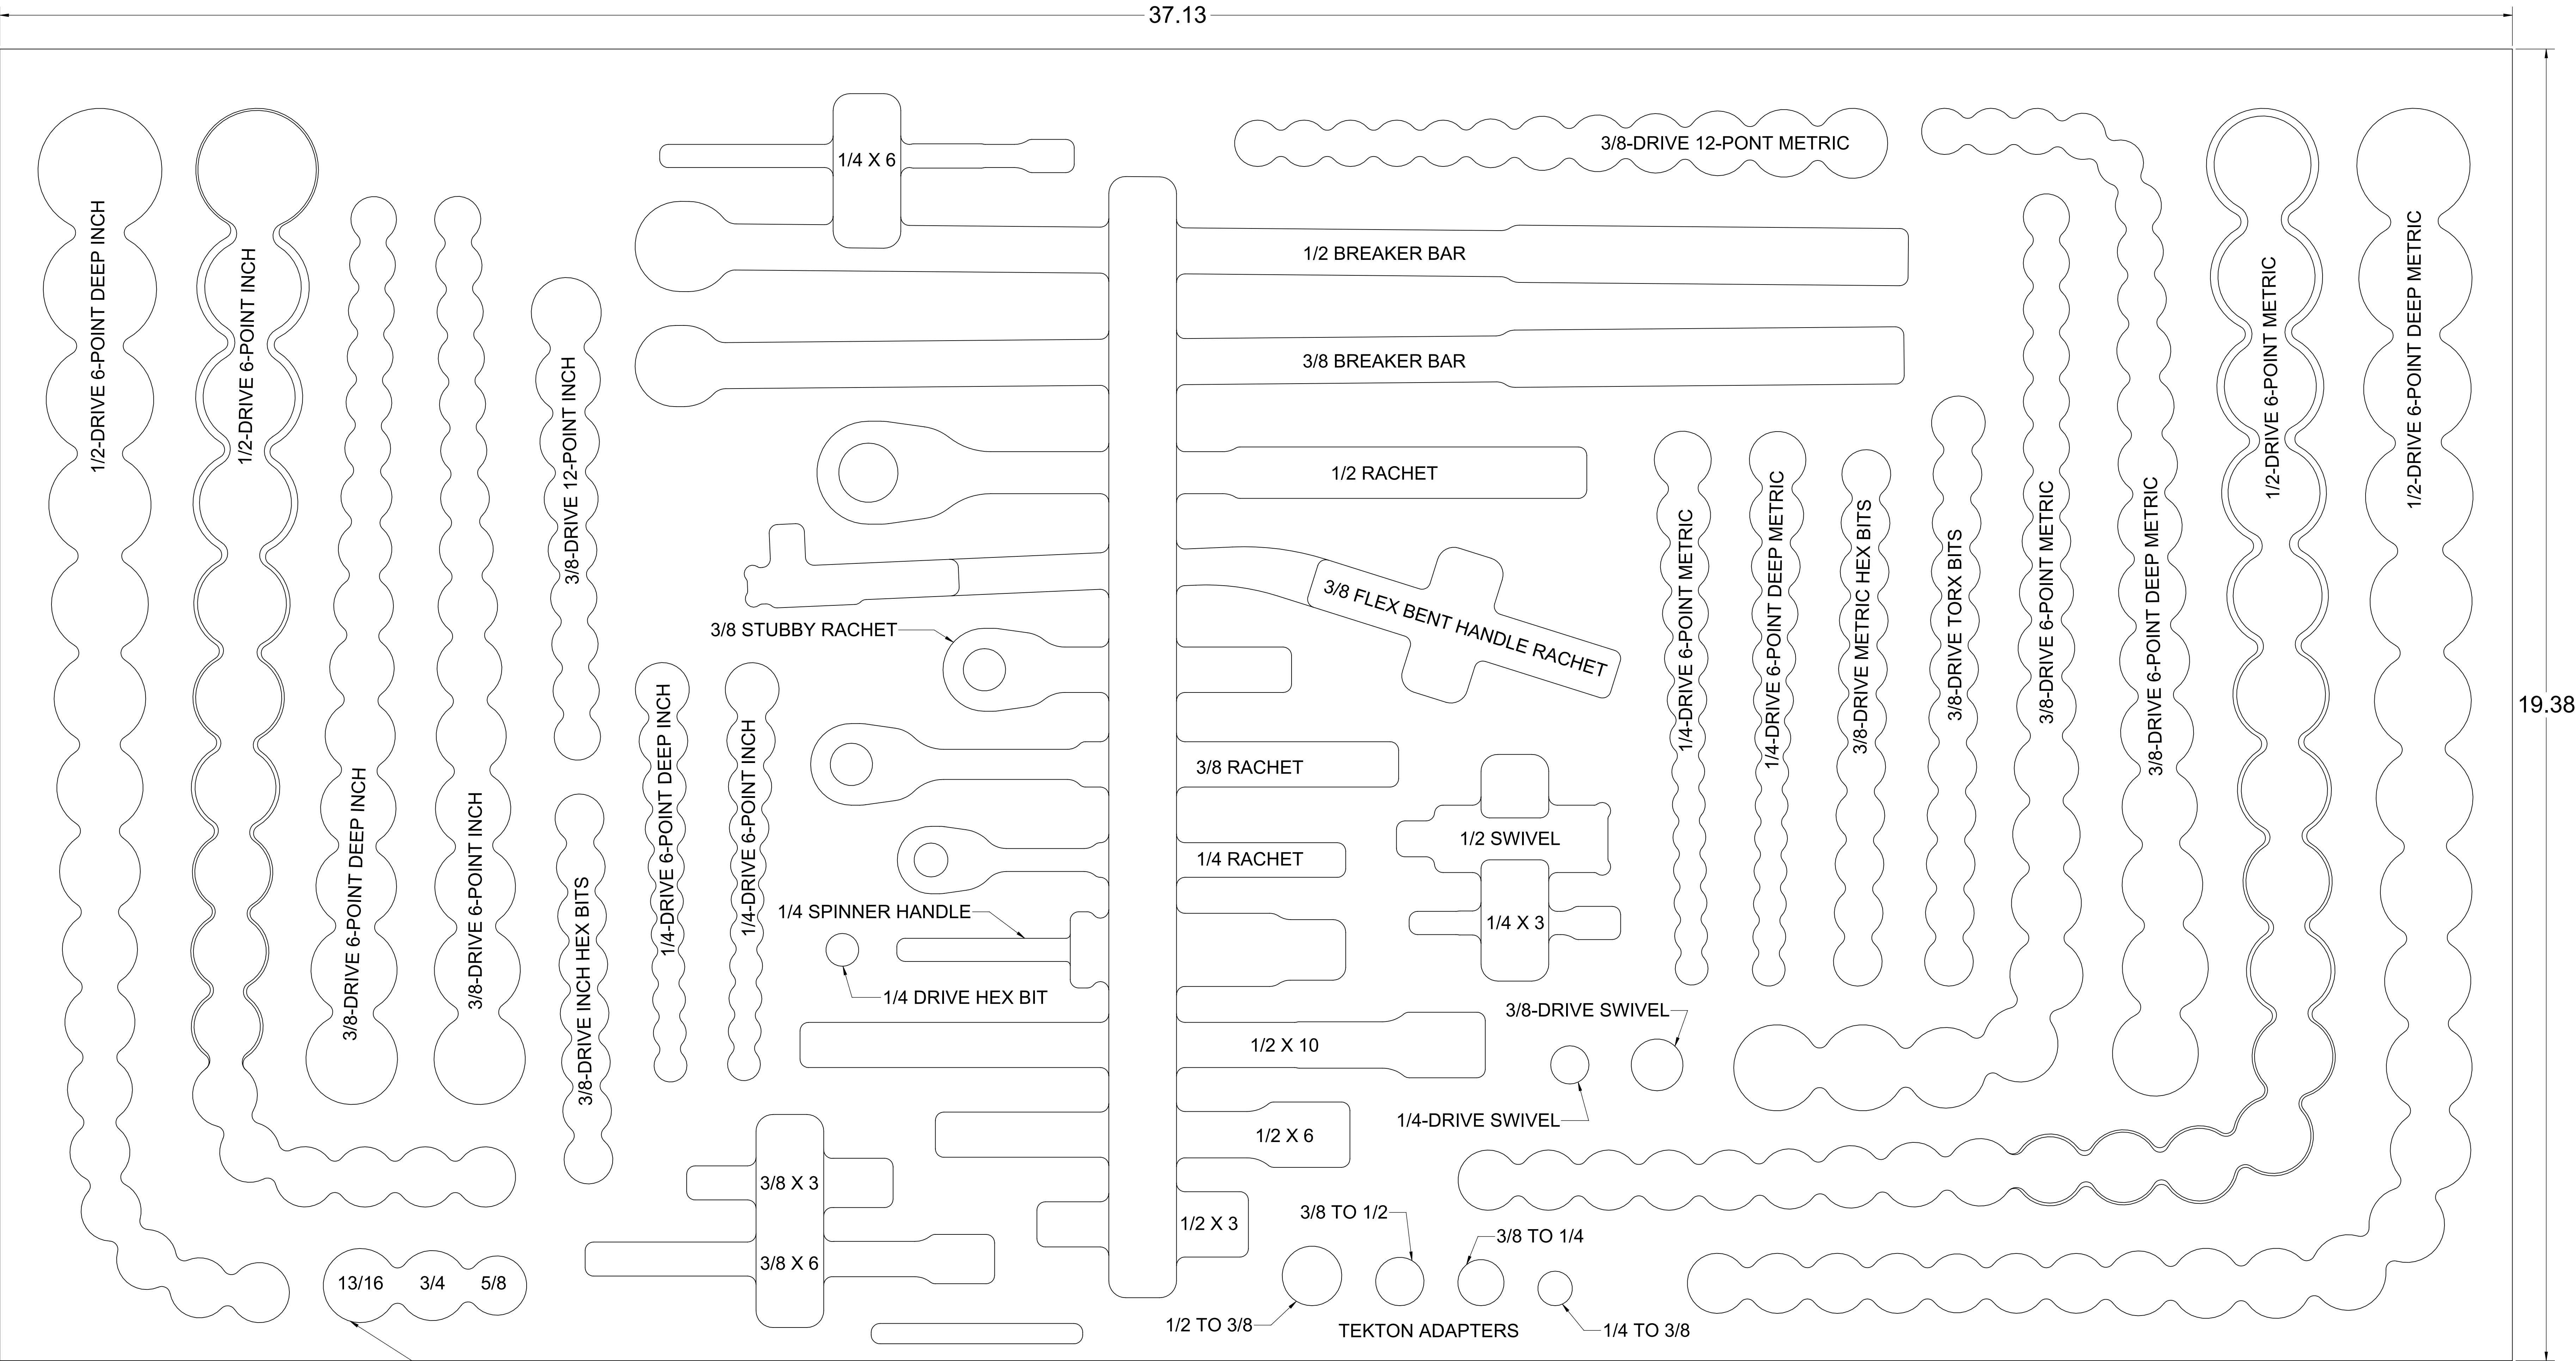 

CAUTION
SUGGESTED DRAWER HEIGHT
3.5 MIN

APPROXIMATE TOP OF TALLEST TOOL

3.25

(1.25)


PRINTING INSTRUCTIONS


Print at full-scale and place tools over the paper to verify the fit.

Option 1: Print this page full-scale on a large-format printer
(E-Size, 44 inches X 34 inches).

Option 2: Print page 2 - 21 on 8-1/2 X 11 inch paper and assemble.

  THE INFORMATION CONTAINED ON THIS DRAWING
IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND
MAY NOT BE USED WITHOUT PERMISSION.
Copyright 2020 FoamFit Tools

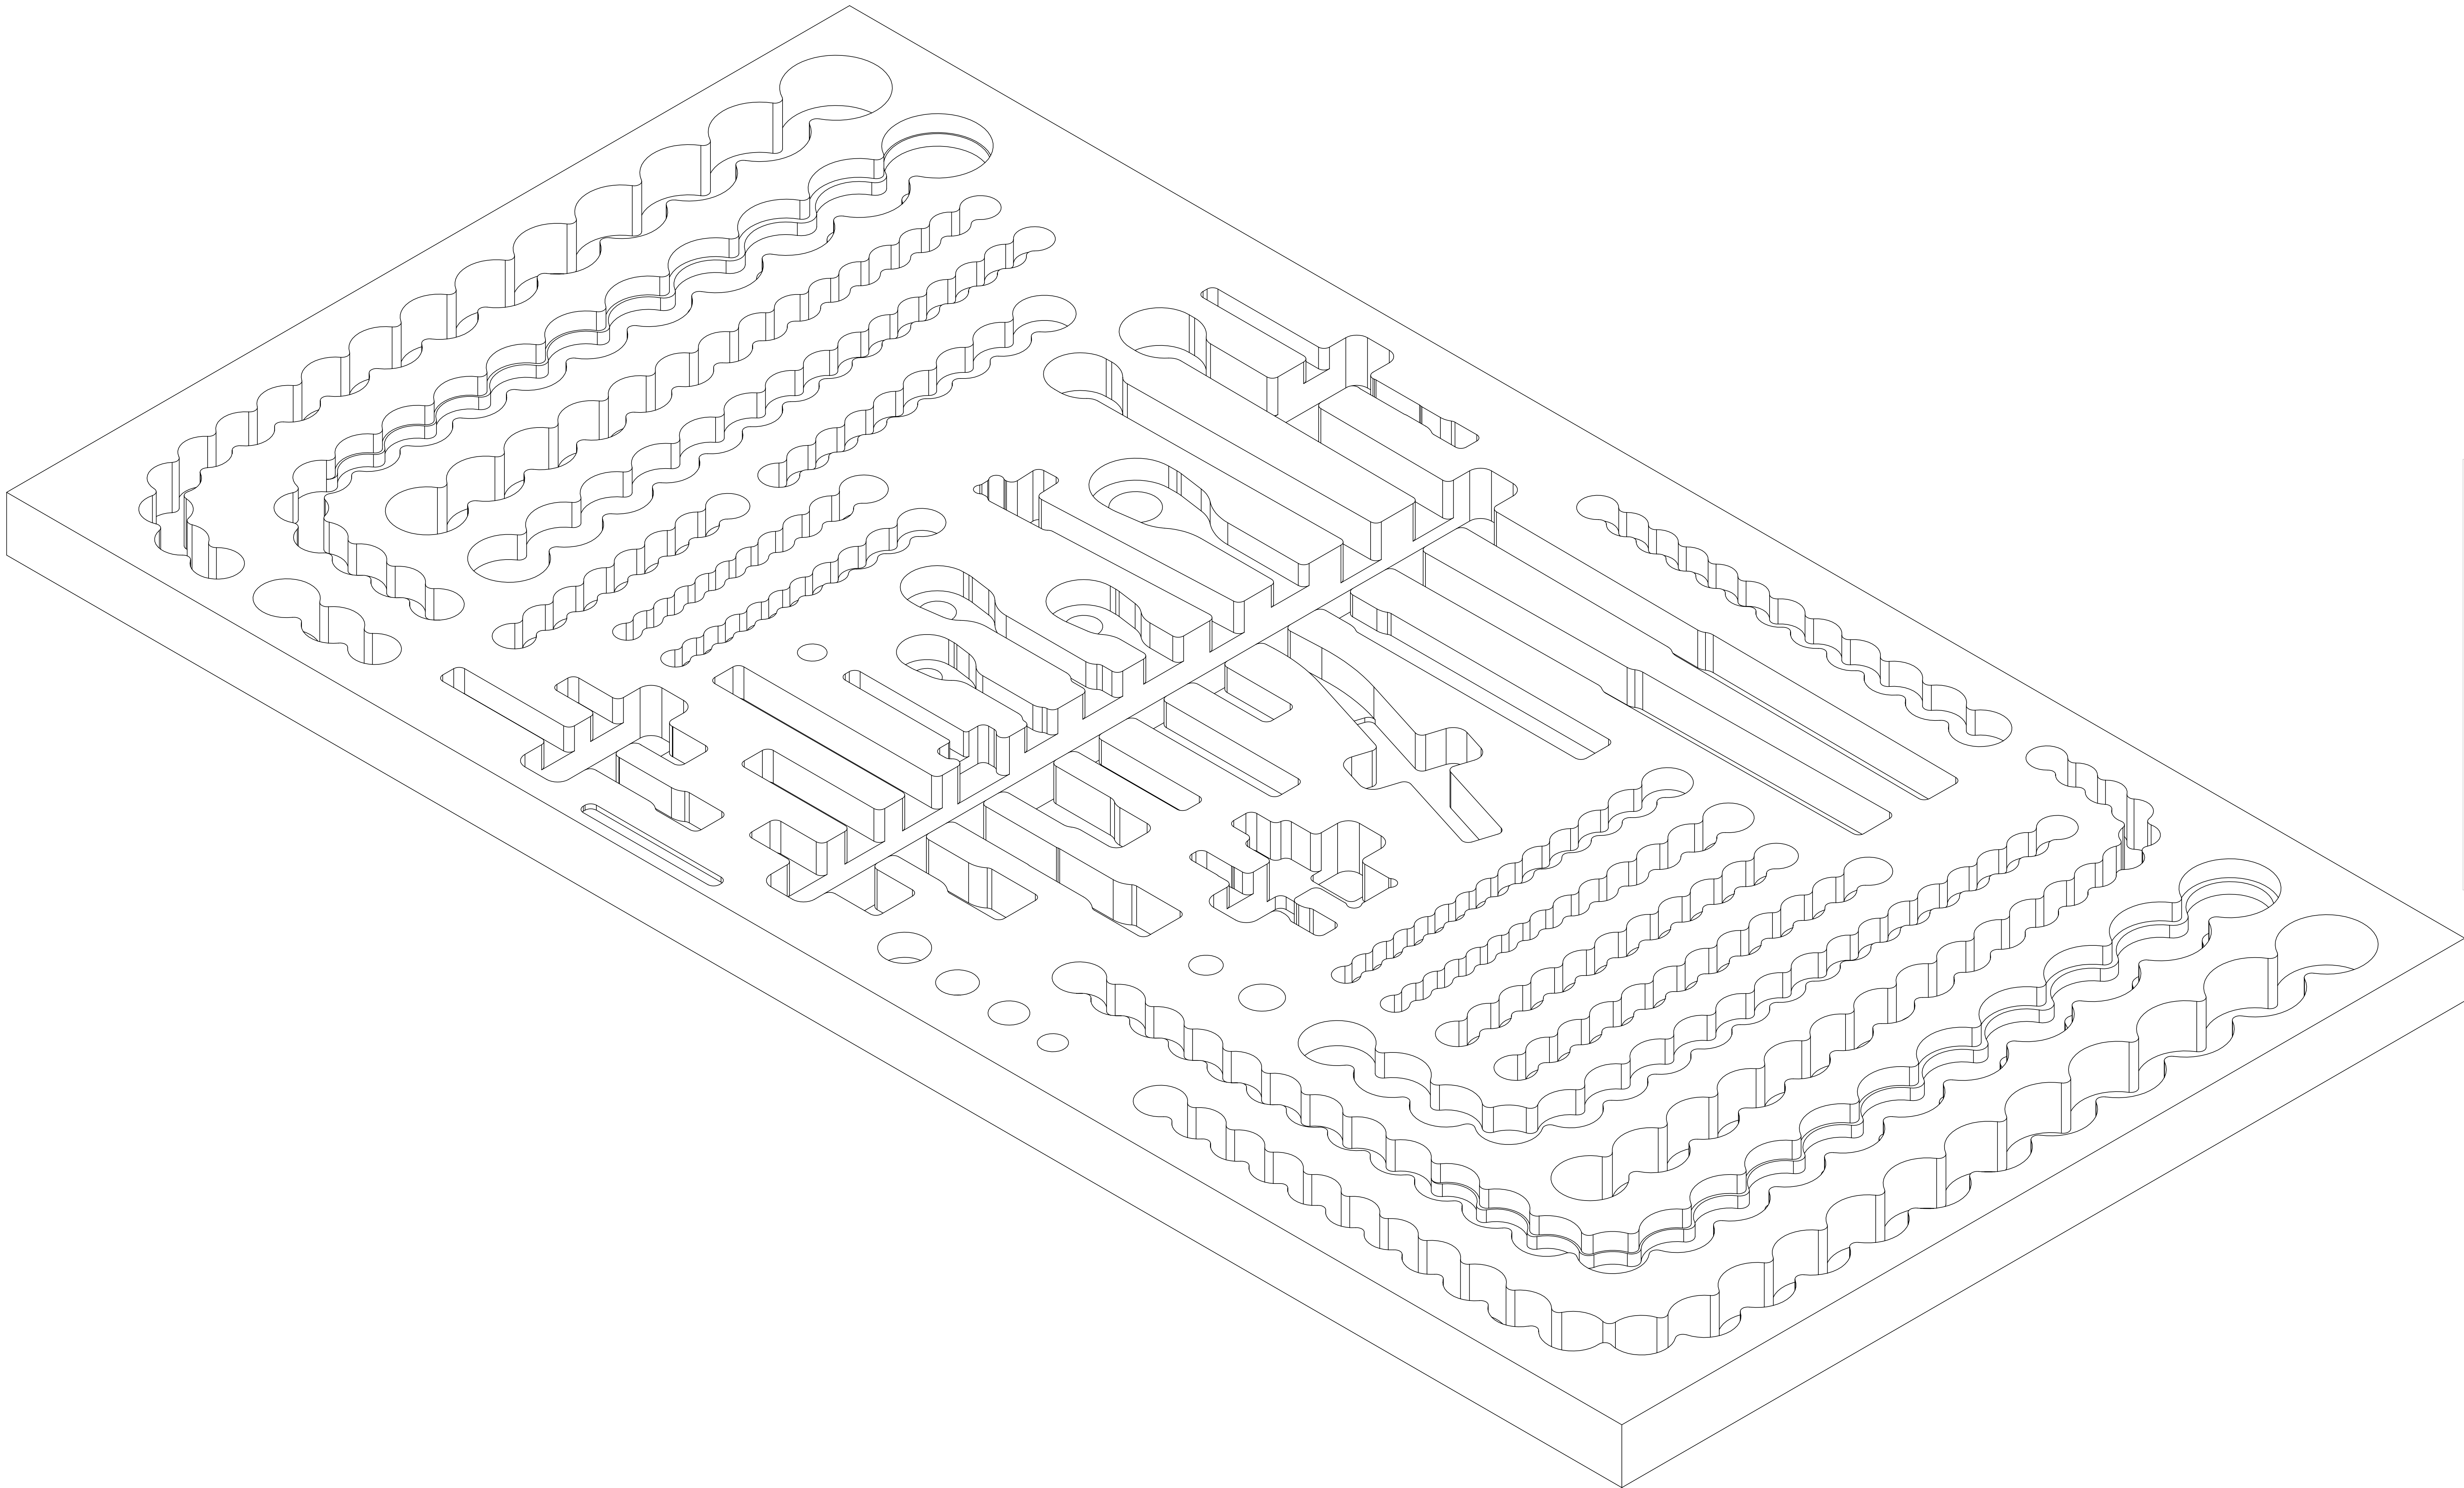

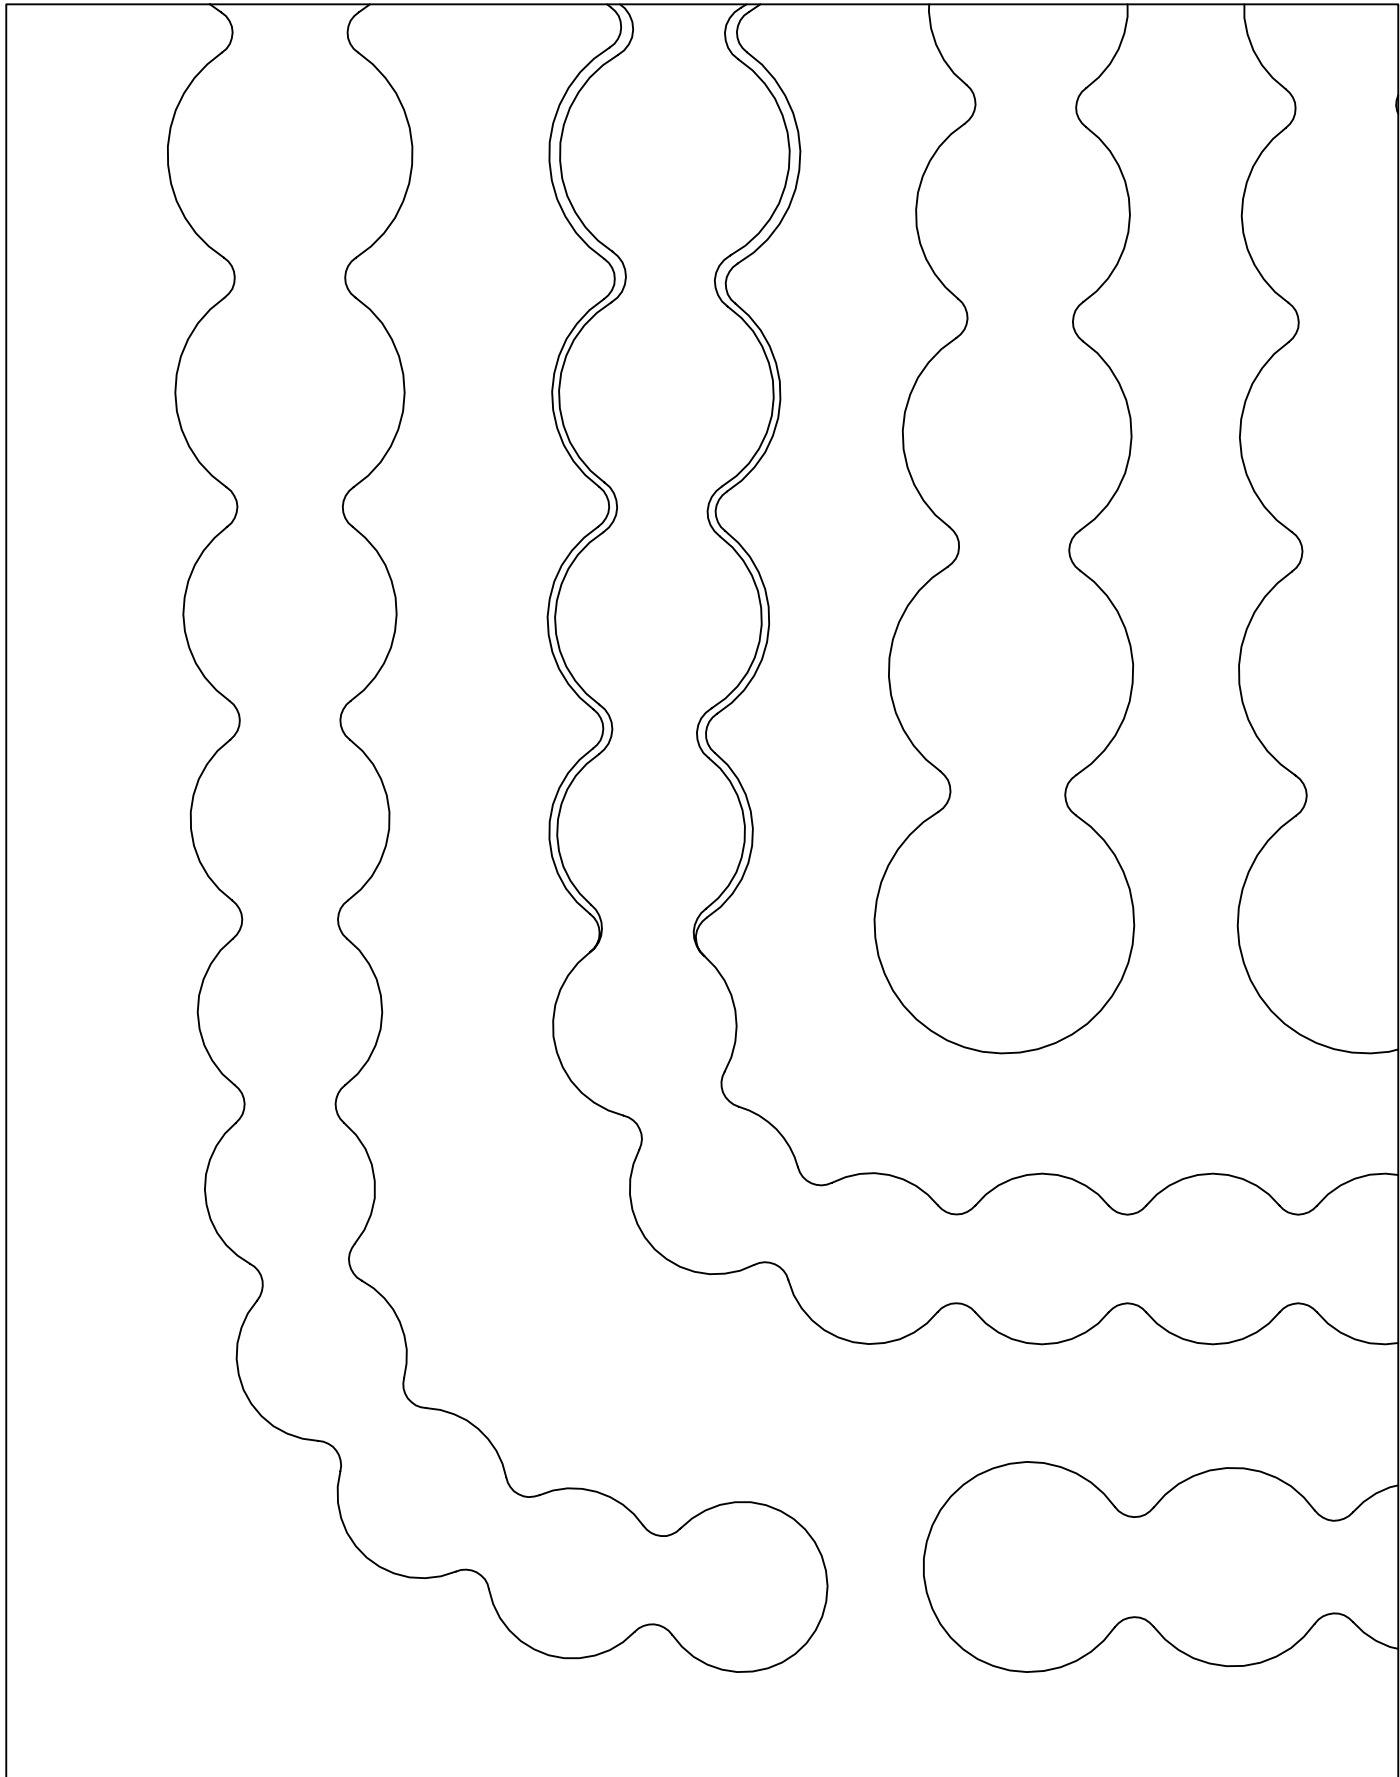

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

1-1

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%

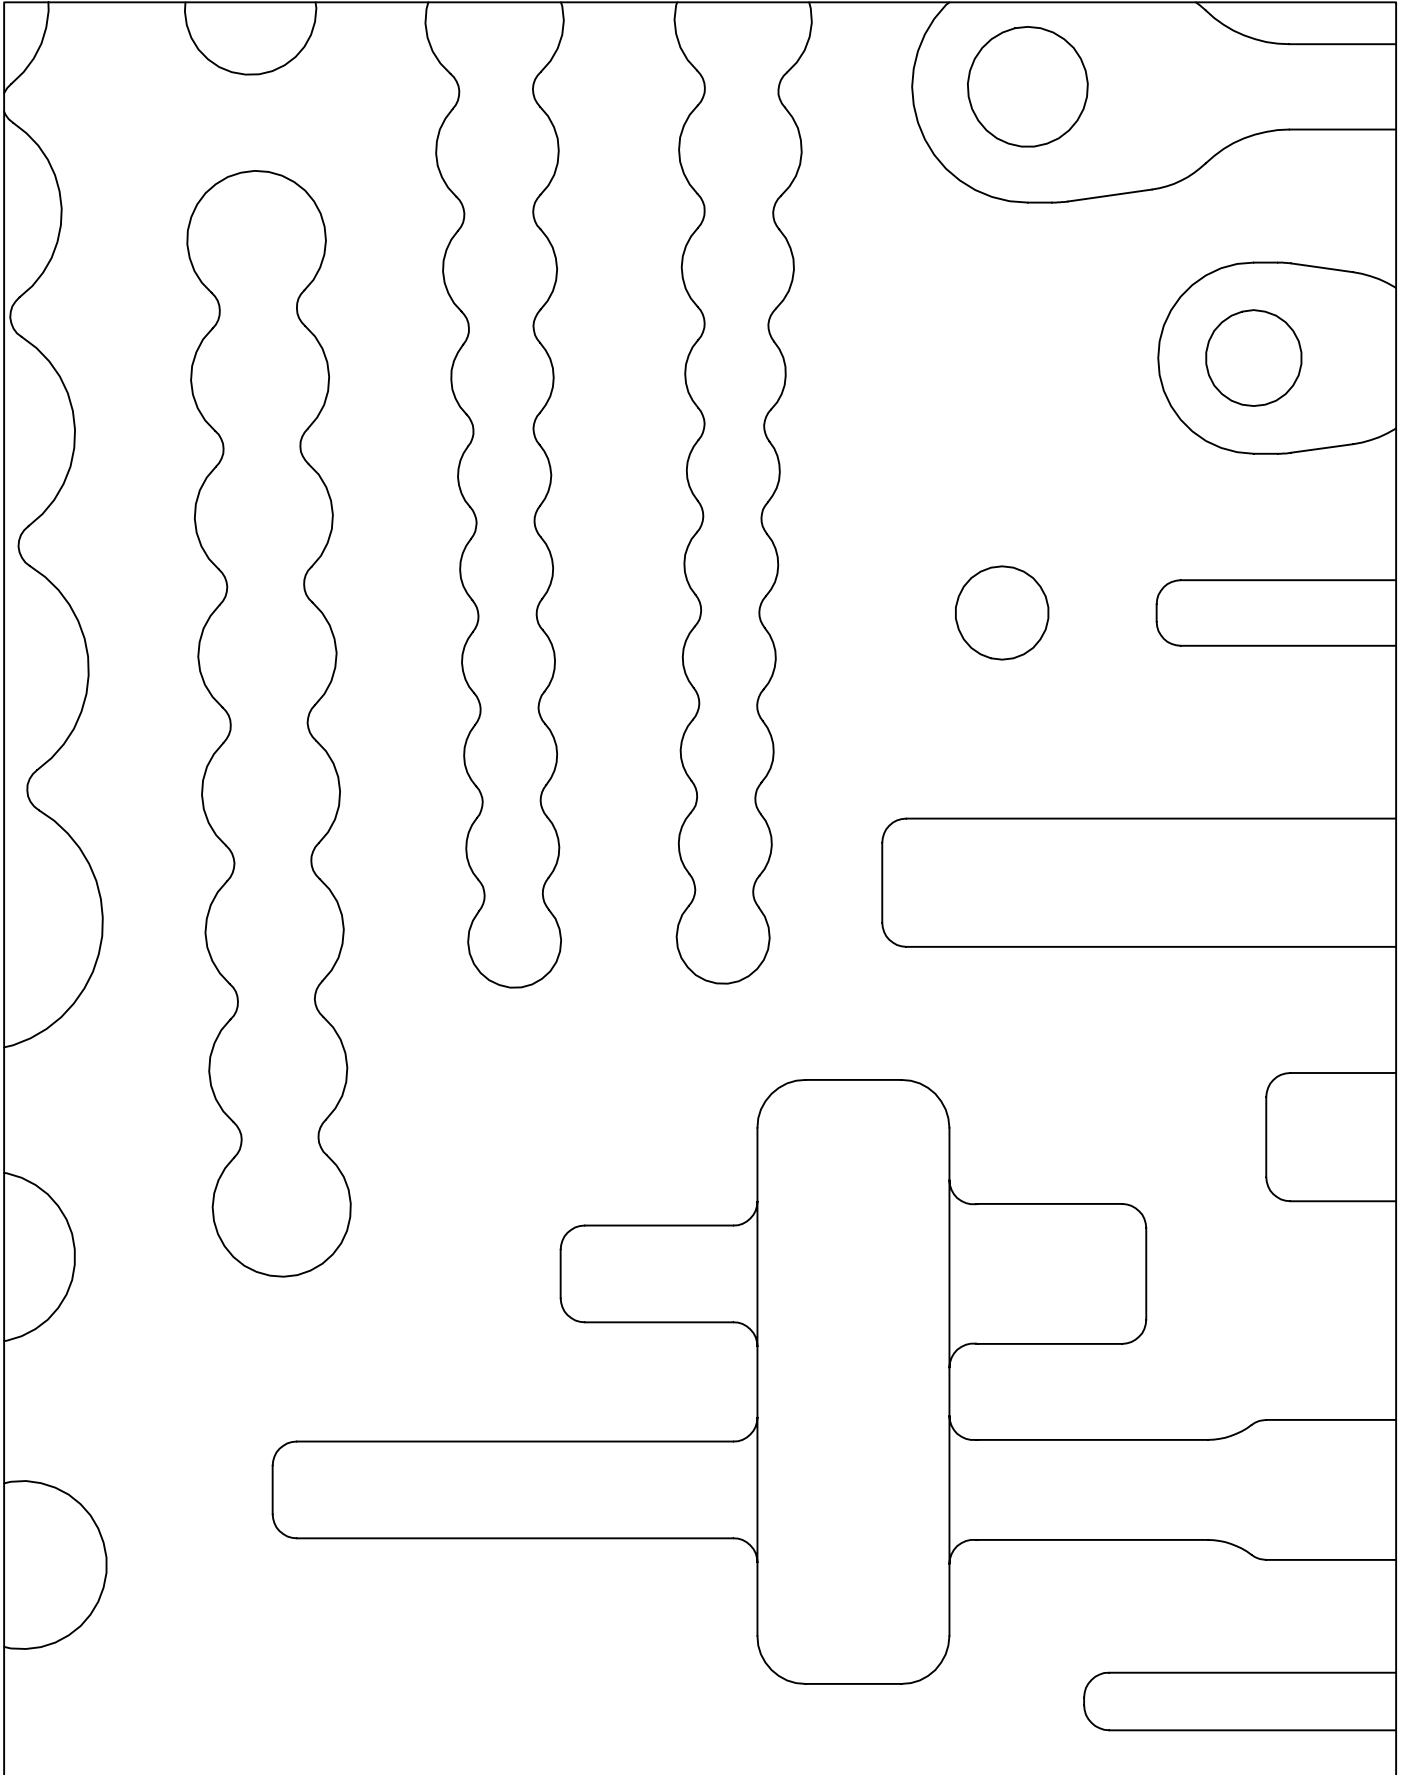

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

1-2

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%

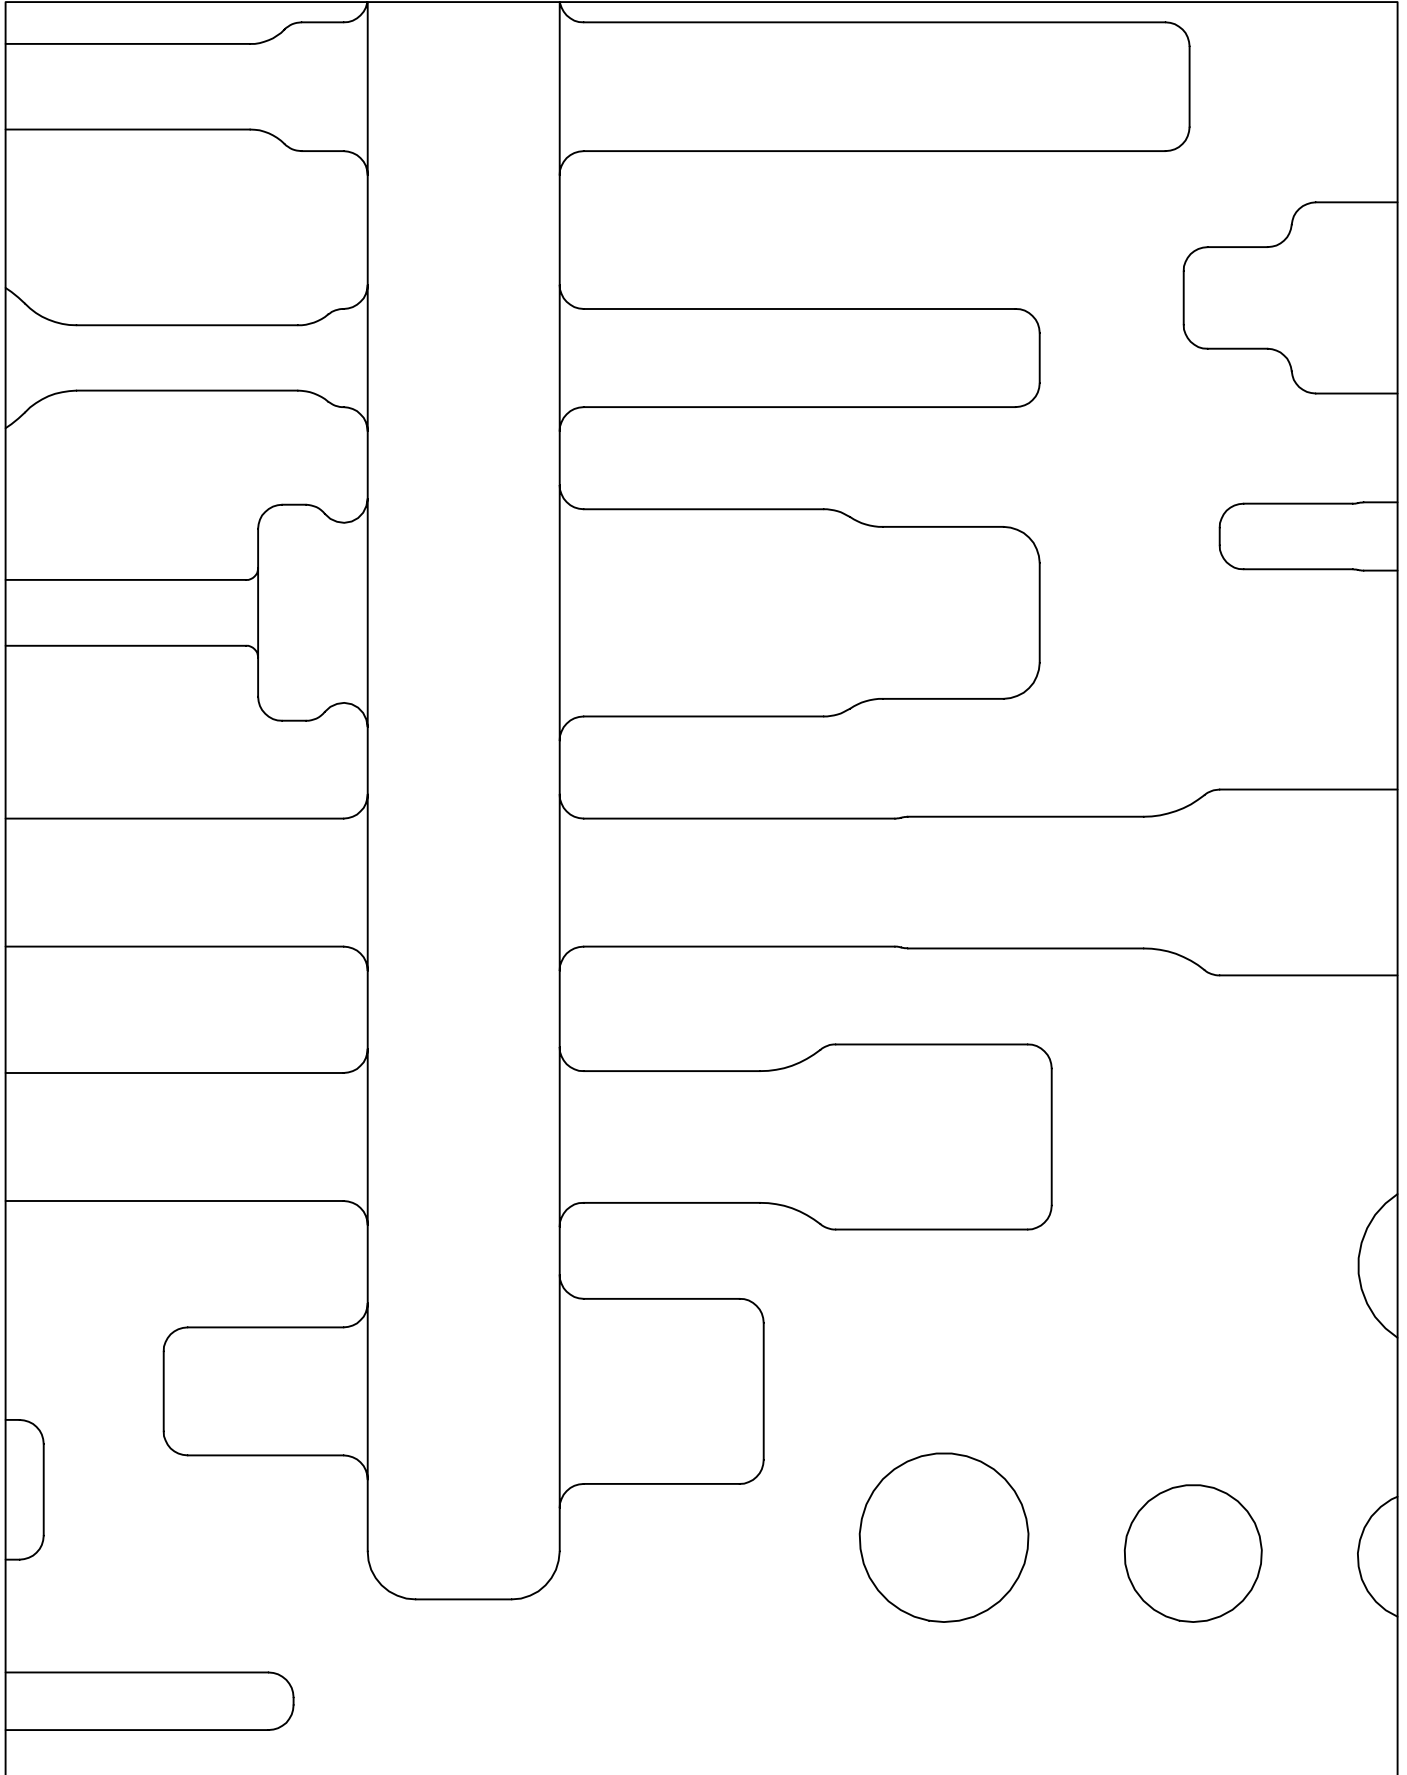

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

1-3

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%

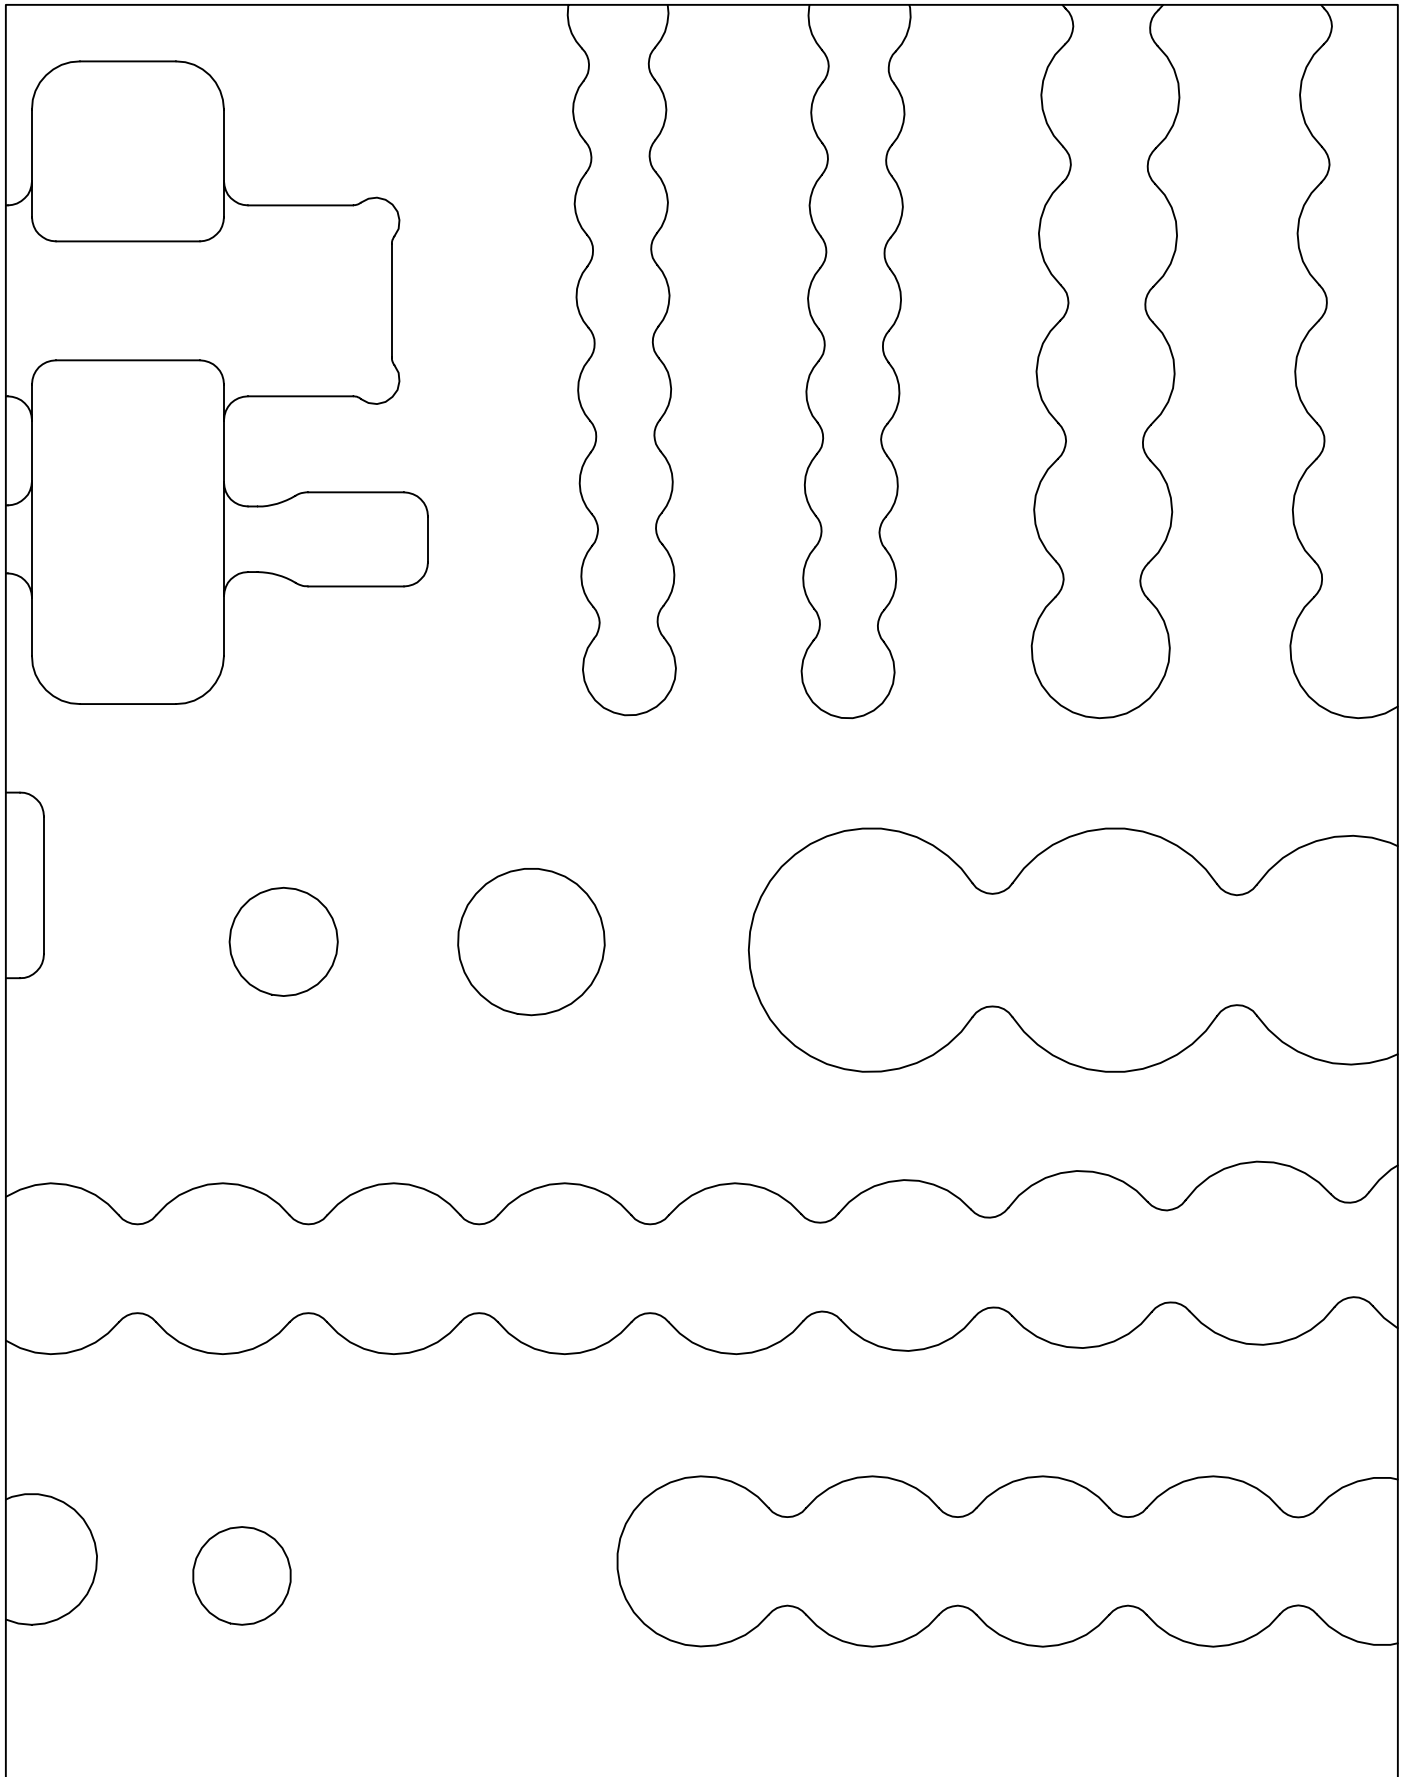

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

1-4

Numbering starts from the front left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%

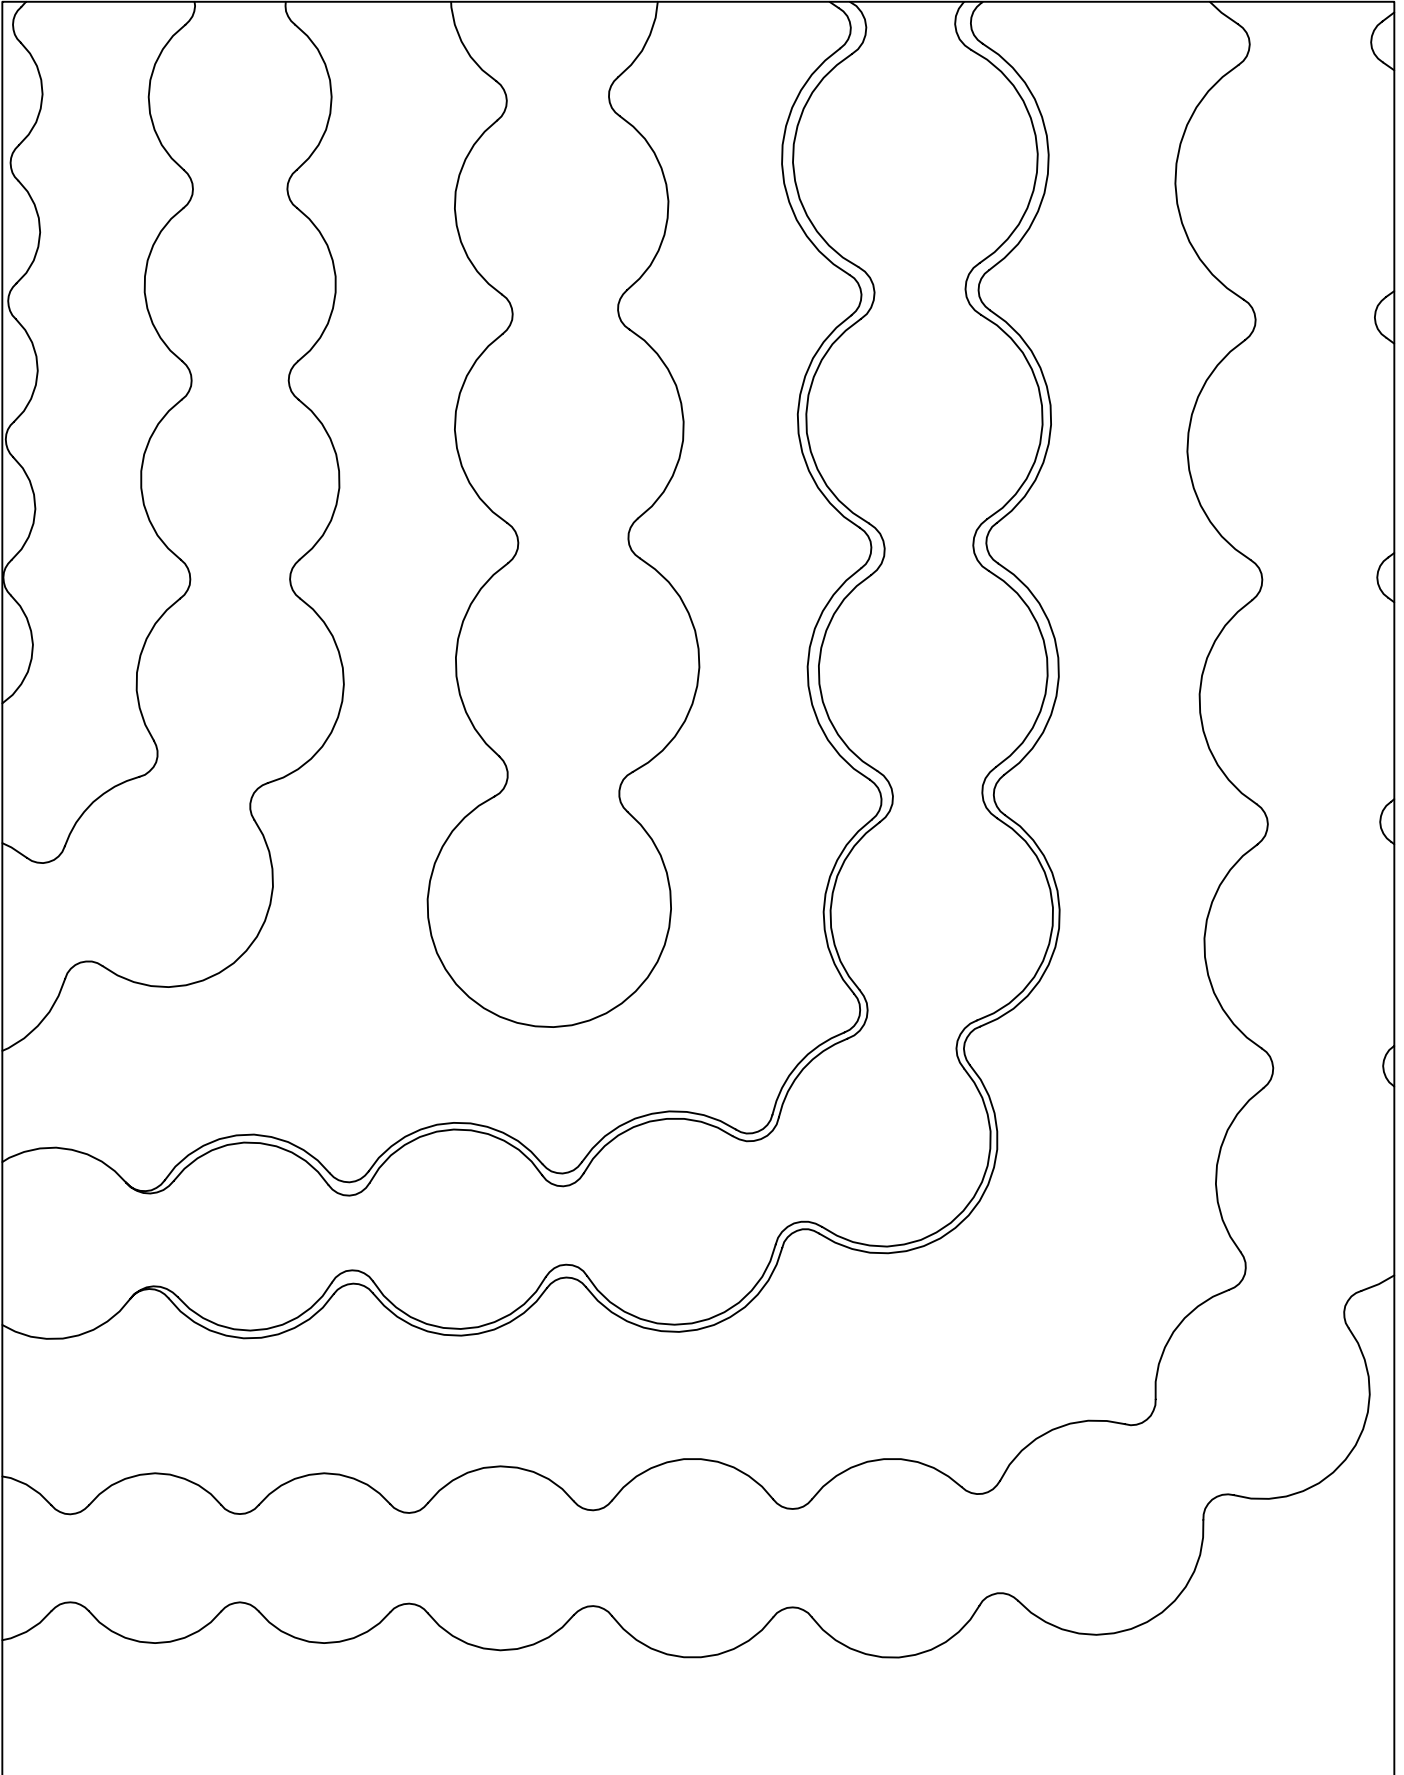

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

1-5

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%

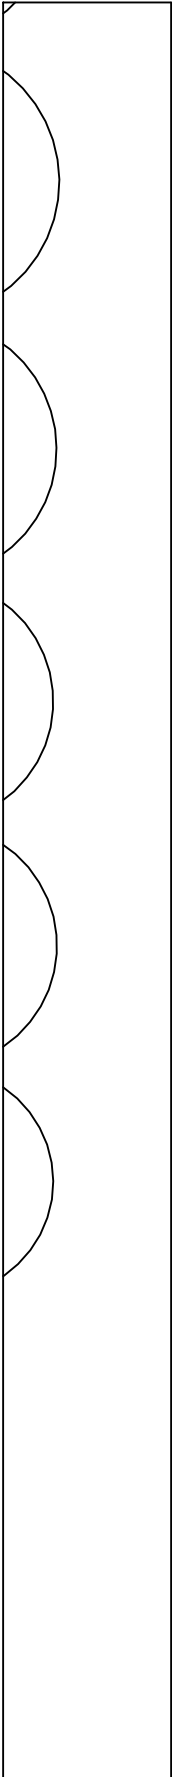

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

1-6

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%

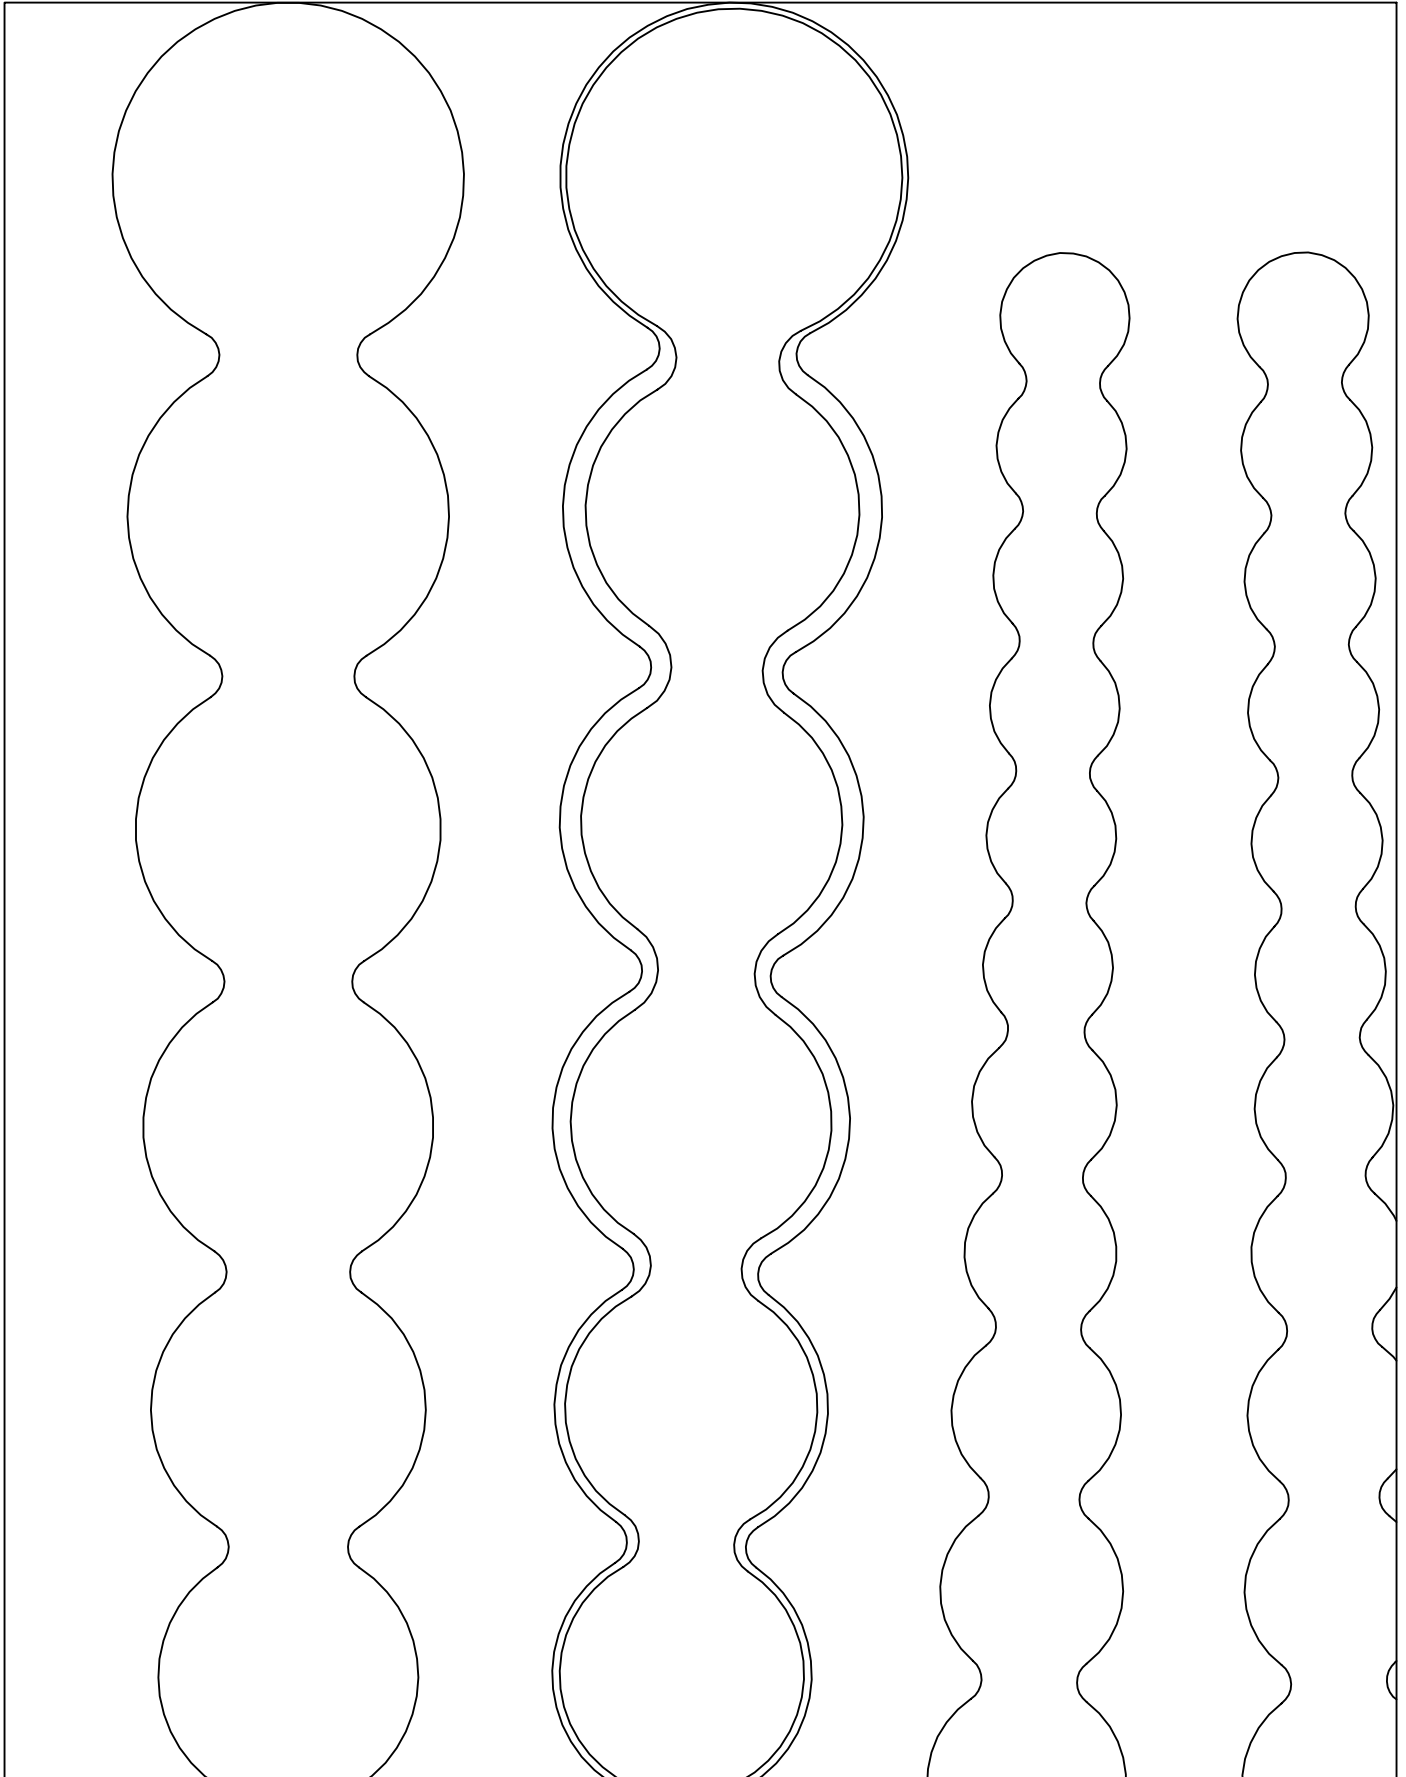

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

2-1

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%

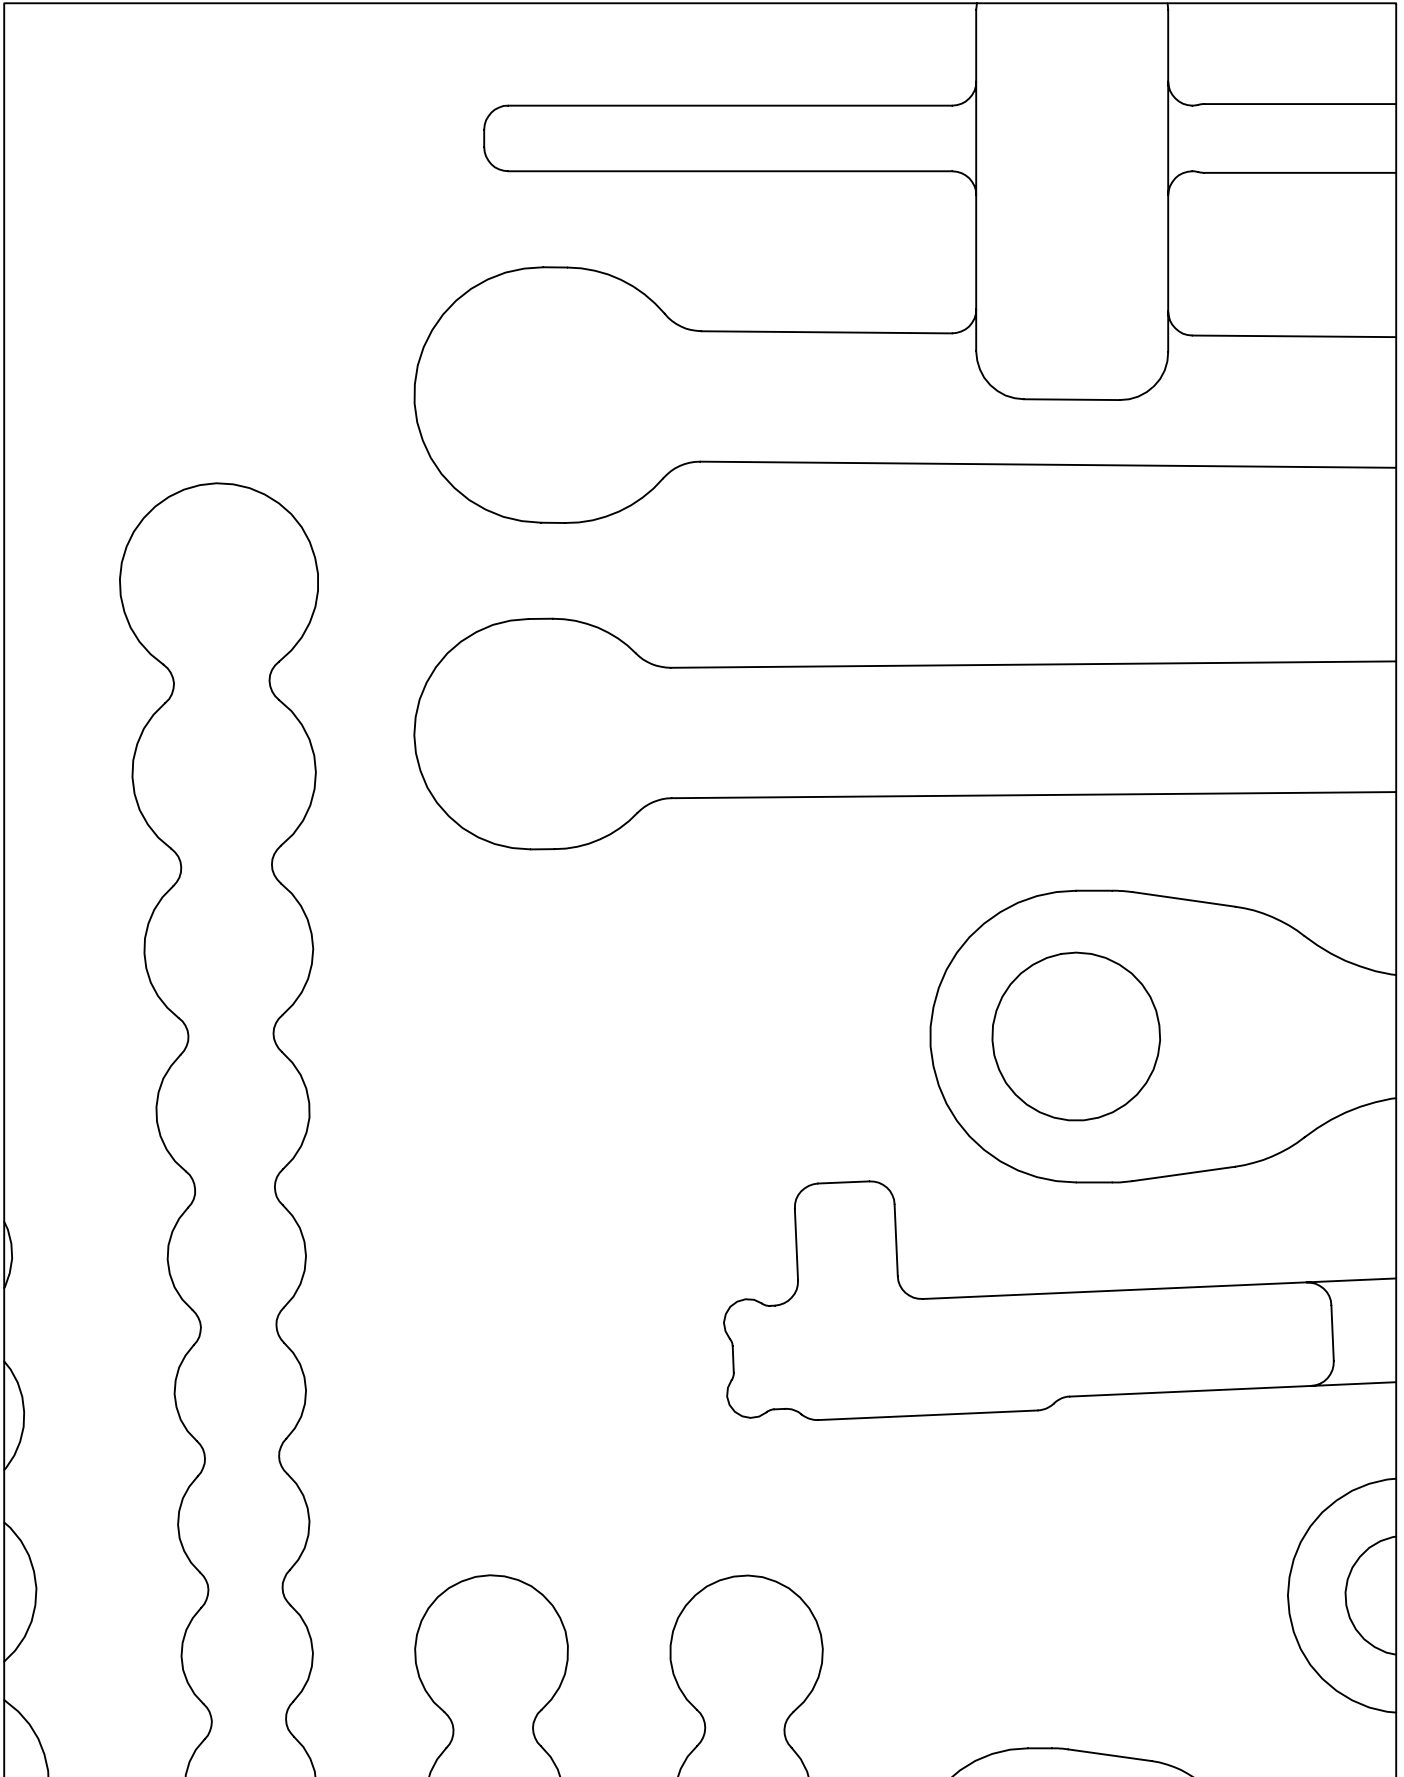

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

2-2

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%

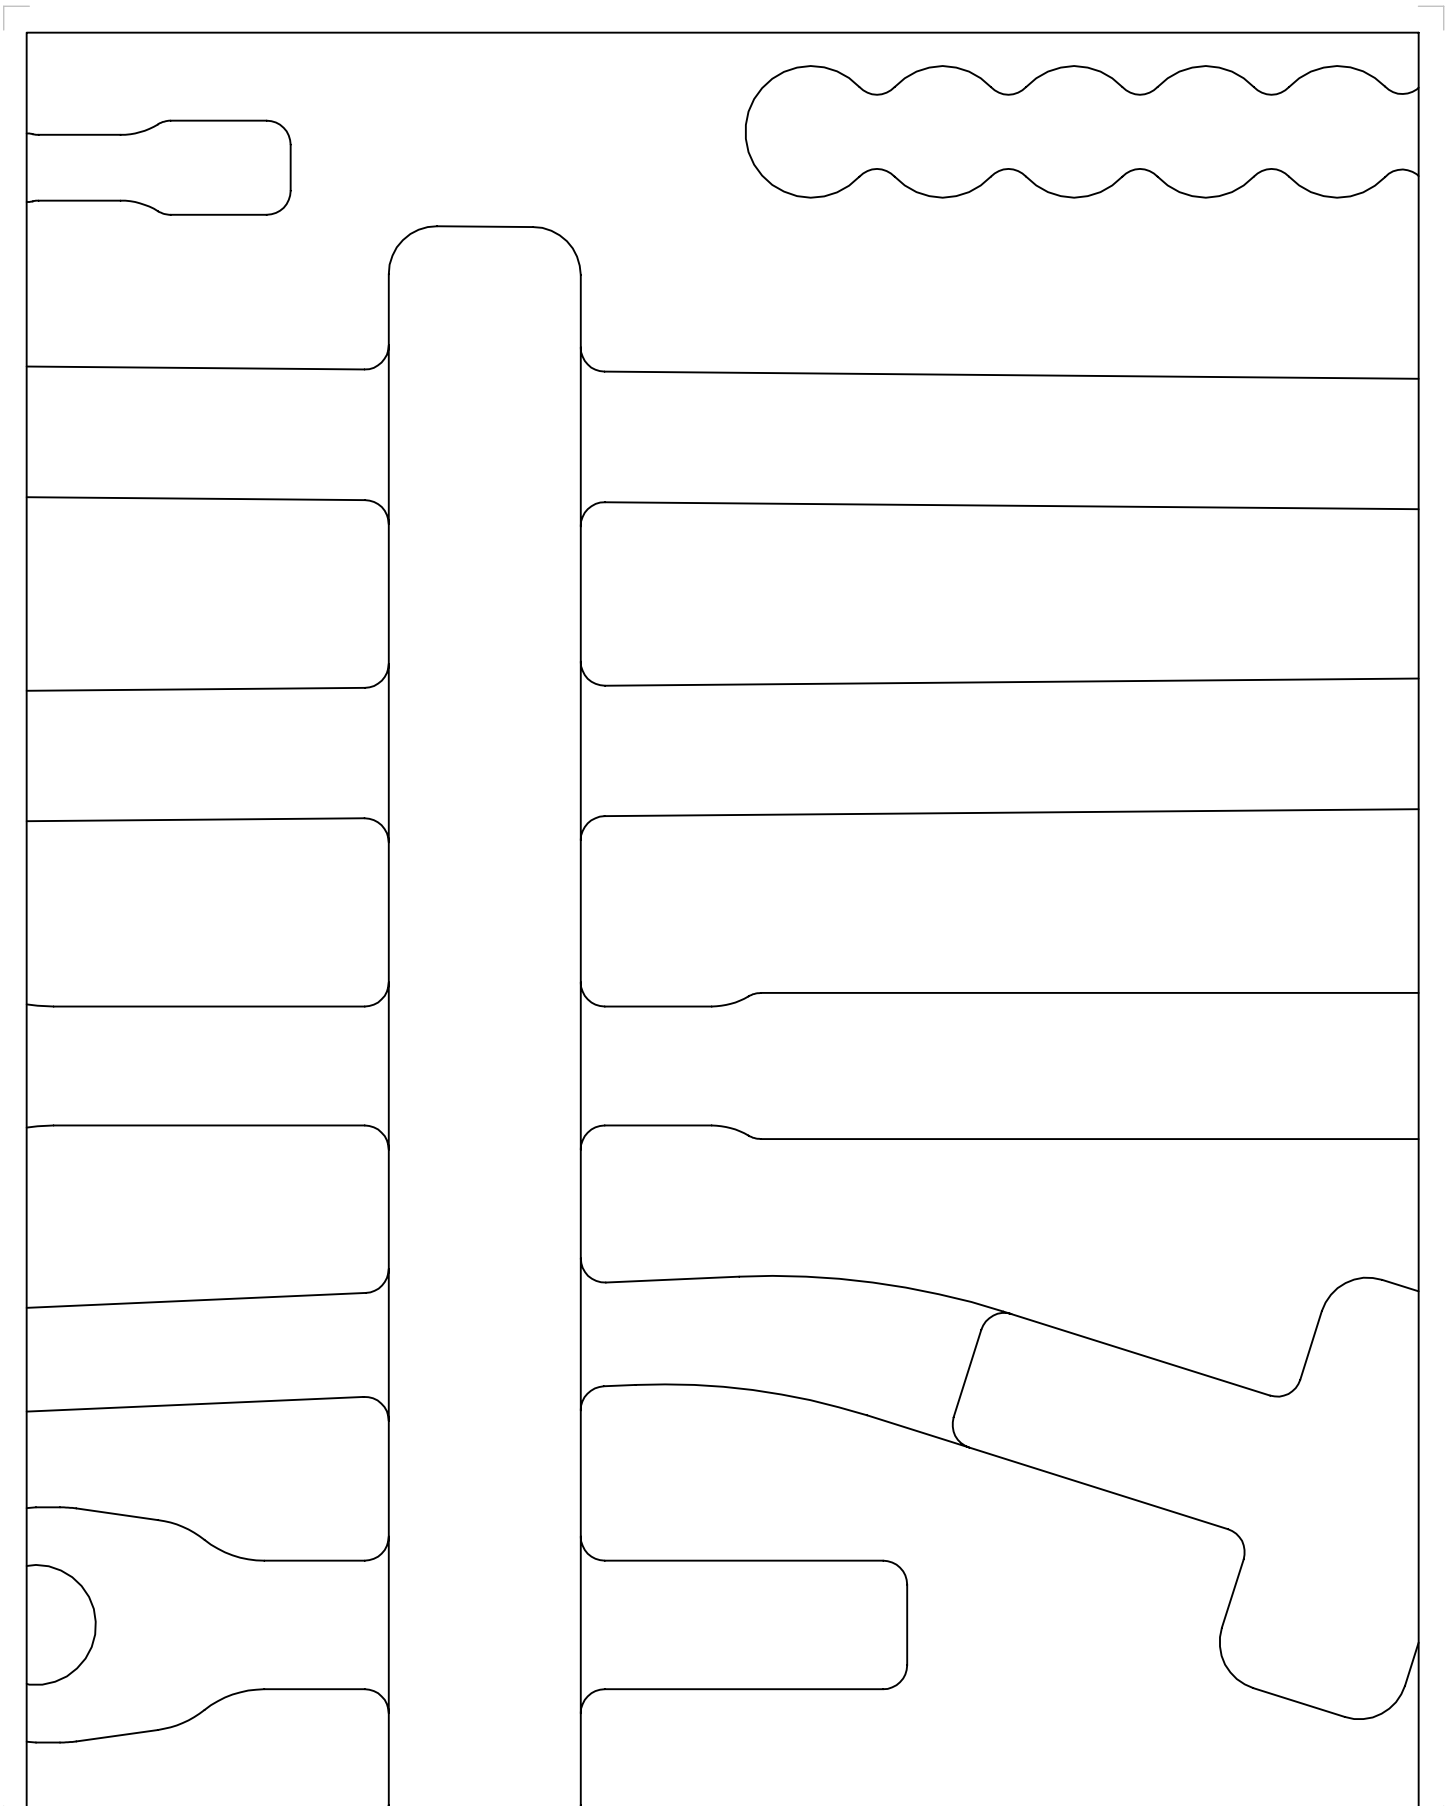

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

2-3

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%

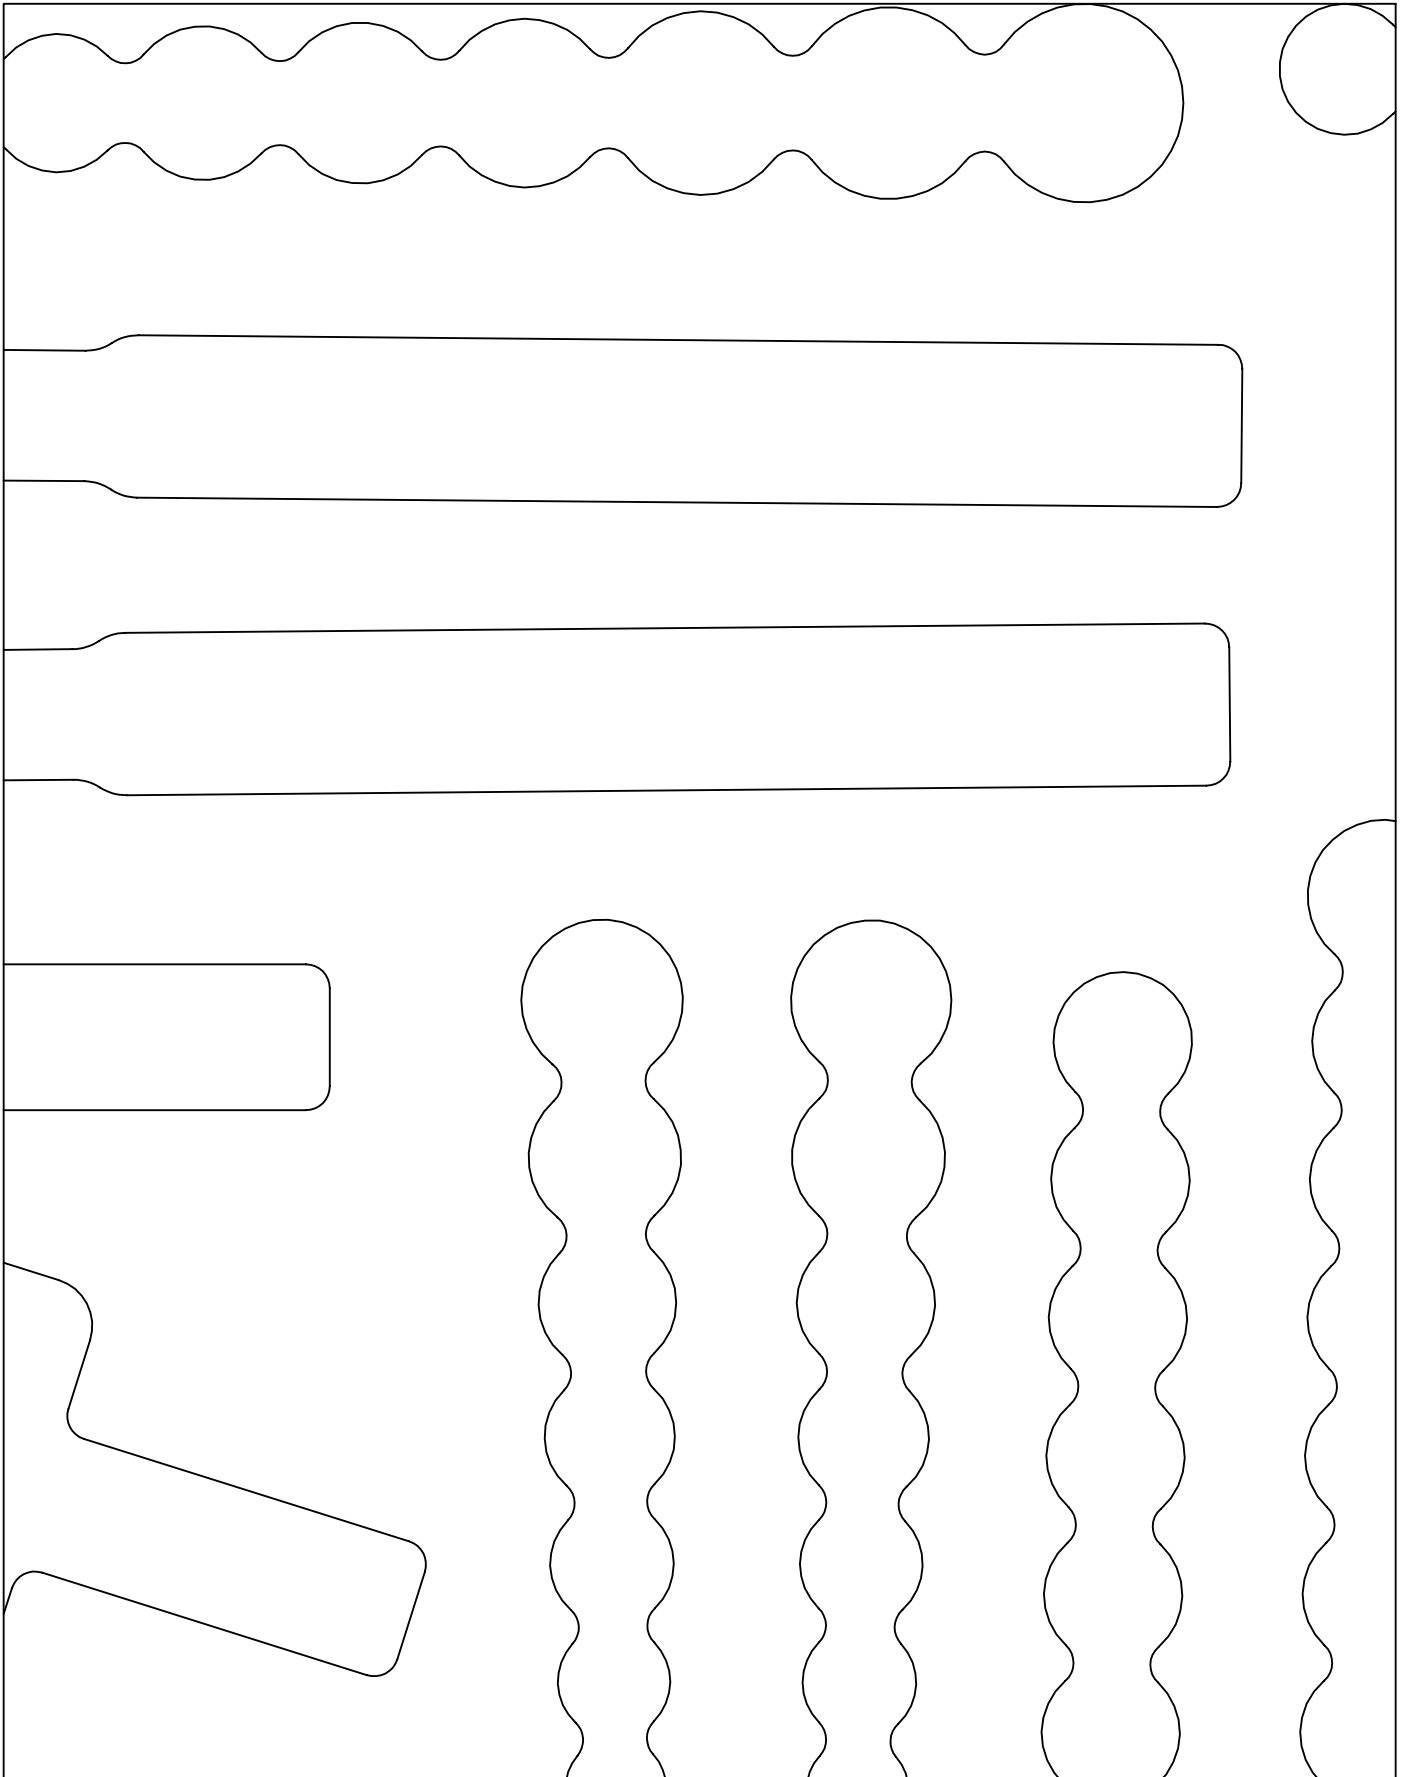

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

2-4

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%

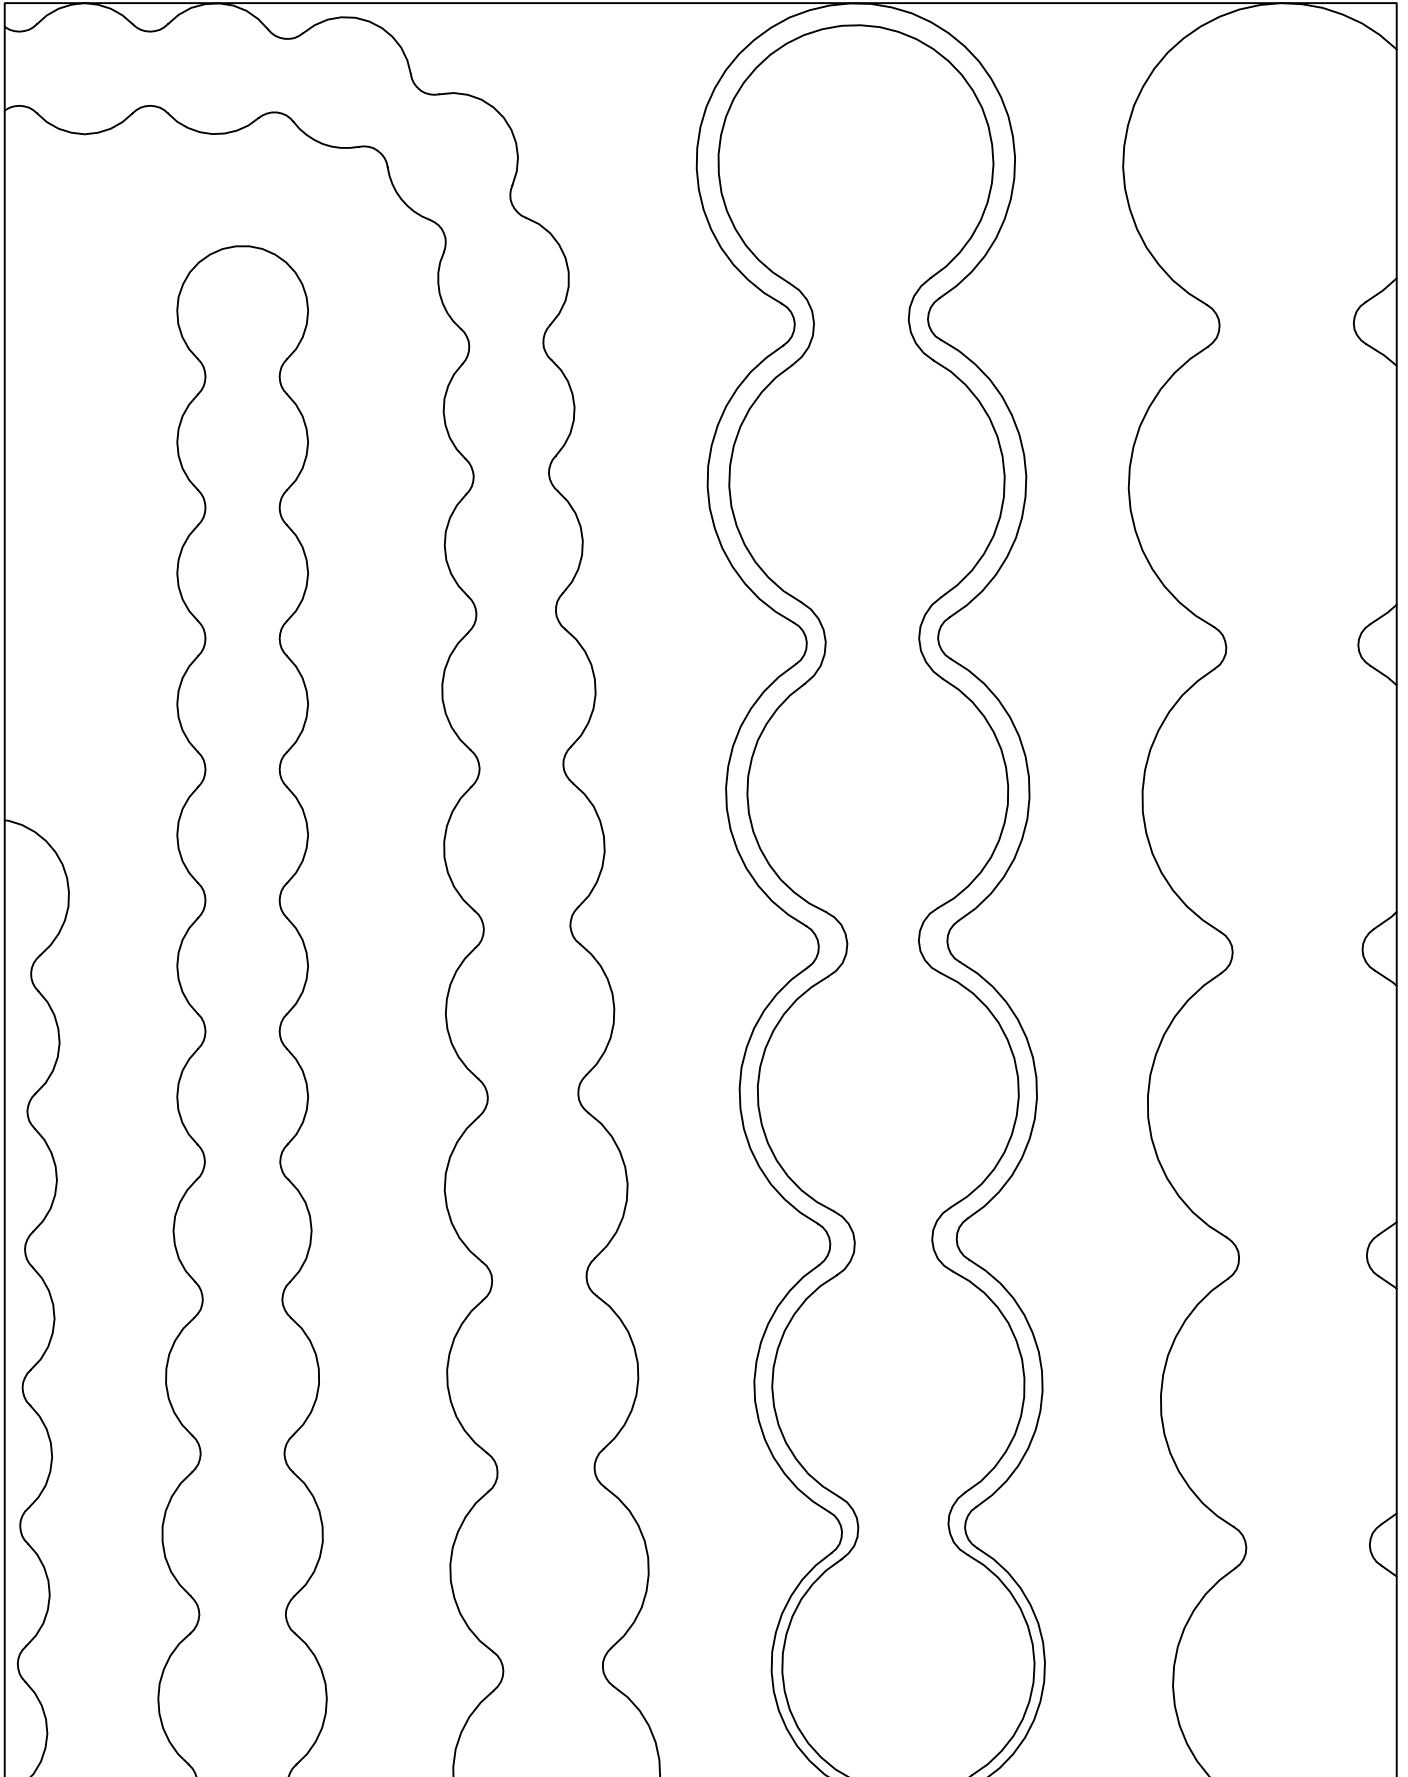

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

2-5

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%

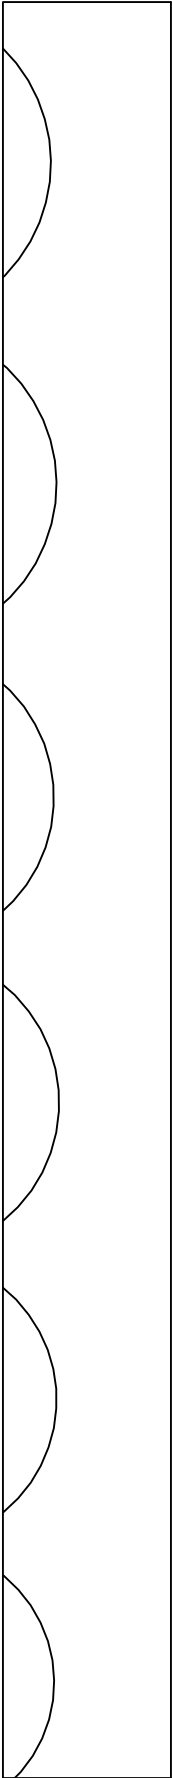

PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

2-6

Numbering starts
from the front
left corner.

DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

3-1

Numbering starts
from the front
left corner.

DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

3-2

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

3-3

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER	PAGE (ROW-COLUMN)	DATE CREATED	DATE REVISED	<i>FoamFit Tools</i>
F-06551-T	3-4 Numbering starts from the front left corner.	28 SEP 2020		Print on Letter at 100%



PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

3-5

Numbering starts
from the front
left corner.

 
DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER

F-06551-T

PAGE (ROW-COLUMN)

3-6

Numbering starts
from the front
left corner.

DATE CREATED

28 SEP 2020

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER	PAGE (ROW-COLUMN) Sheet1 Numbering starts from the front left corner.	DATE CREATED	DATE REVISED	<i>FoamFit Tools</i> Print on Letter at 100%
-------------	--	--------------	--------------	---