


PRINTING INSTRUCTIONS

Print at full-scale and place tools over the paper to verify the fit.

Option 1: Print this page full-scale on a large-format printer (E-Size, 44 inches X 34 inches).

Option 2: Print page 3 - 20 on 8-1/2 X 11 inch paper and assemble.

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION.
Copyright 2026 FoamFit Tools

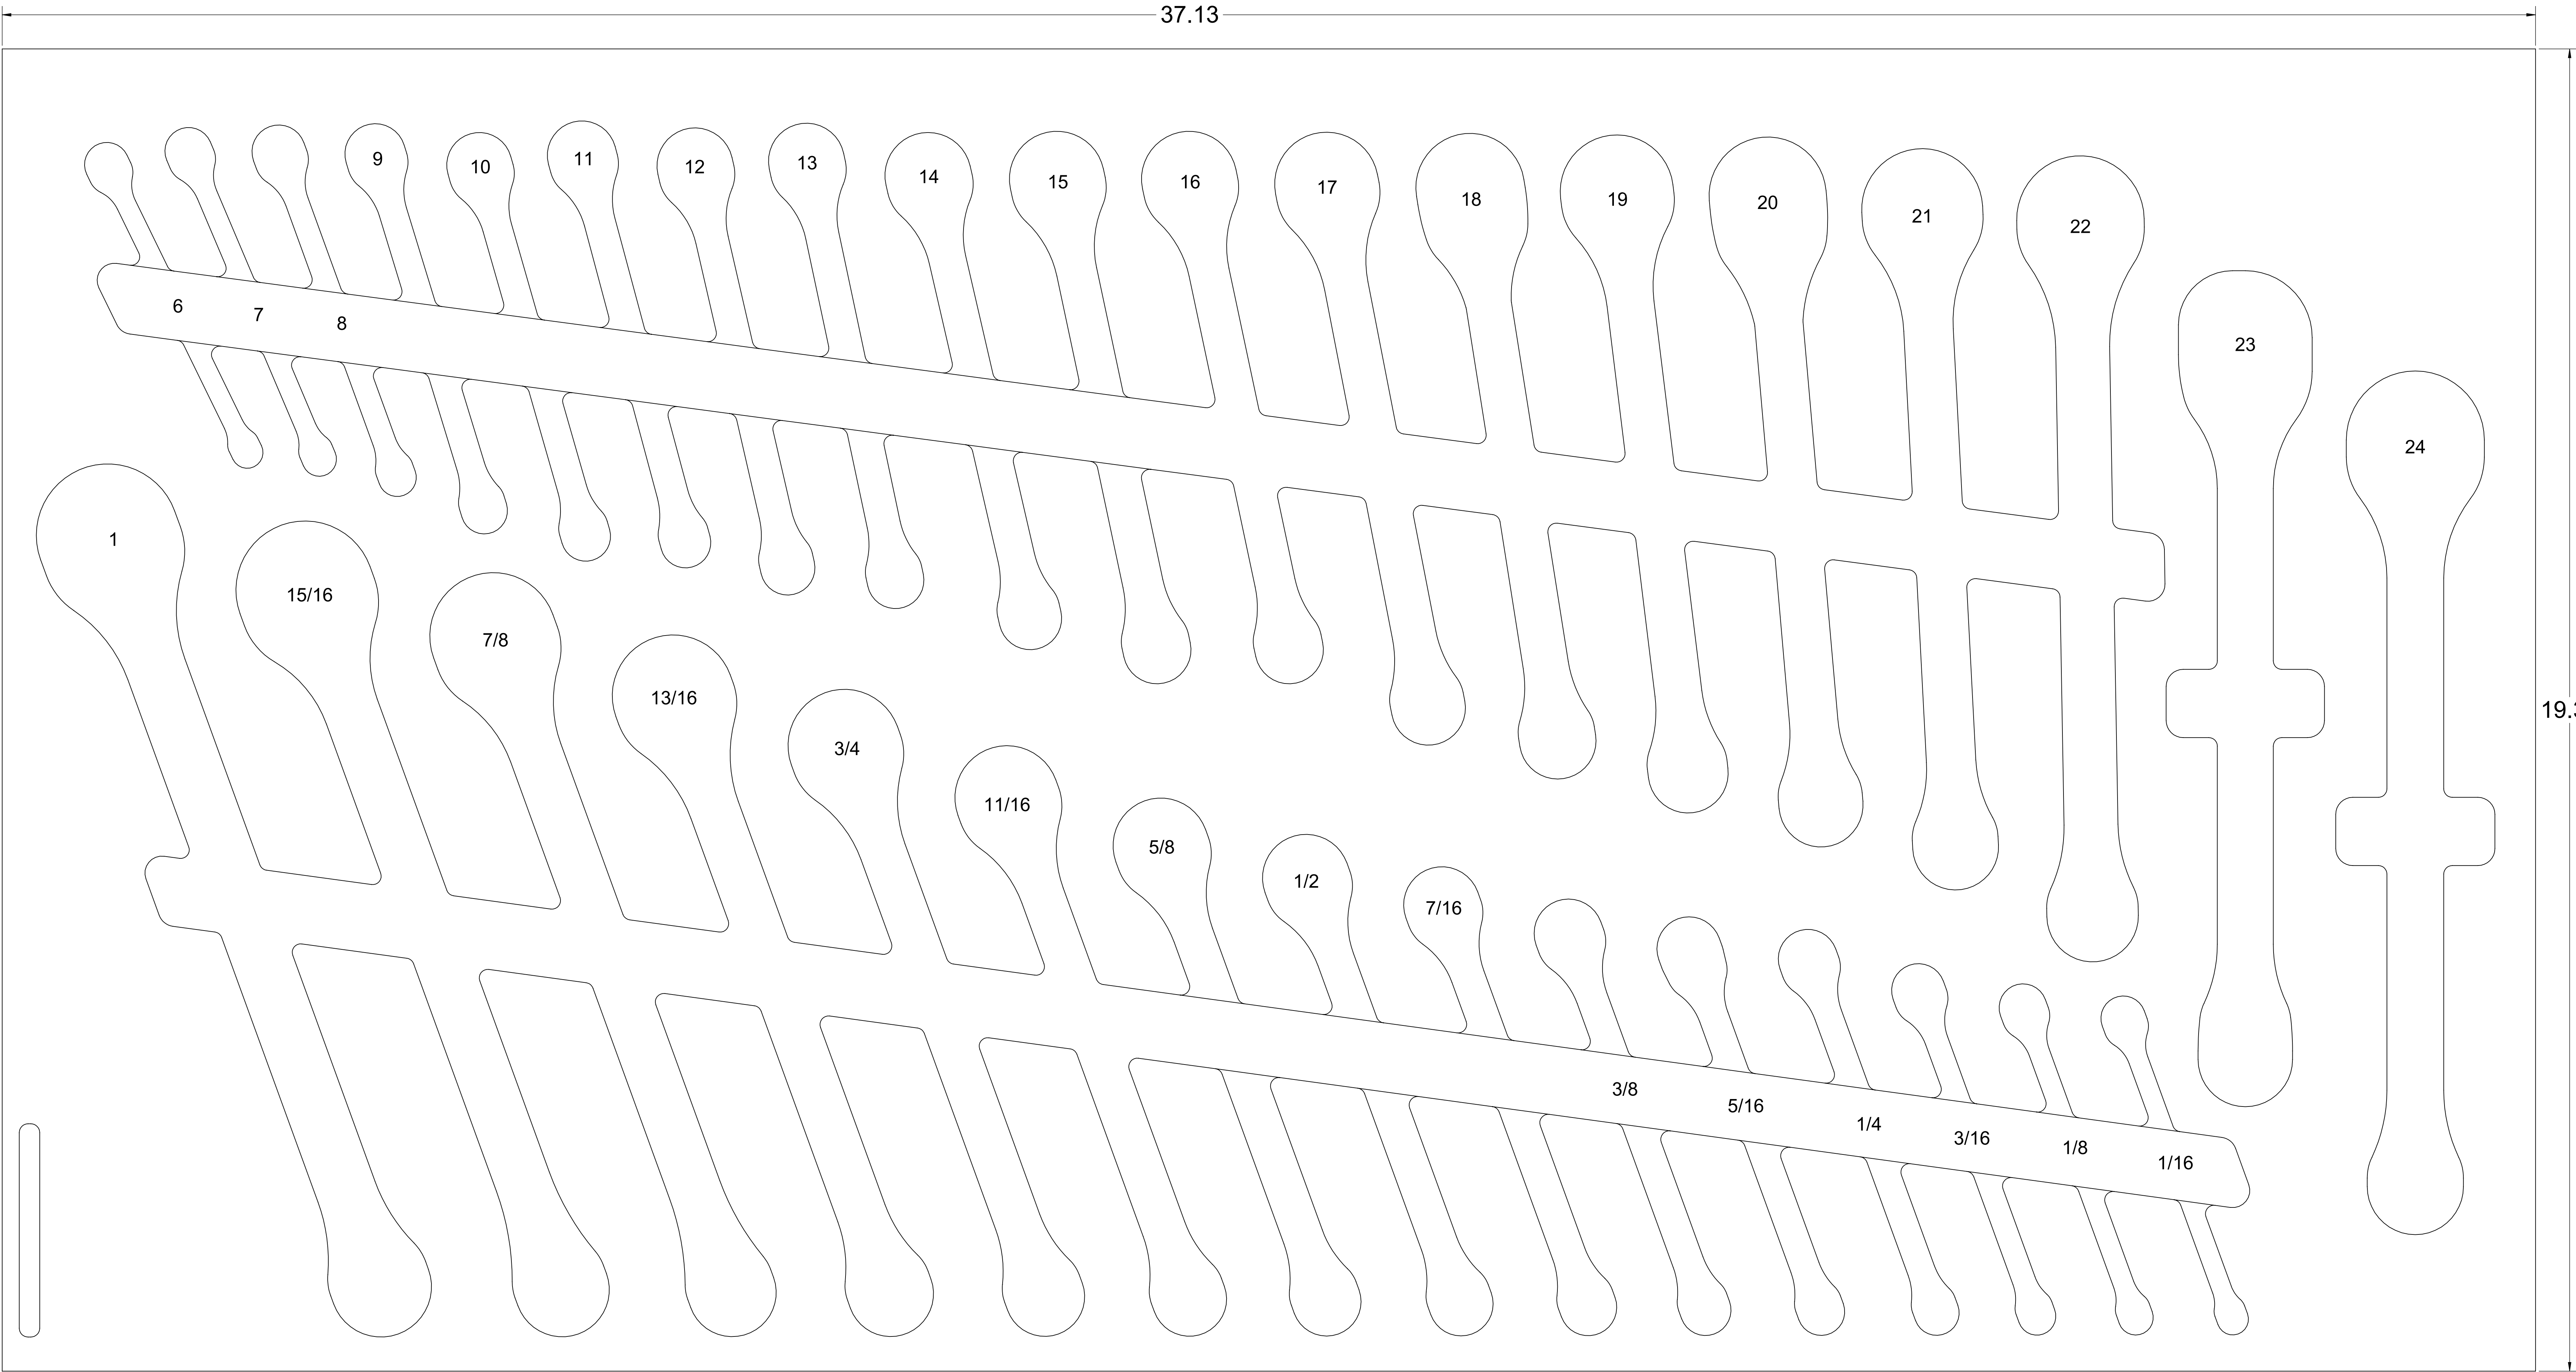 

PART NUMBER
F-06552-R


PRINTING INSTRUCTIONS


Print at full-scale and place tools over the paper to verify the fit.

Option 1: Print this page full-scale on a large-format printer (E-Size, 44 inches X 34 inches).

Option 2: Print page 2 - 20 on 8-1/2 X 11 inch paper and assemble.

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION. Copyright 2026 FoamFit Tools

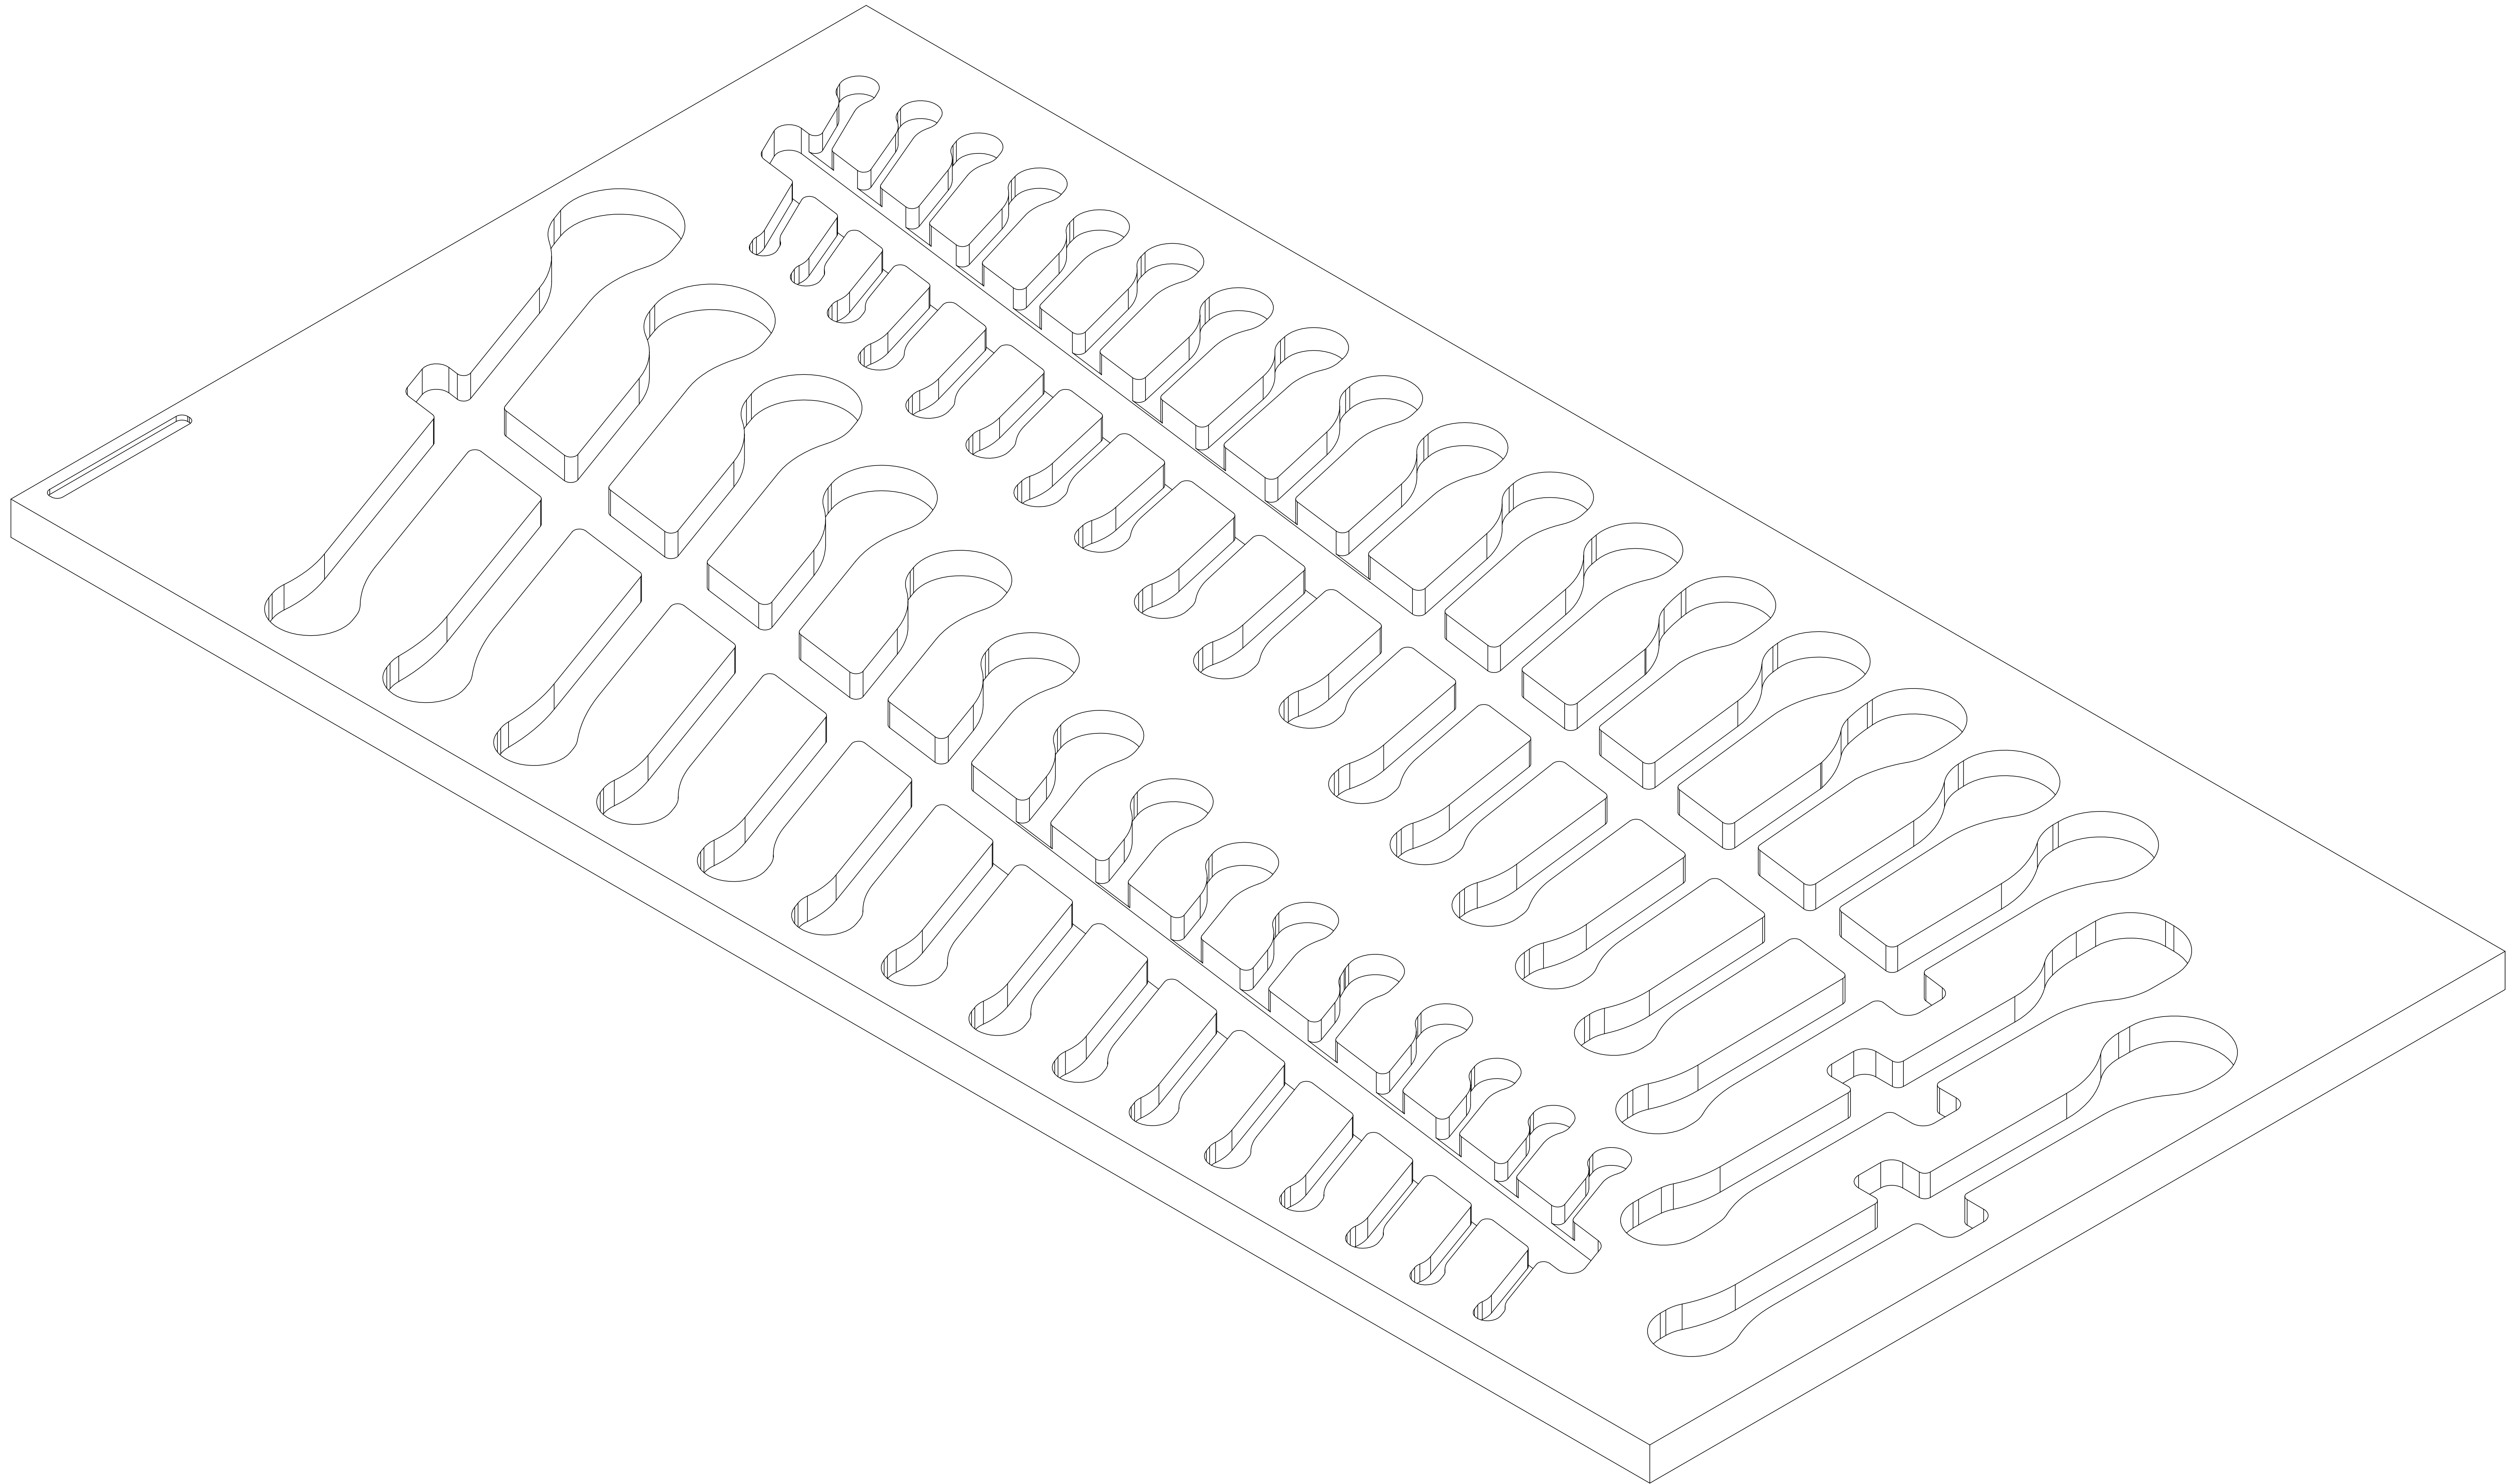 

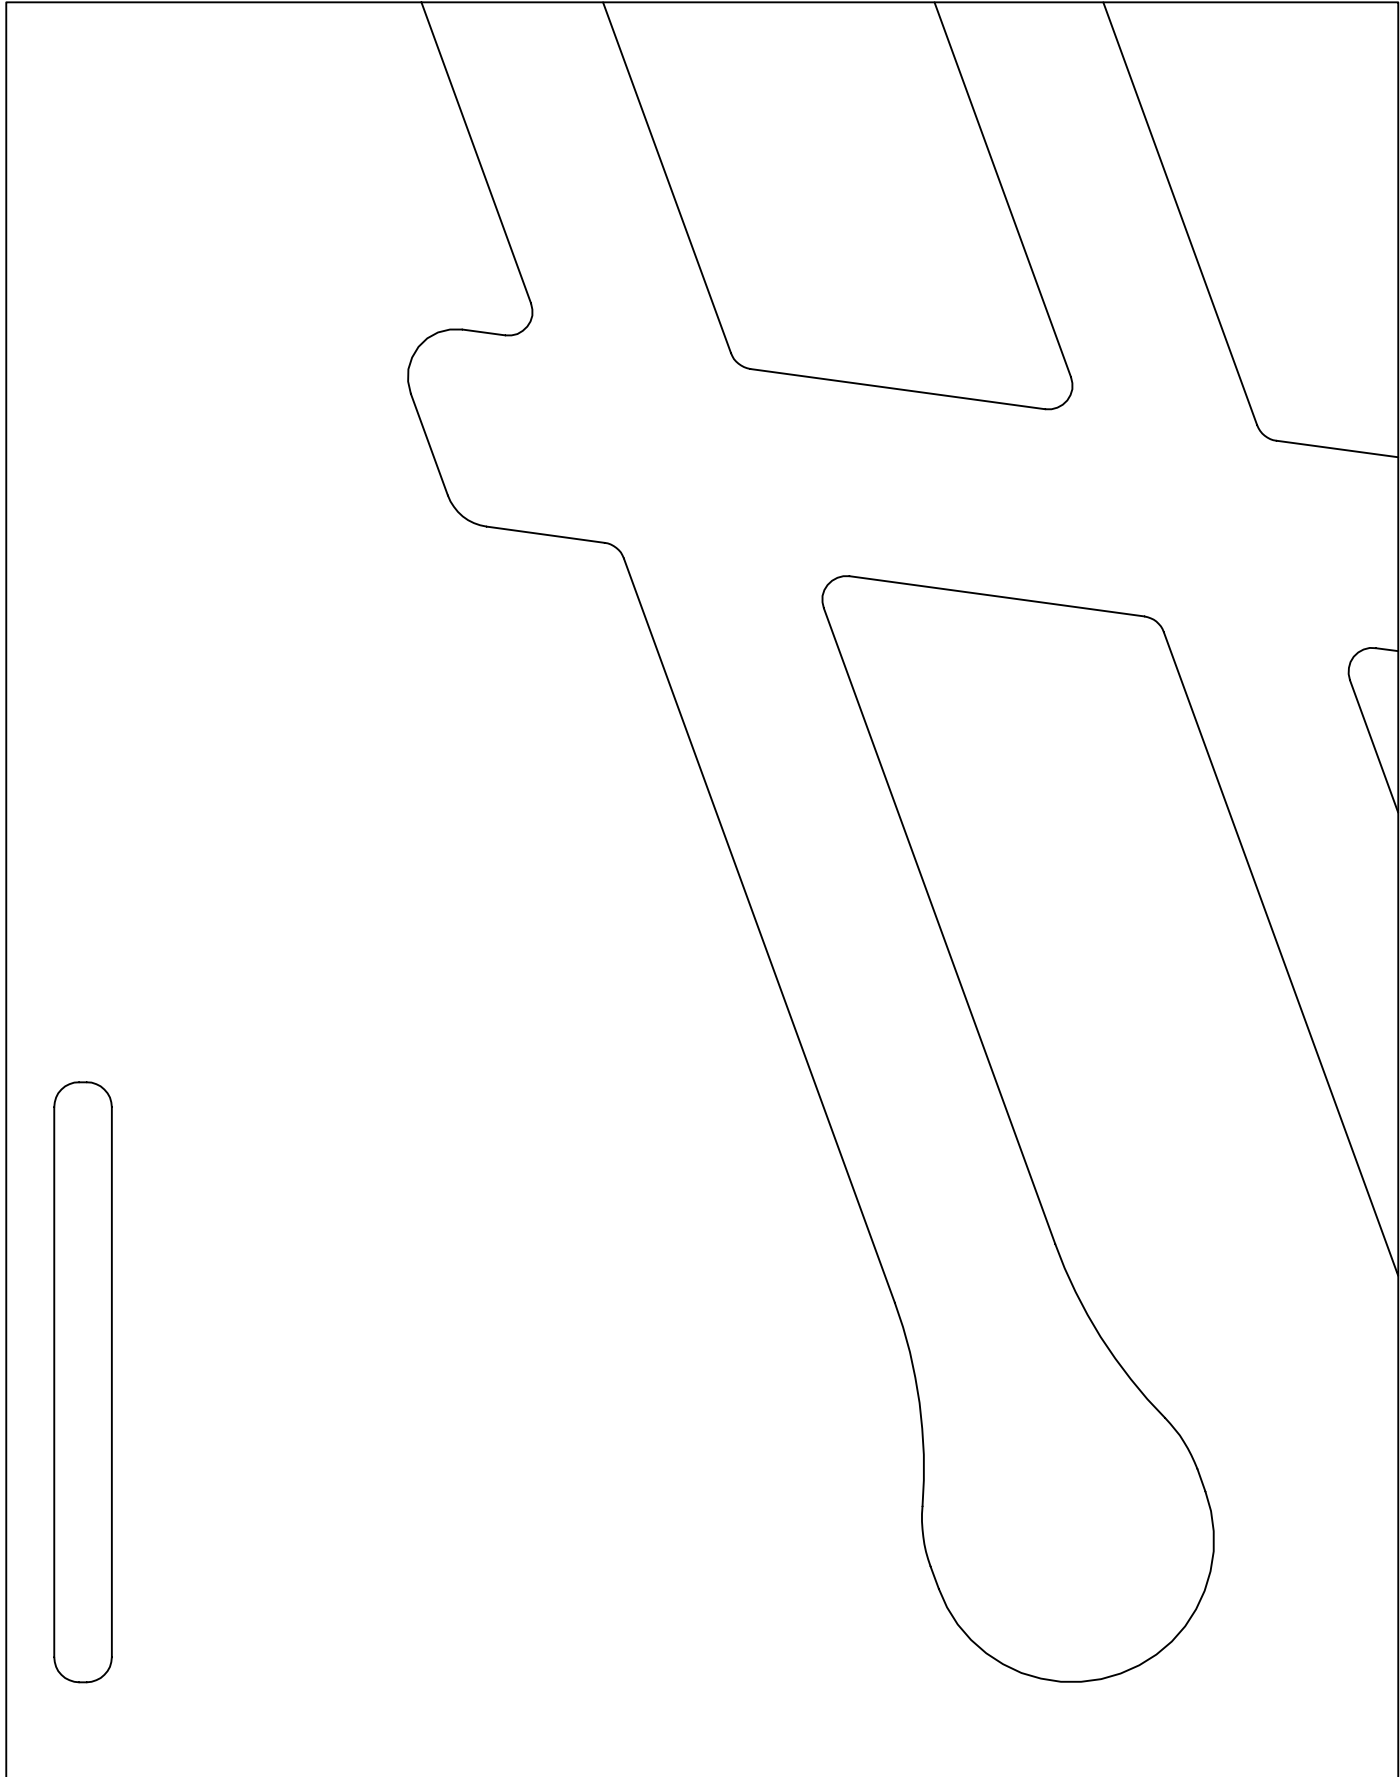 

PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

1-1

 
Numbering starts
from the front
left corner.

DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools
Print on Letter at 100%

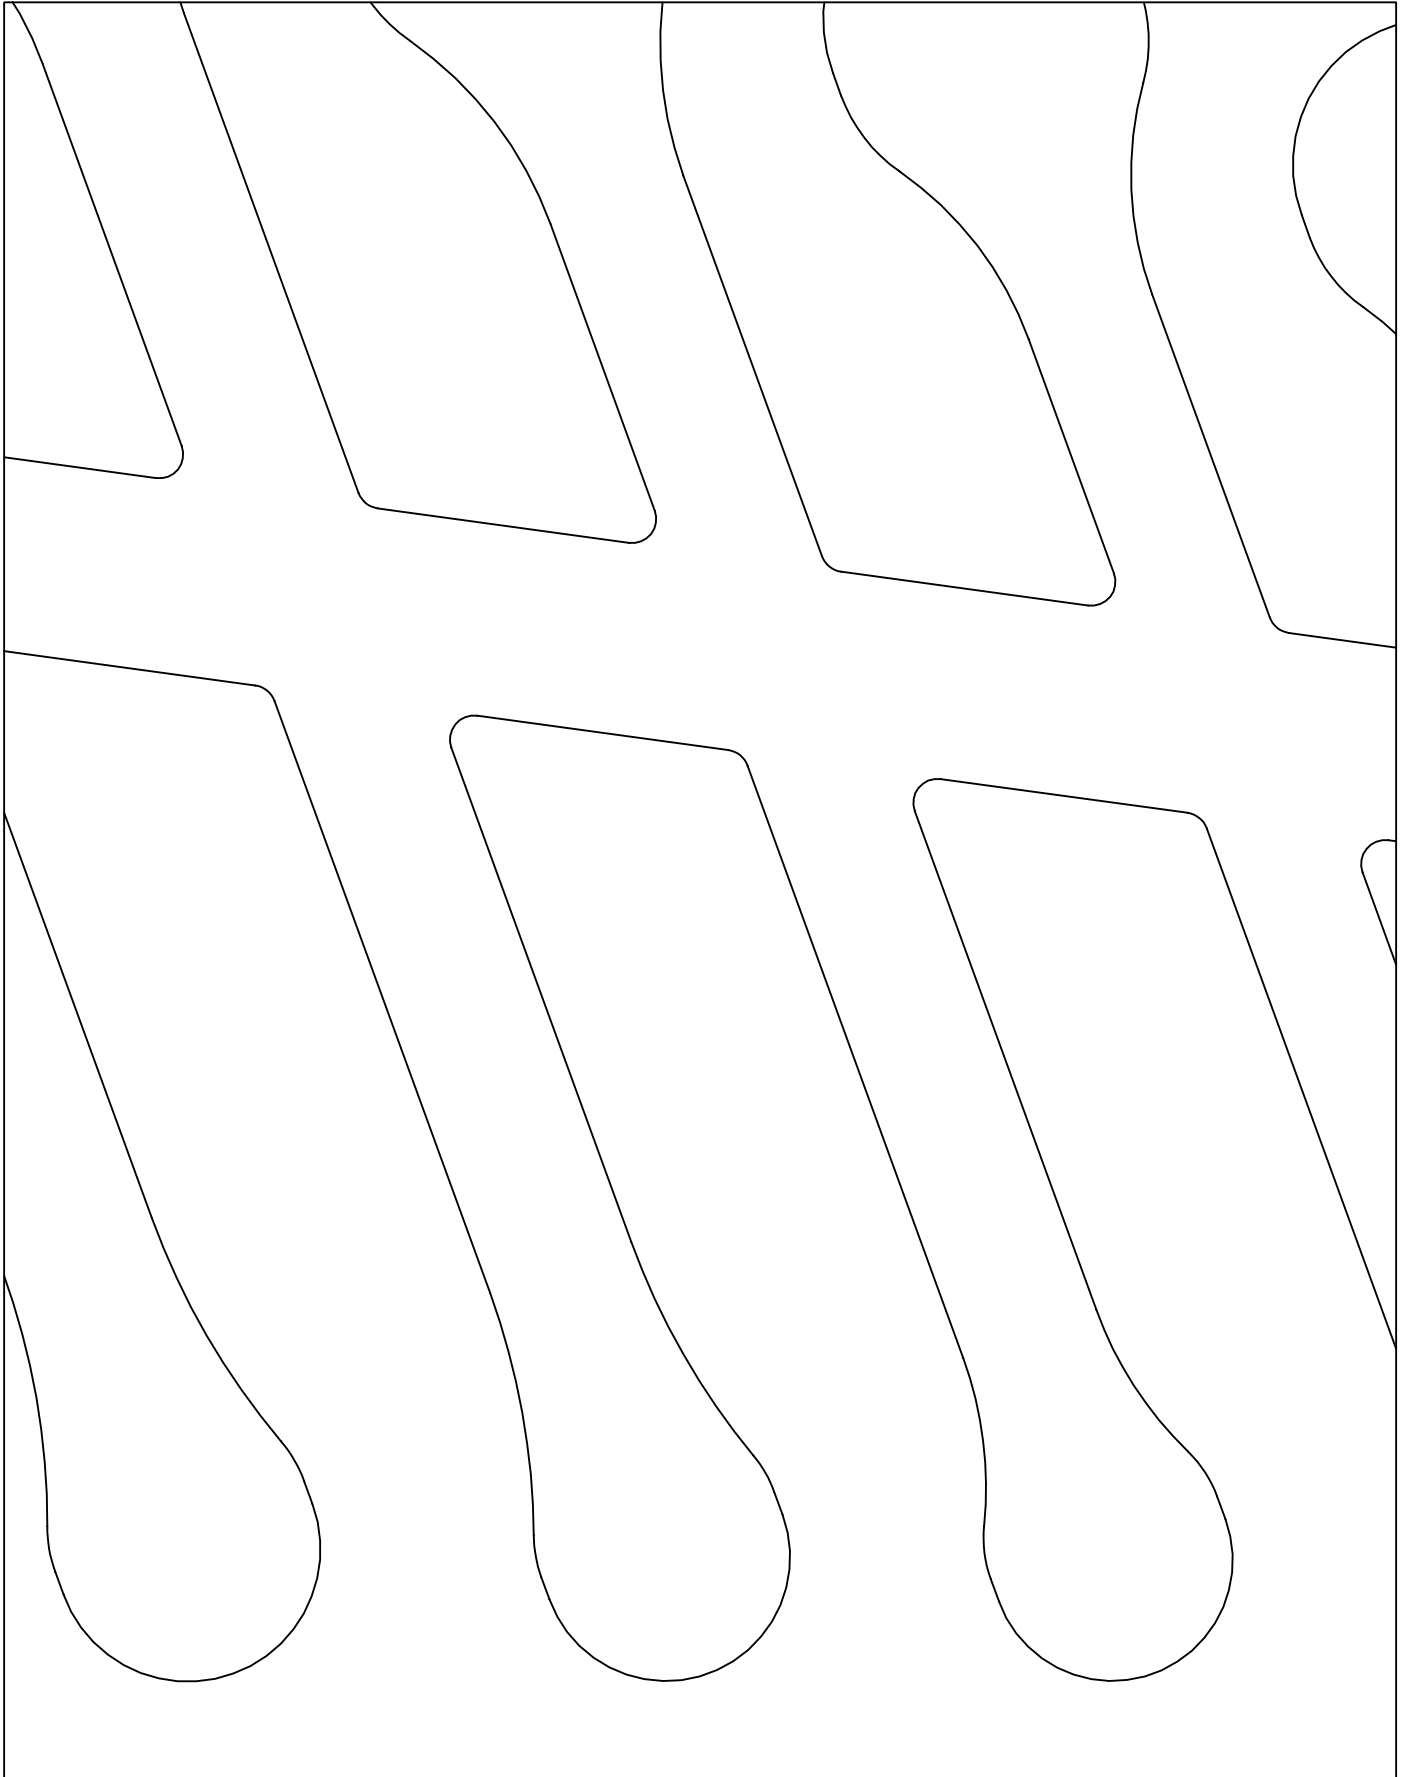

PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

1-2

 
Numbering starts
from the front
left corner.

DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools
Print on Letter at 100%

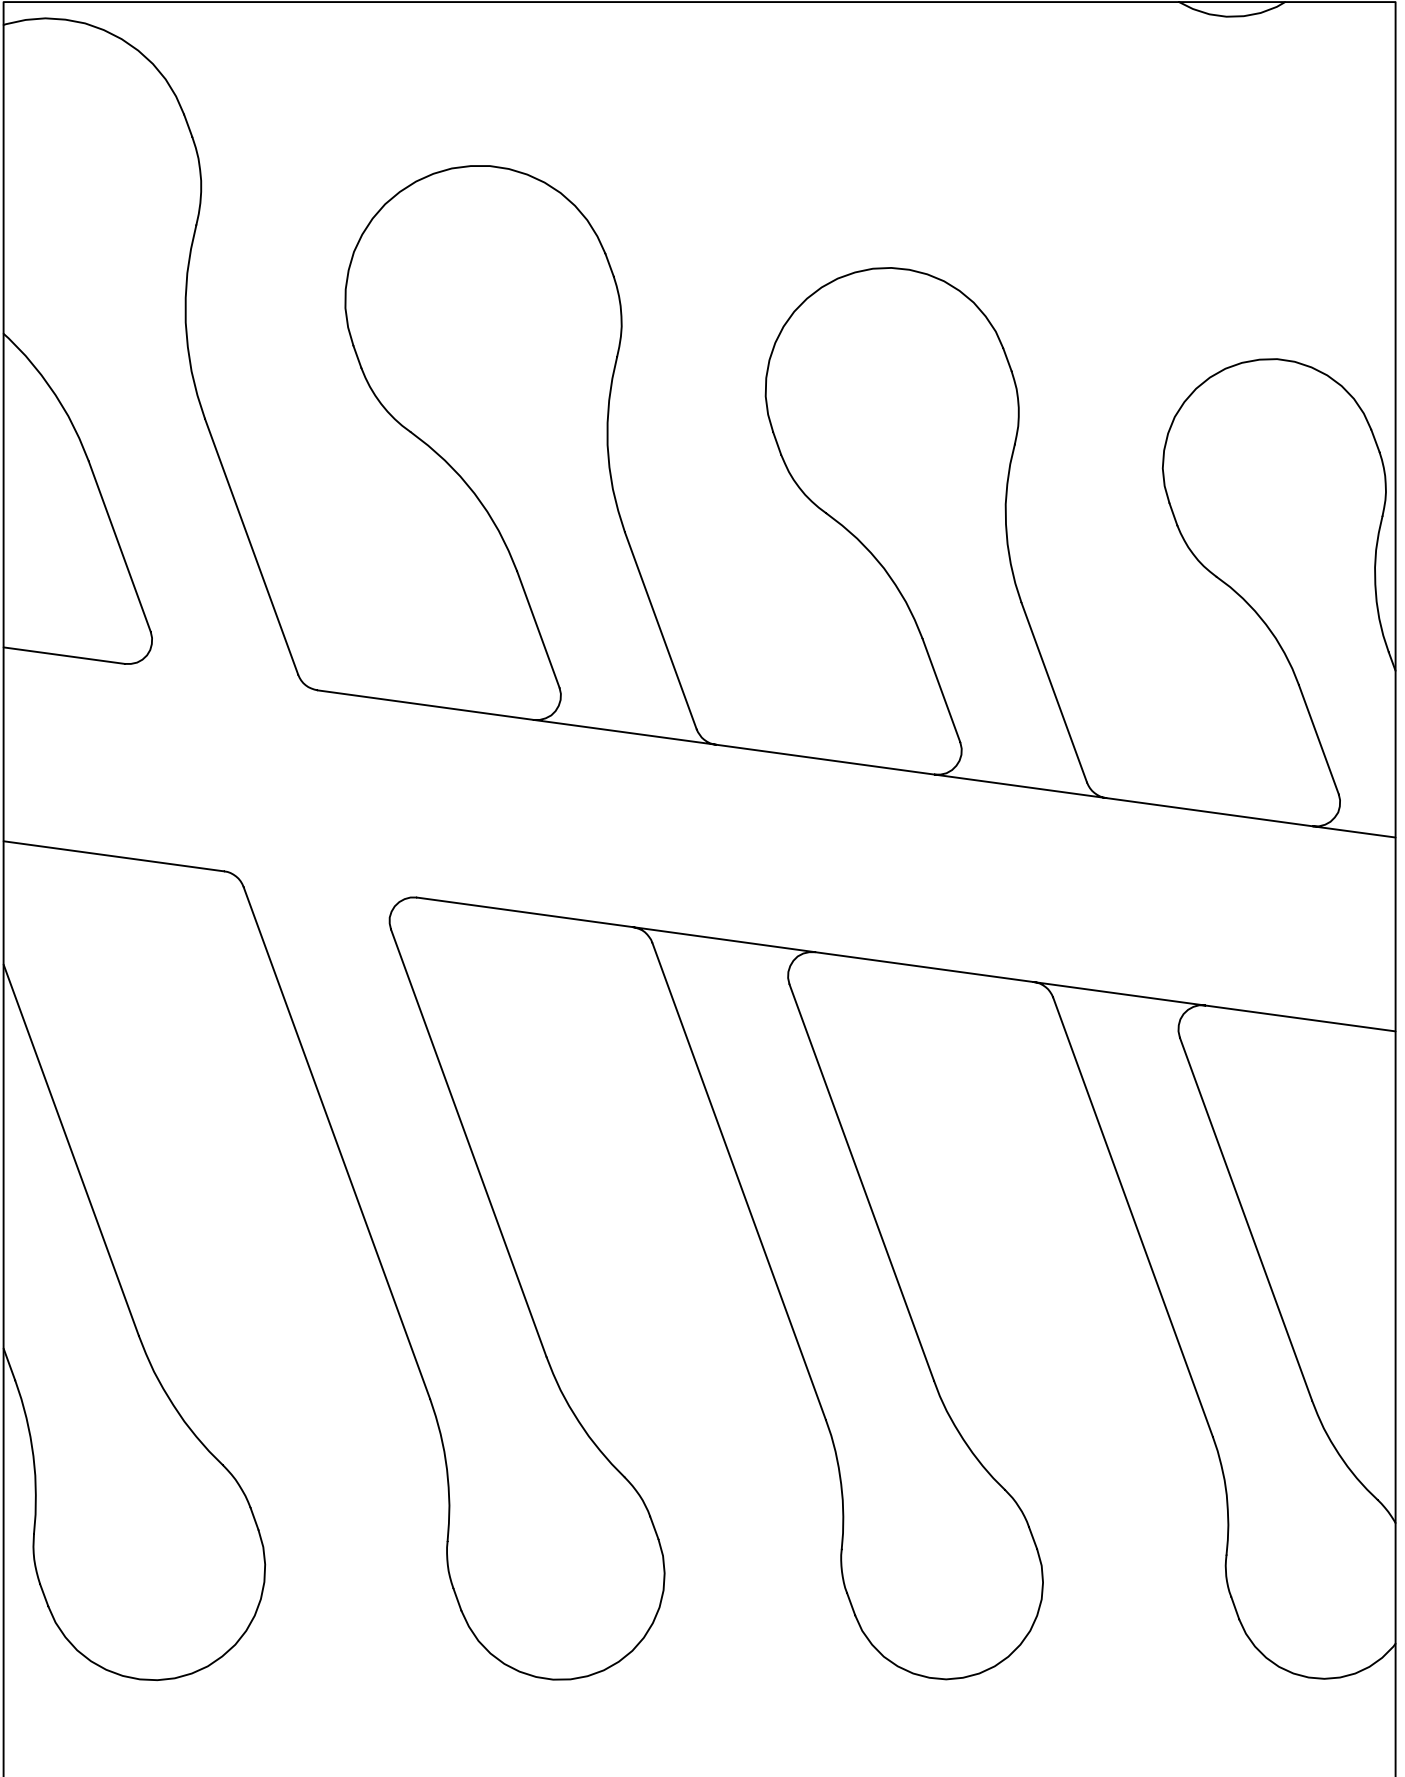

PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

1-3

Numbering starts
from the front
left corner.

 
DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%

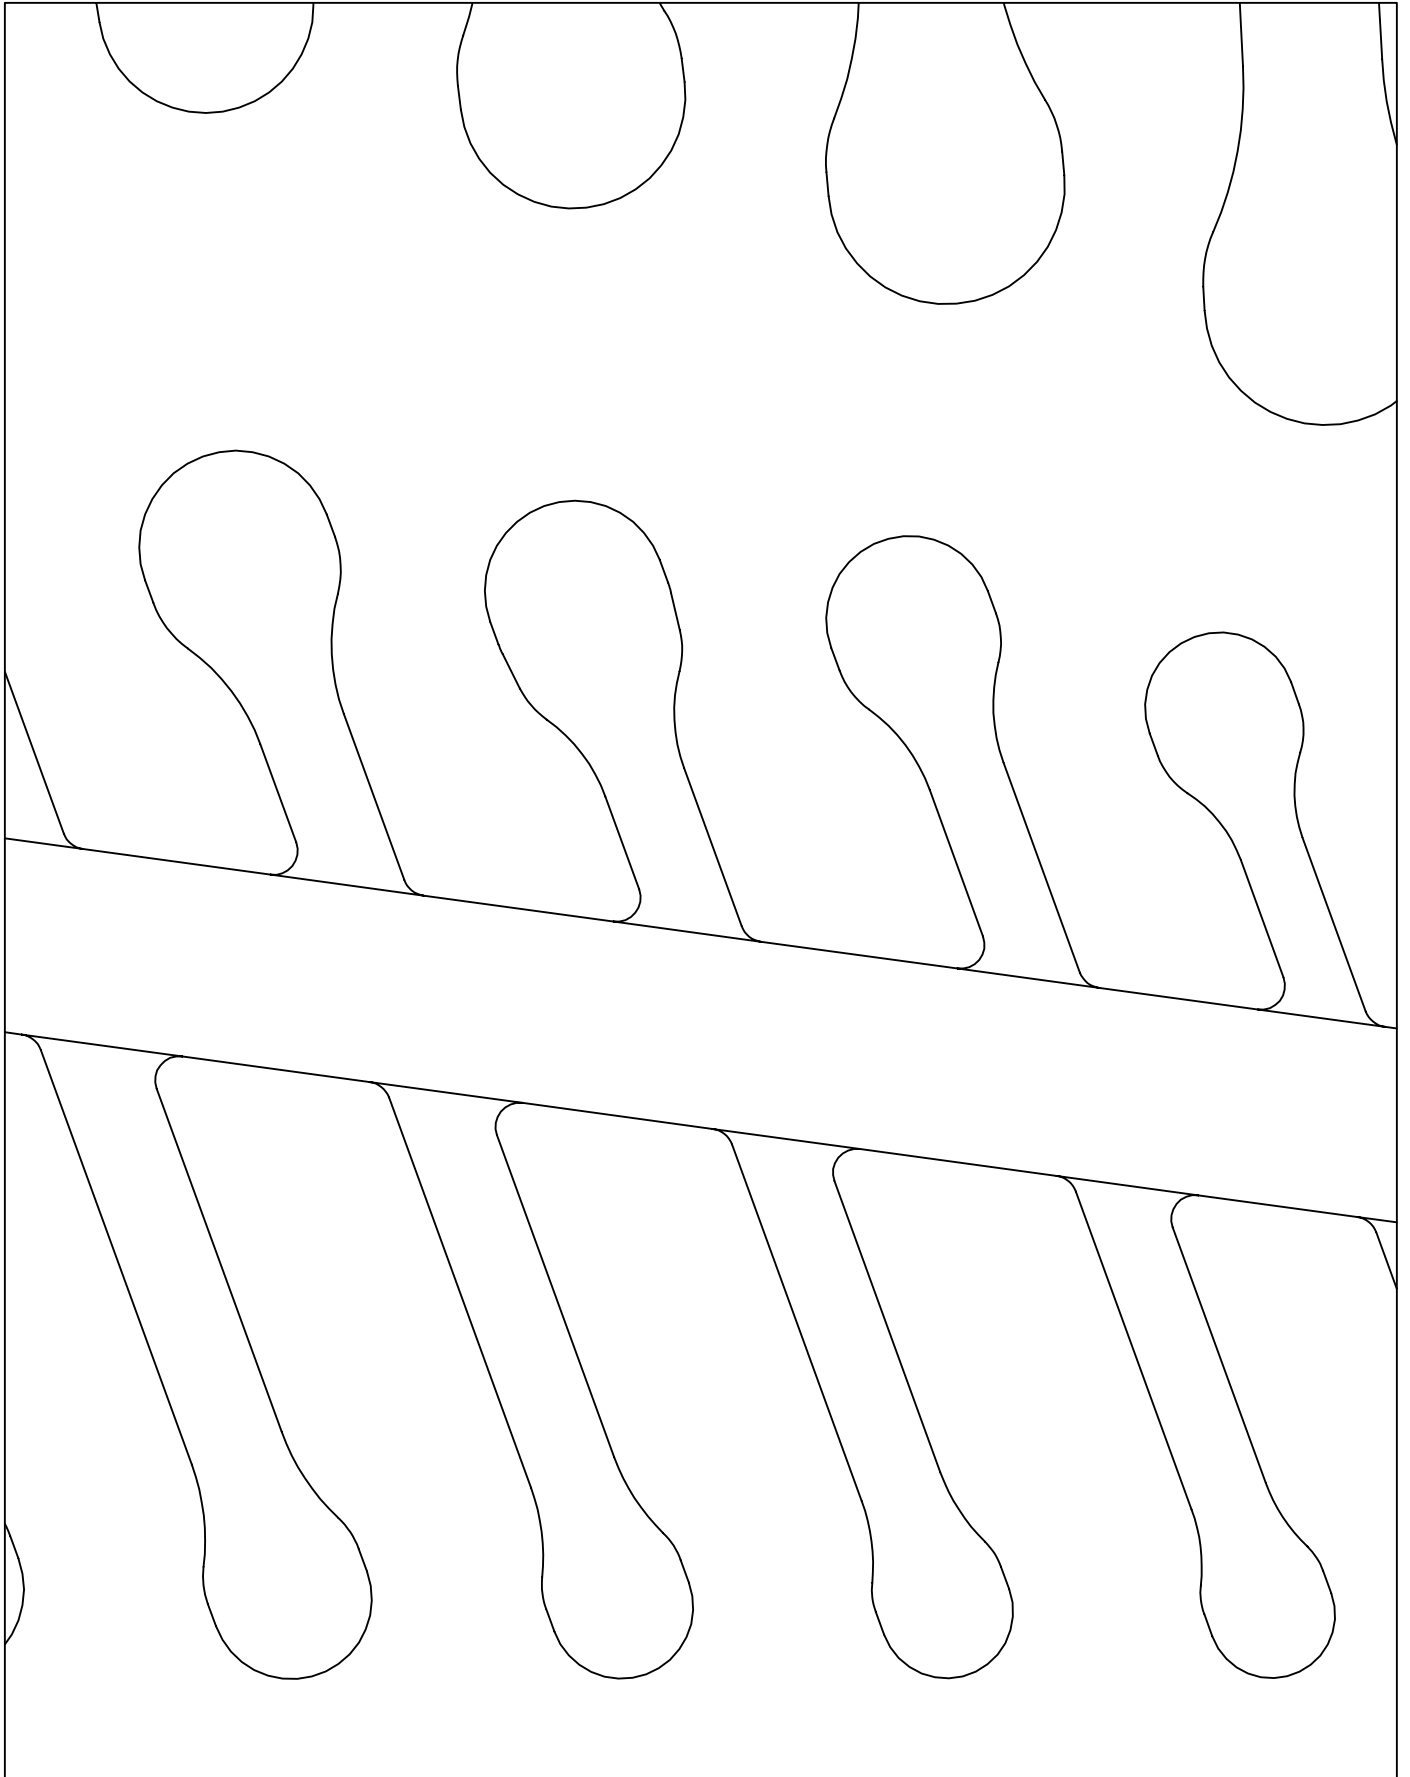

PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

1-4

Numbering starts
from the front
left corner.

 
DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%

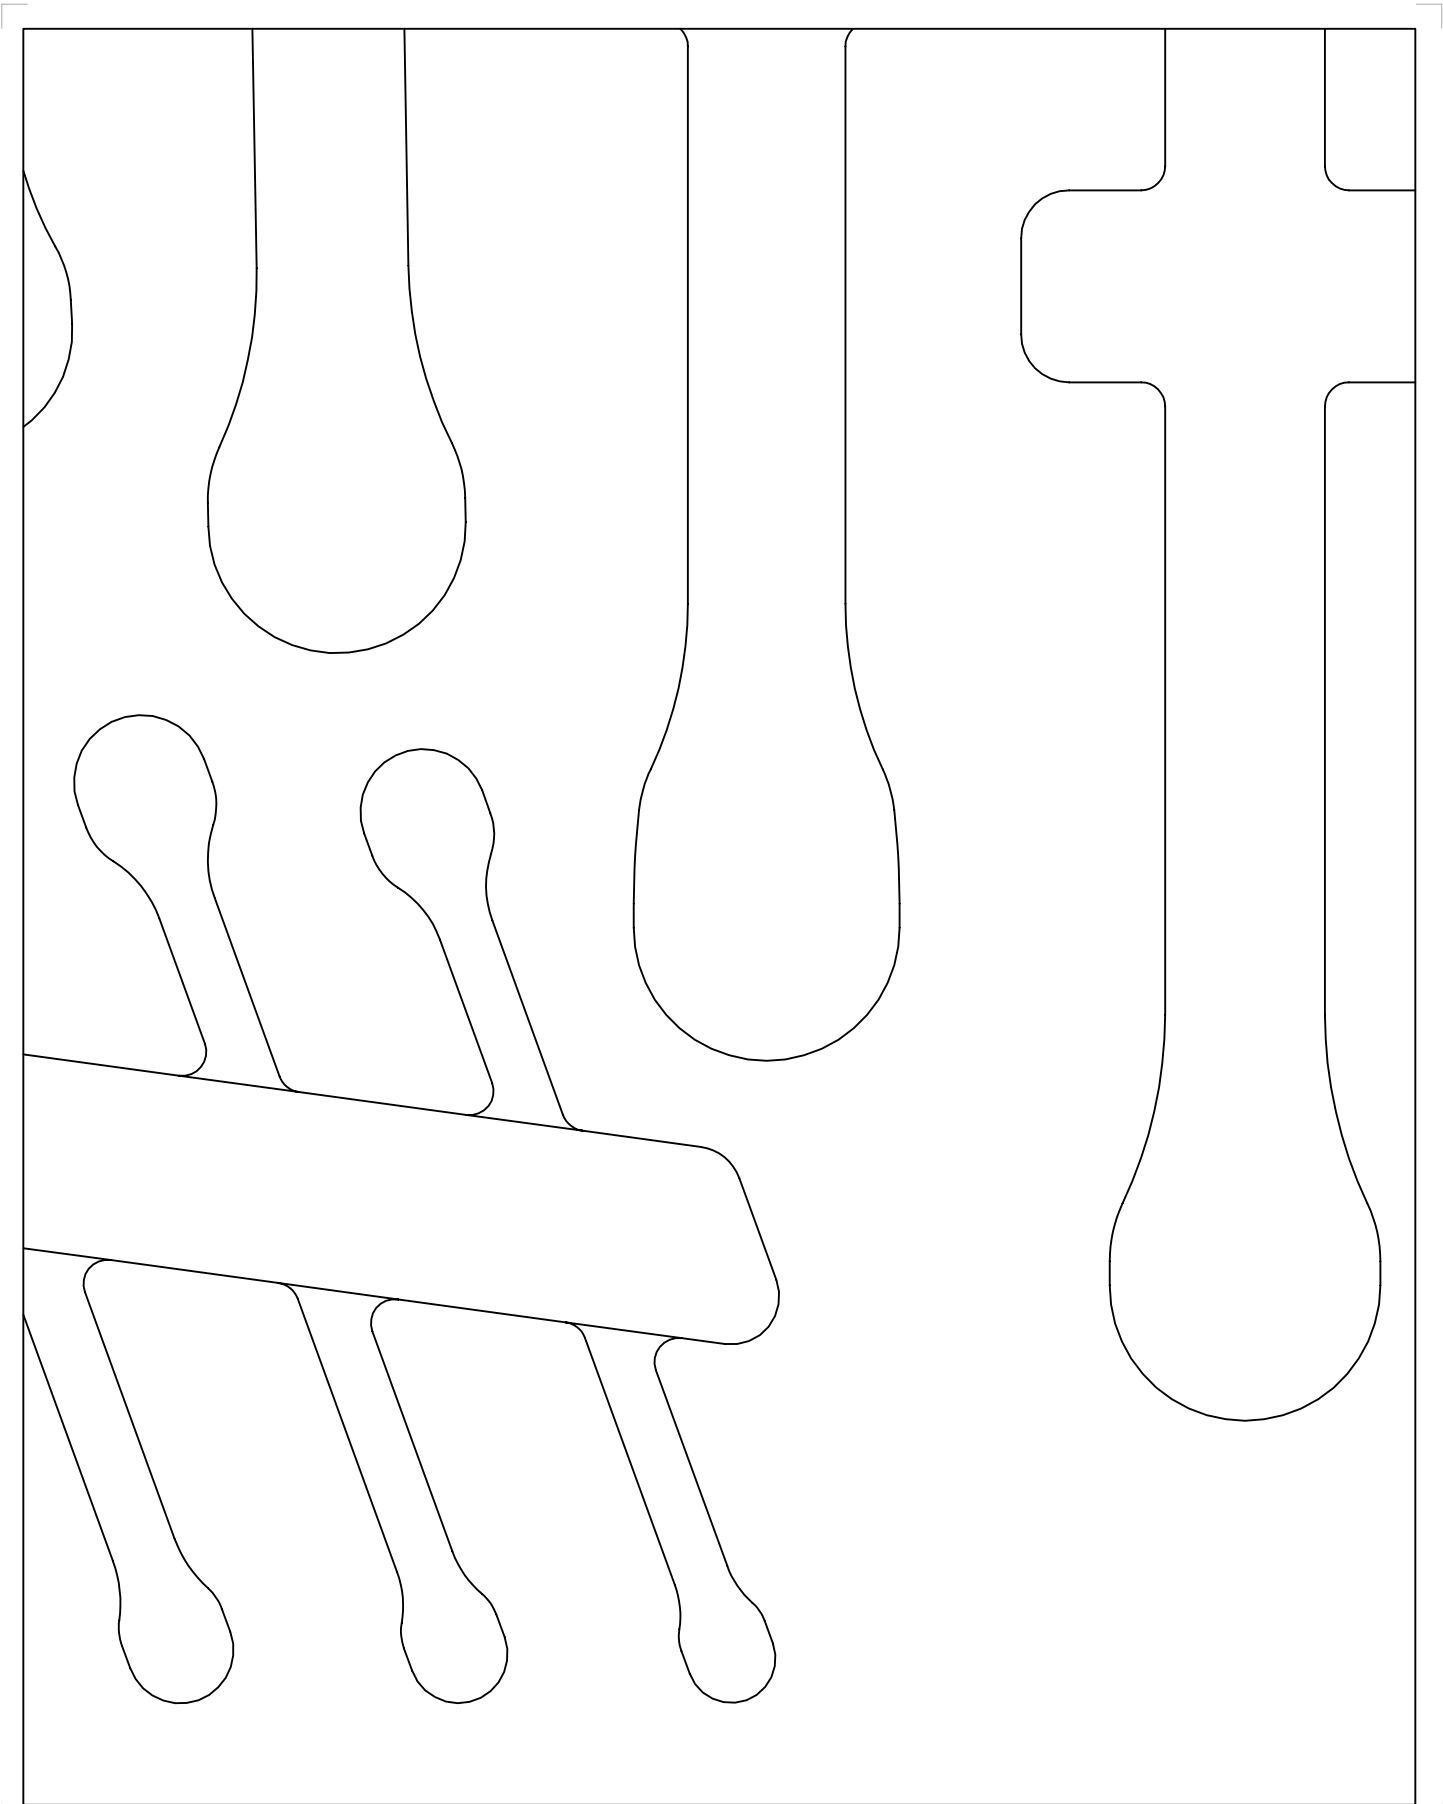

PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

1-5

Numbering starts
from the front
left corner.

 
DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%




PART NUMBER
F-06552-R

PAGE (ROW-COLUMN)
1-6
Numbering starts
from the front
left corner.

DATE CREATED
23 JUL 2026

DATE REVISED

 FoamFit Tools
Print on Letter at 100%

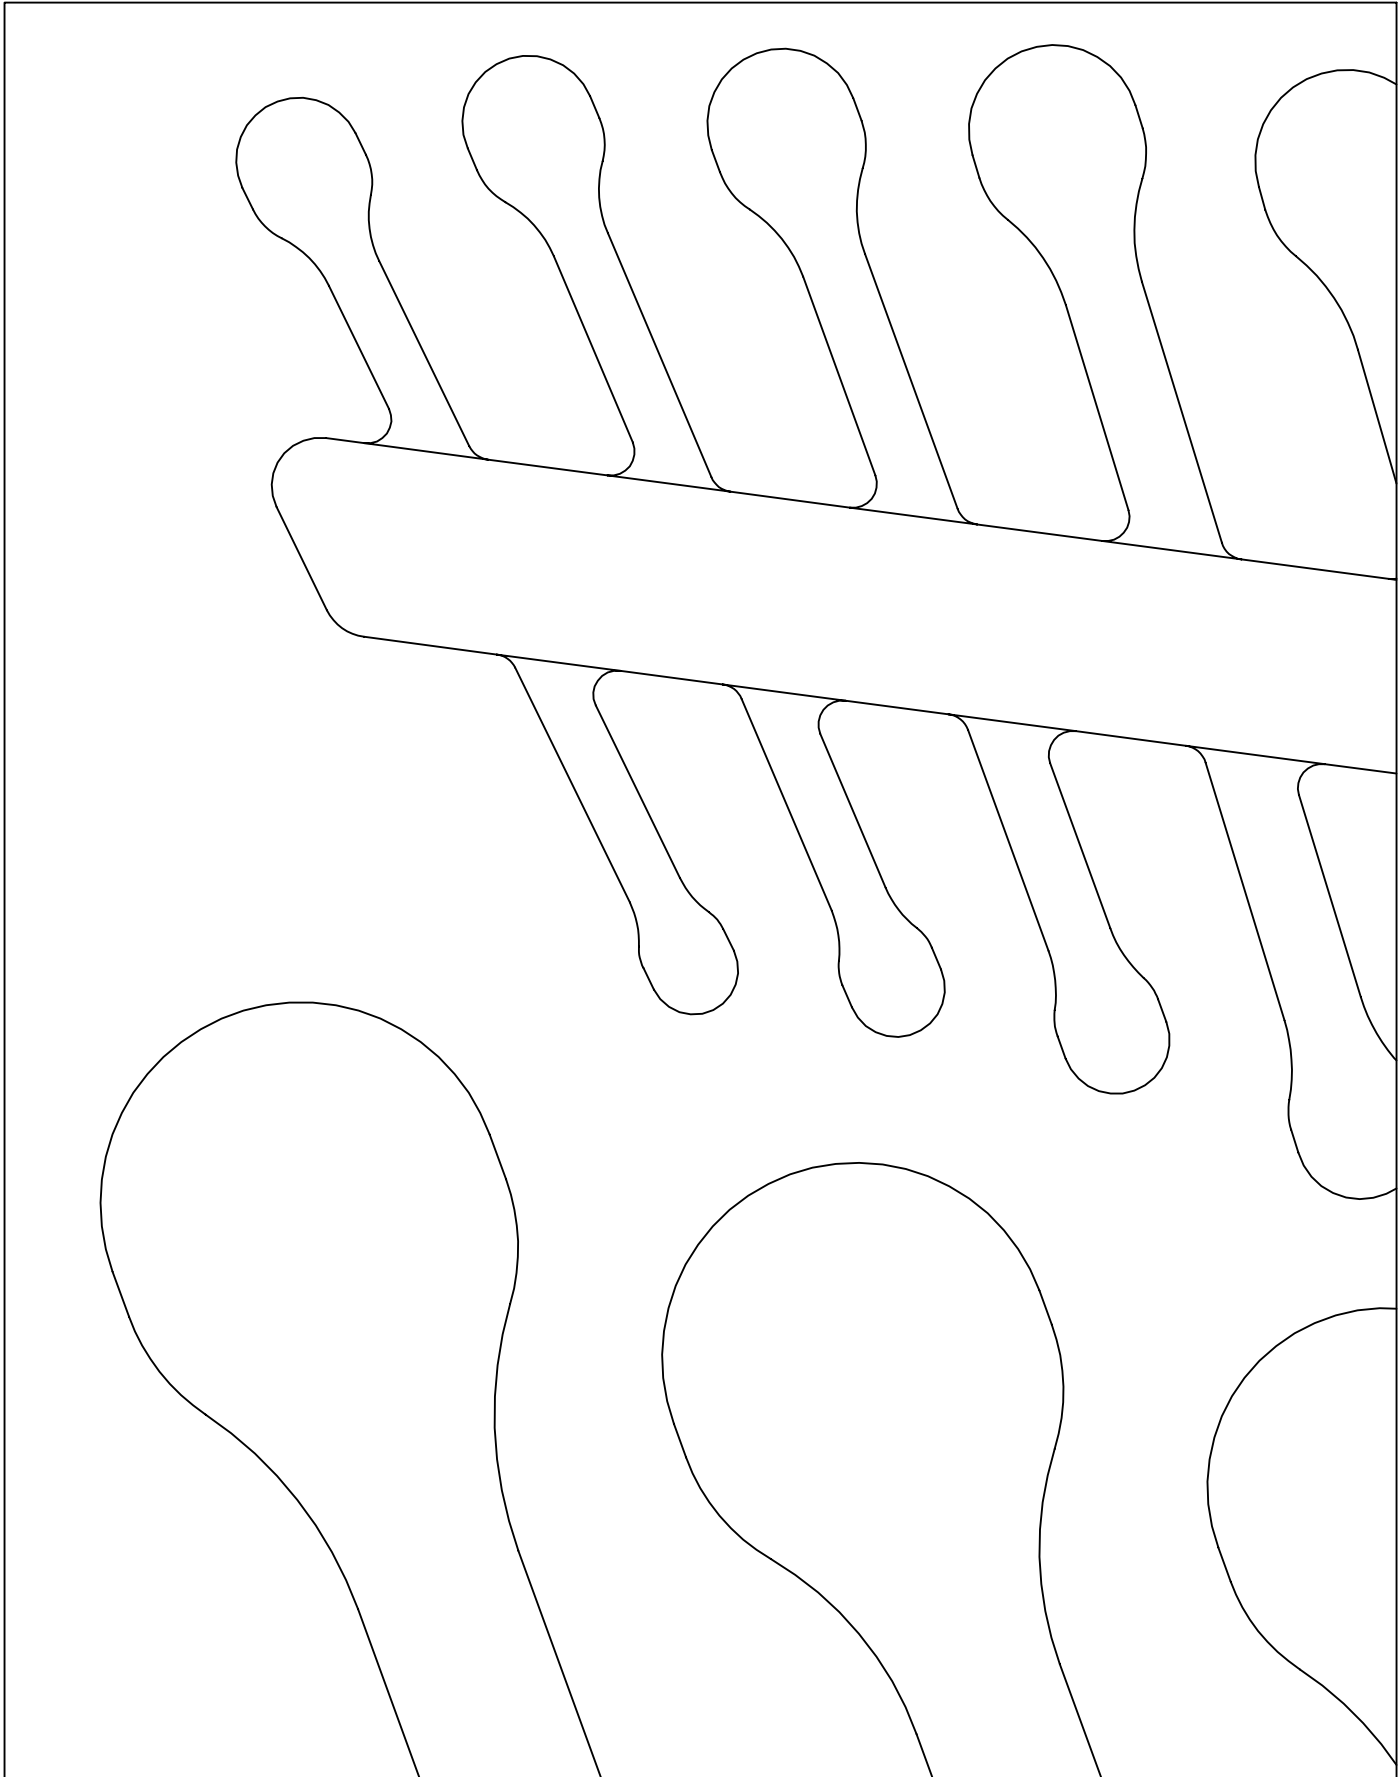

PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

2-1

Numbering starts
from the front
left corner.

 
DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%

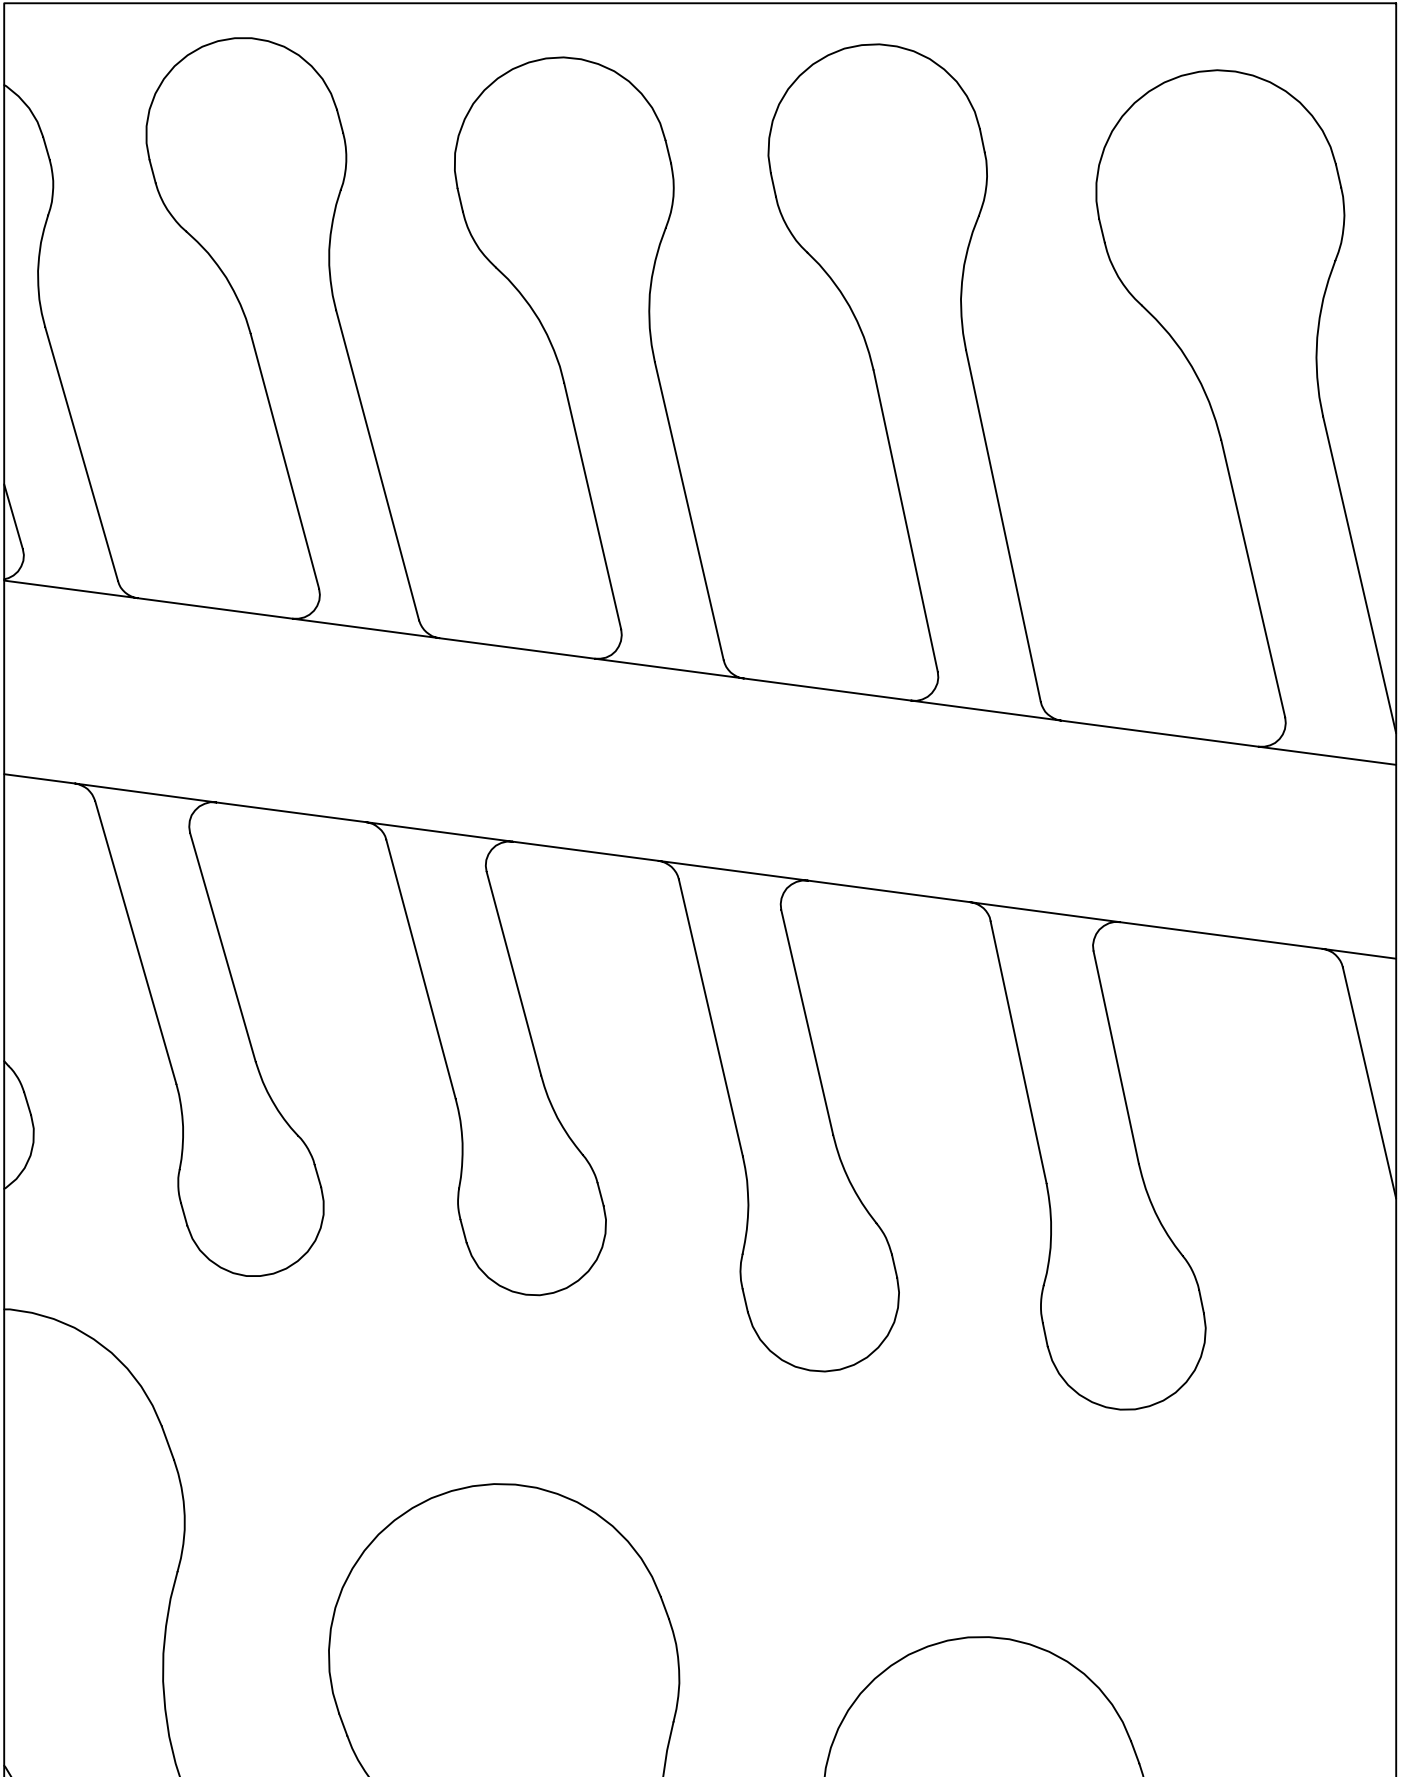

PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

2-2

Numbering starts
from the front
left corner.

 
DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%

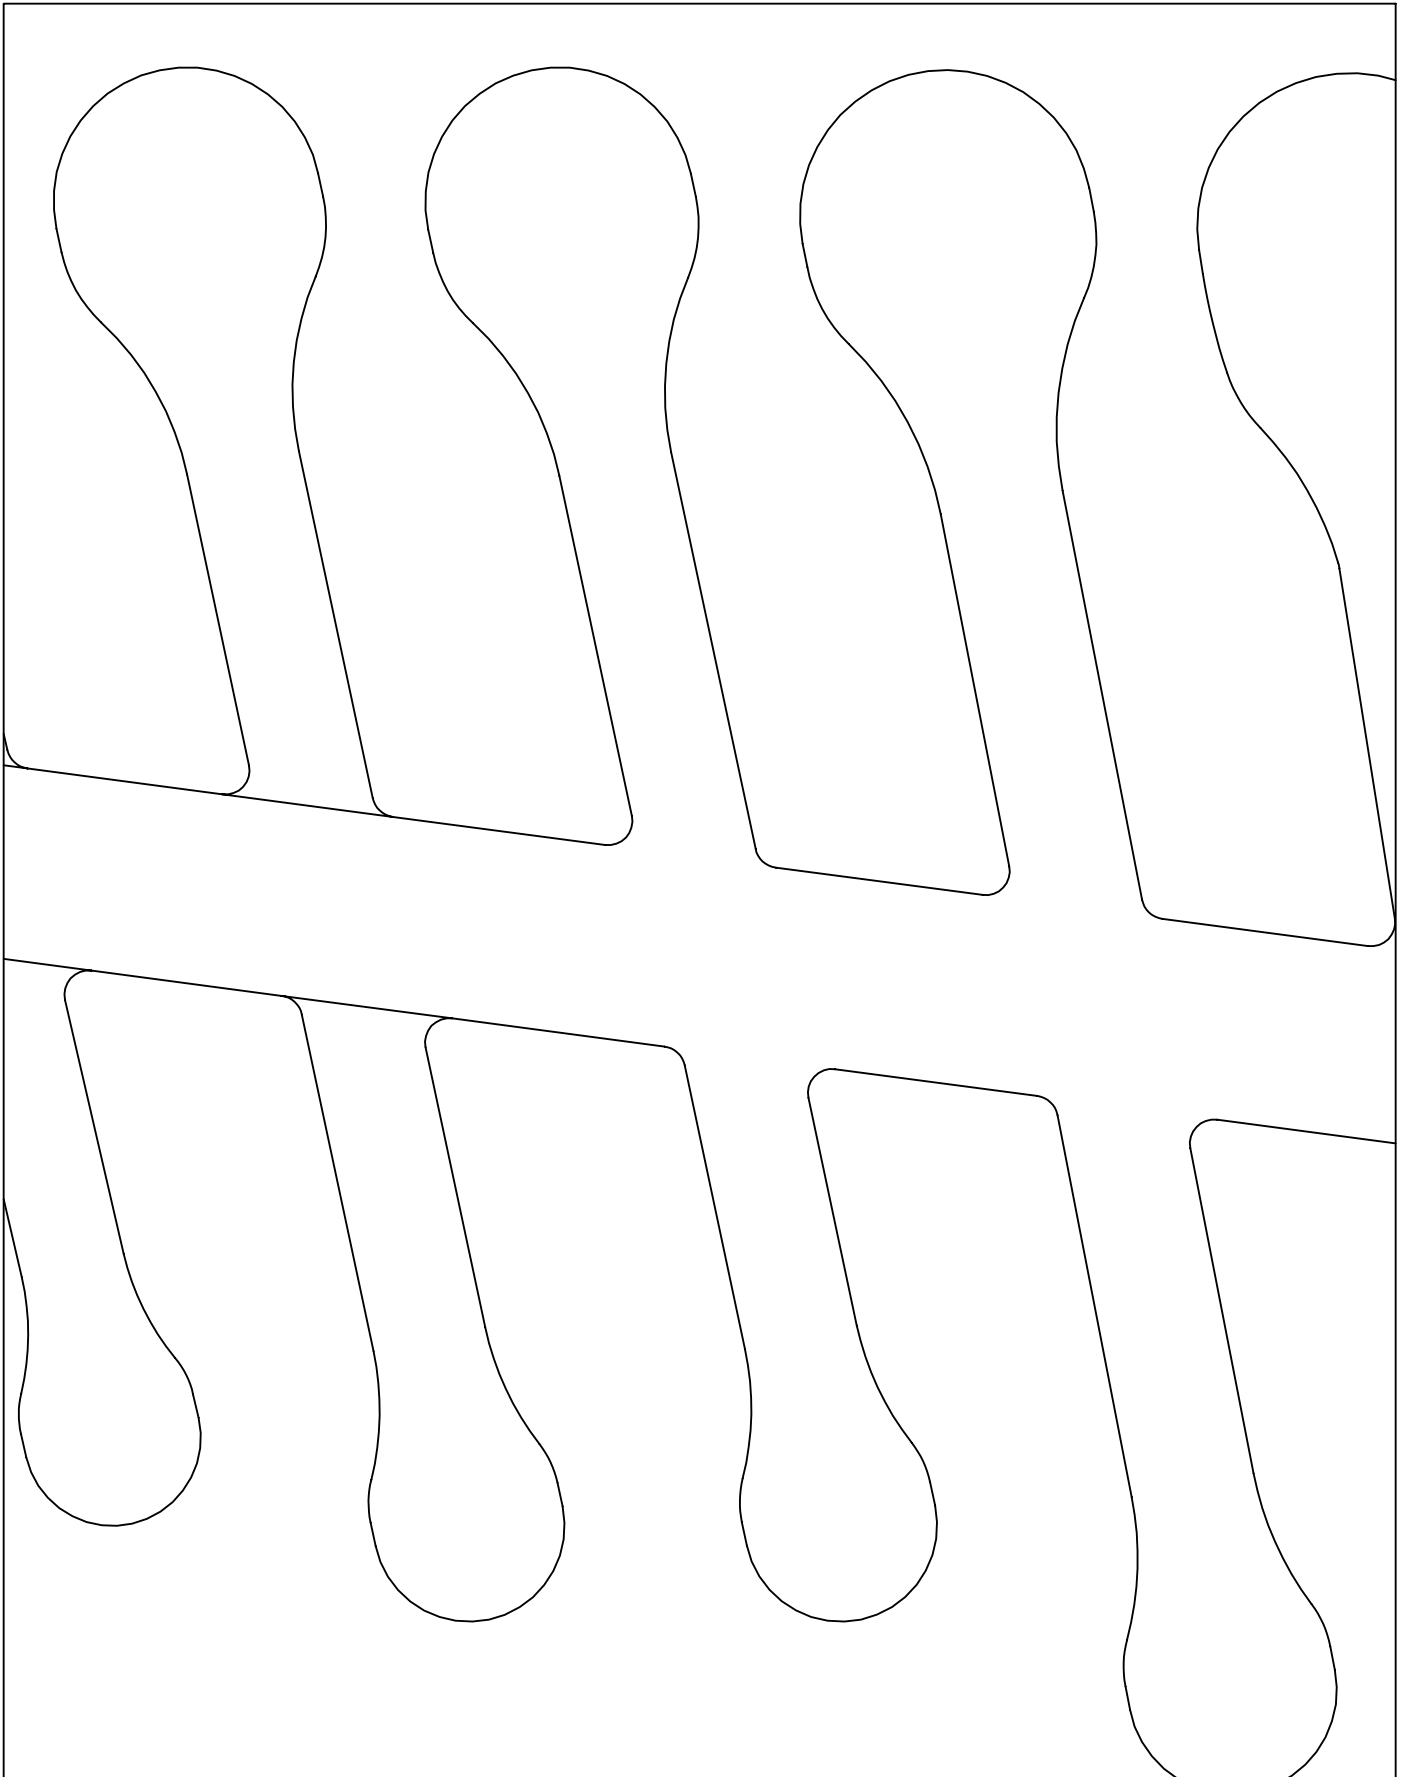

PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

2-3

Numbering starts
from the front
left corner.

 
DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%

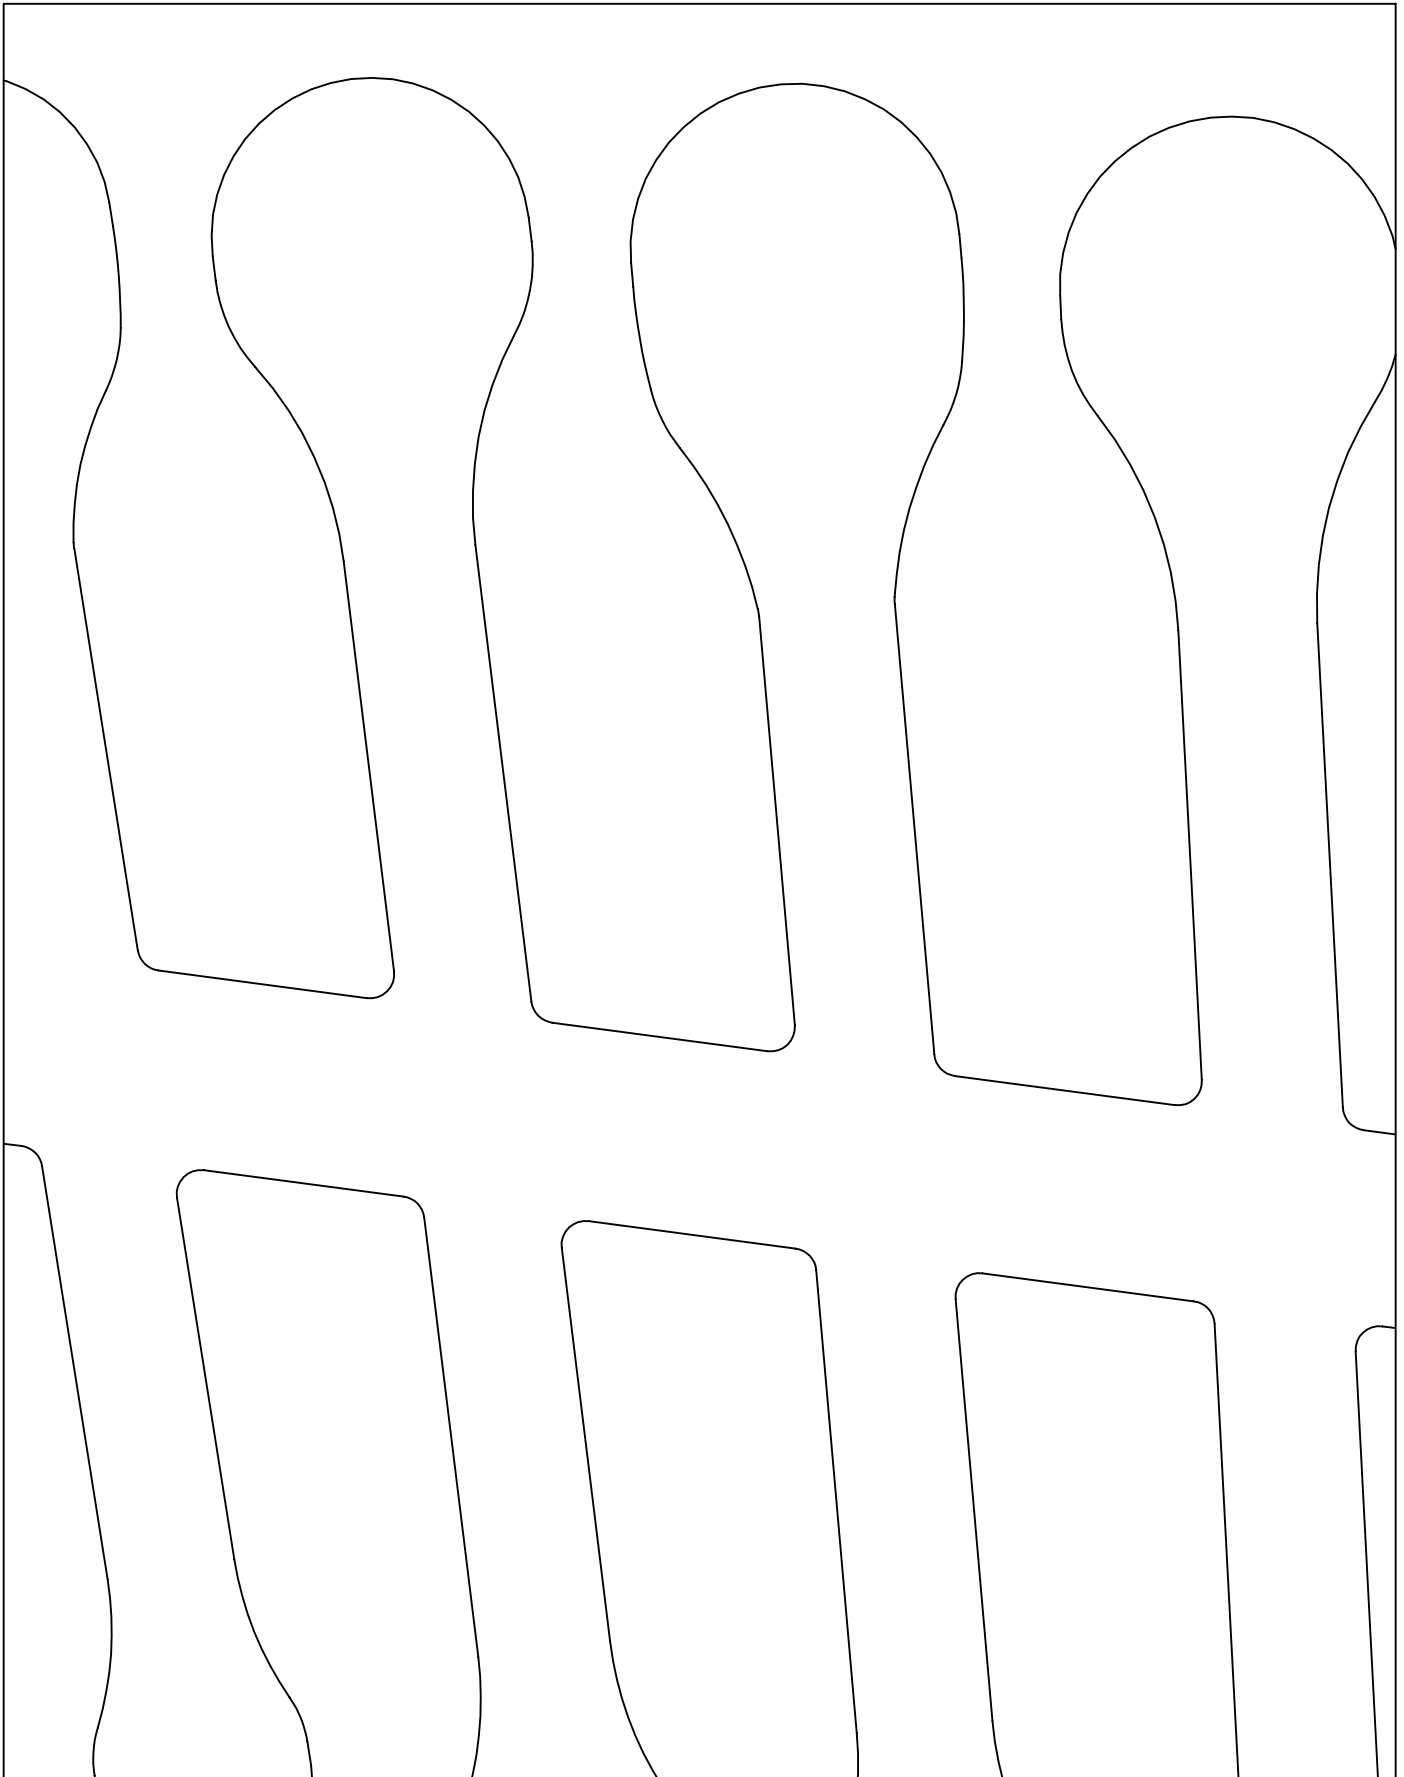

PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

2-4

Numbering starts
from the front
left corner.

 
DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%

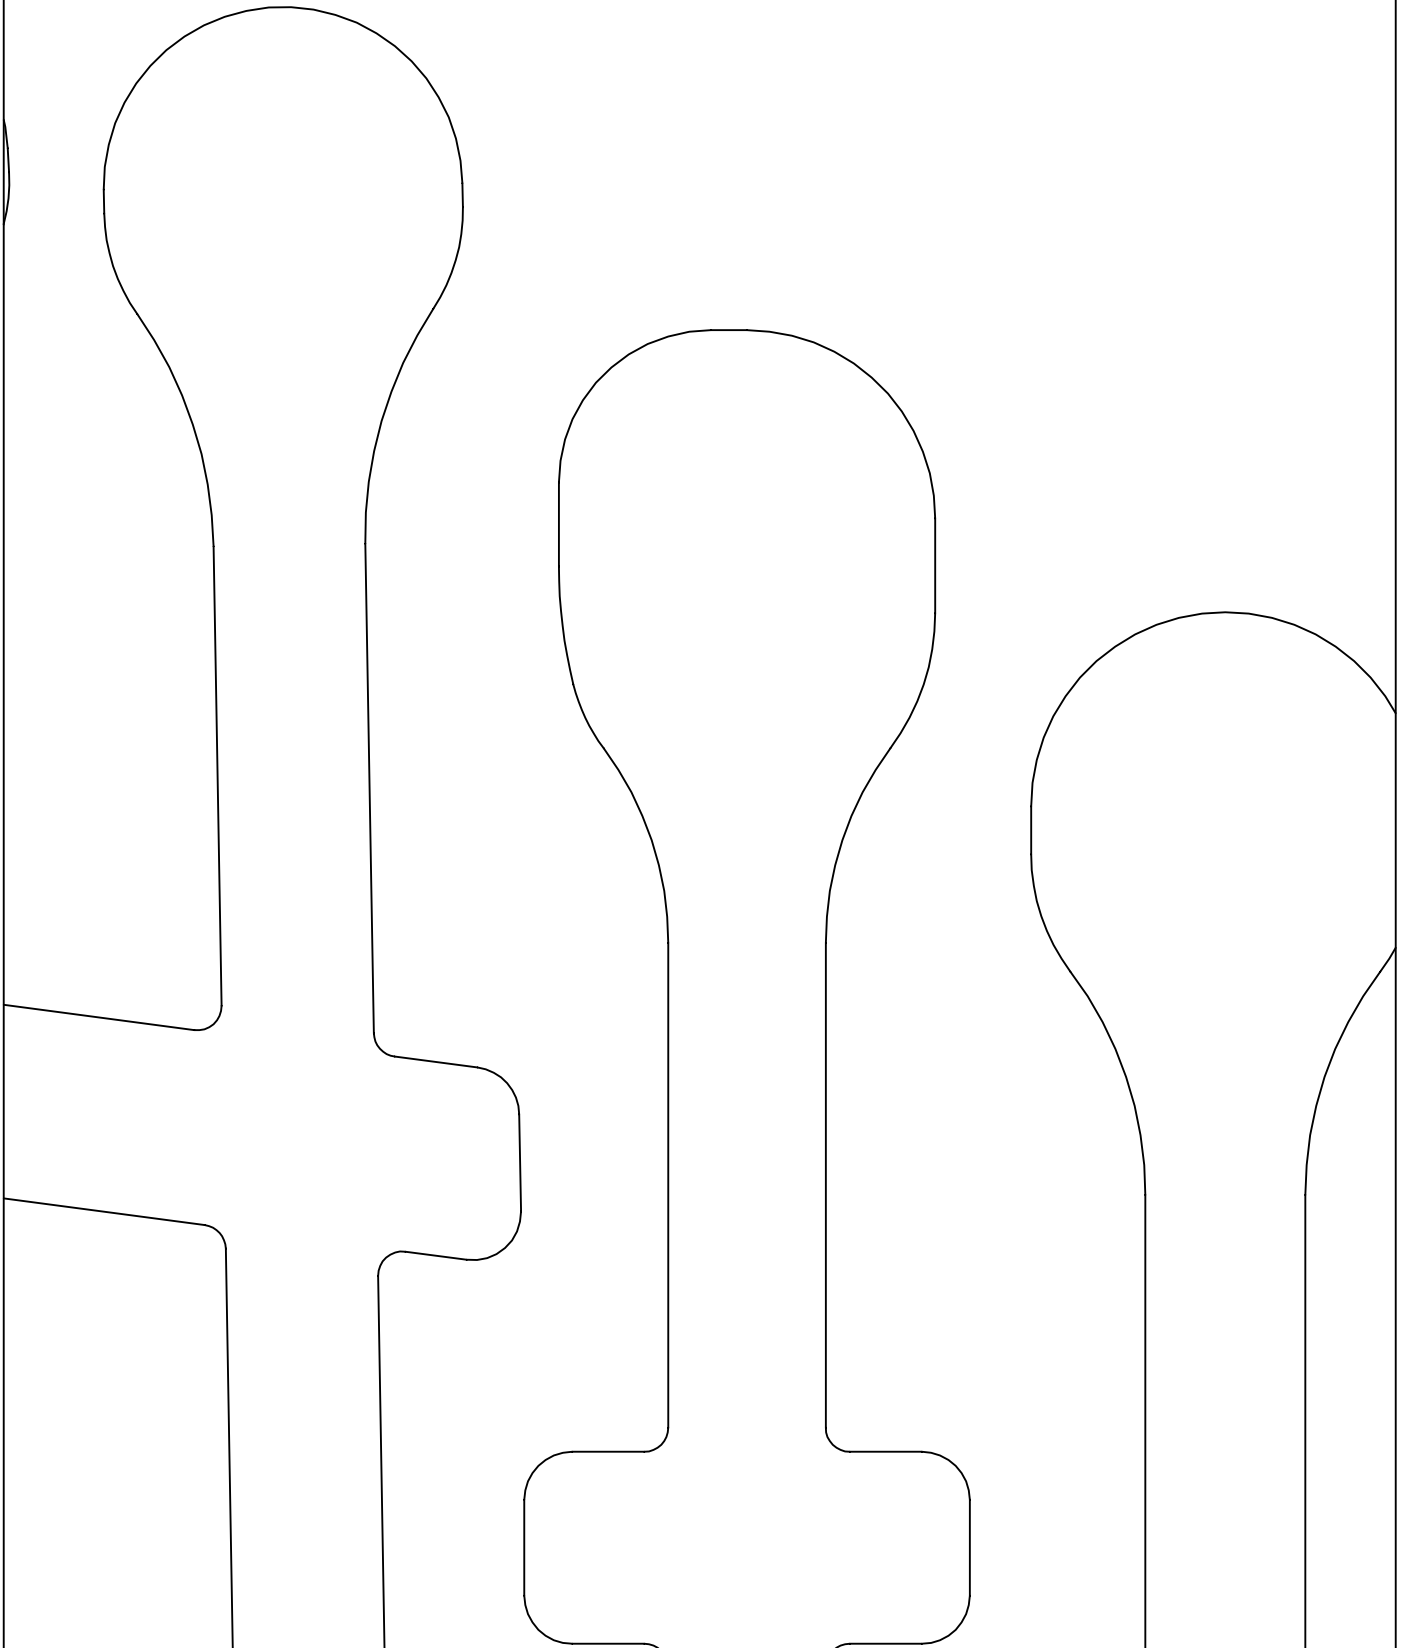

PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

2-5

Numbering starts
from the front
left corner.

 
DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

2-6

Numbering starts
from the front
left corner.

DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

3-1

Numbering starts
from the front
left corner.

DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

3-2

Numbering starts
from the front
left corner.

 
DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

3-3

Numbering starts
from the front
left corner.

 
DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER	PAGE (ROW-COLUMN)	DATE CREATED	DATE REVISED	<i>FoamFit Tools</i>
F-06552-R	3-4 Numbering starts from the front left corner.	23 JUL 2026		Print on Letter at 100%



PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

3-5

Numbering starts
from the front
left corner.

 
DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%



PART NUMBER

F-06552-R

PAGE (ROW-COLUMN)

3-6

Numbering starts
from the front
left corner.

DATE CREATED

23 JUL 2026

DATE REVISED

FoamFit Tools

Print on Letter at 100%