

PRINTING INSTRUCTIONS



We recommend printing at full-scale to check the fit with your tools before ordering.

Option 1: Print this page full-scale on a large-format printer (D-Size, 34 inches X 22 inches).

Option 2: Print page 2 - 9 on 8-1/2 X 11 inch paper and assemble.

Thank You!

THE INFORMATION CONTAINED ON THIS DRAWING IS THE SOLE PROPERTY OF FOAMFIT TOOLS AND MAY NOT BE USED WITHOUT PERMISSION.
Copyright 2013 FoamFit Tools

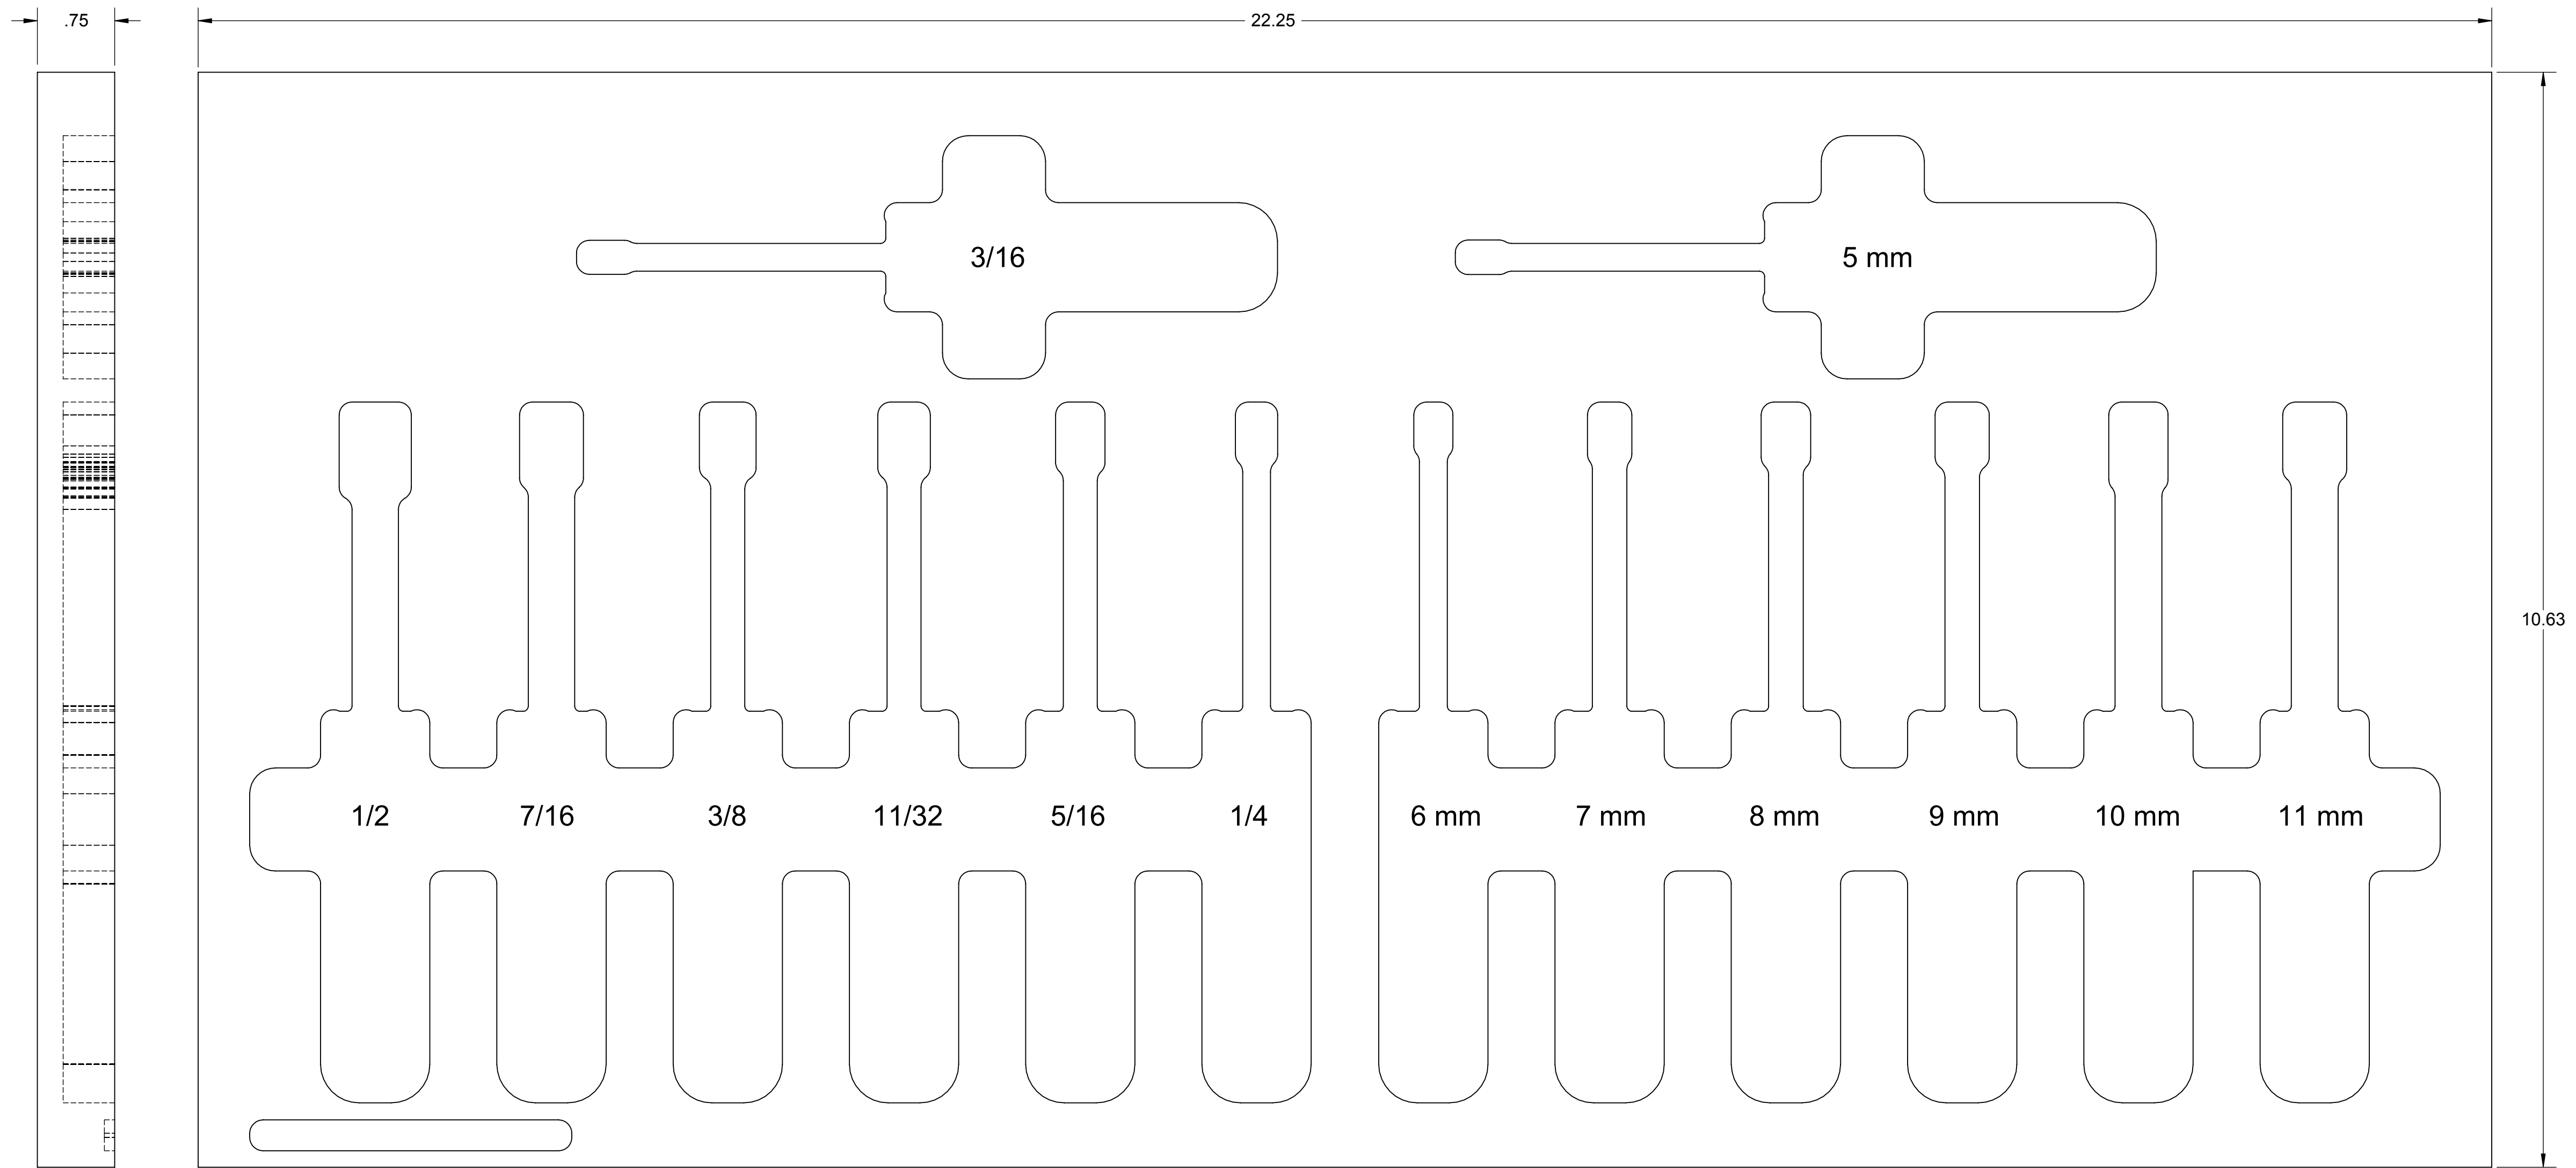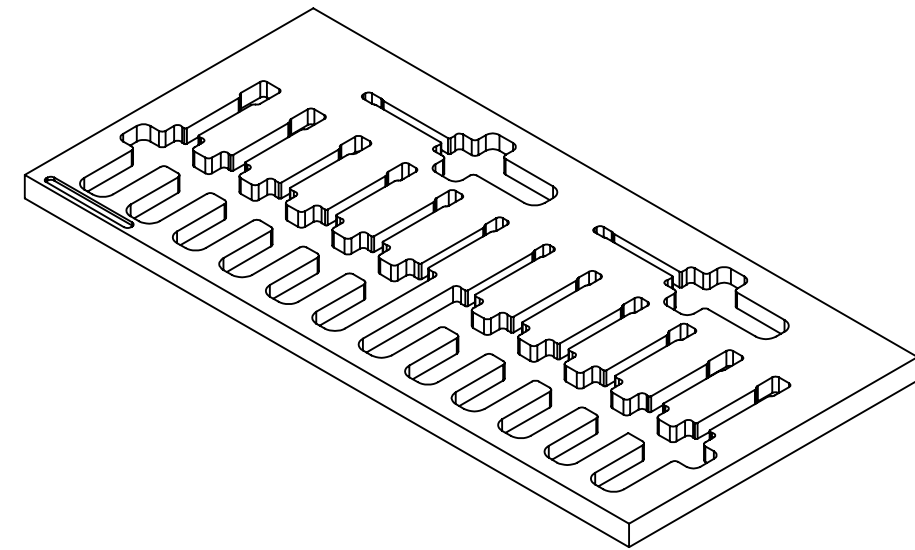

PART NUMBER
F1S-00529


CRAFTSMAN NUT DRIVERS

1.00 IN

PAGE KEY

X									

1.00
IN

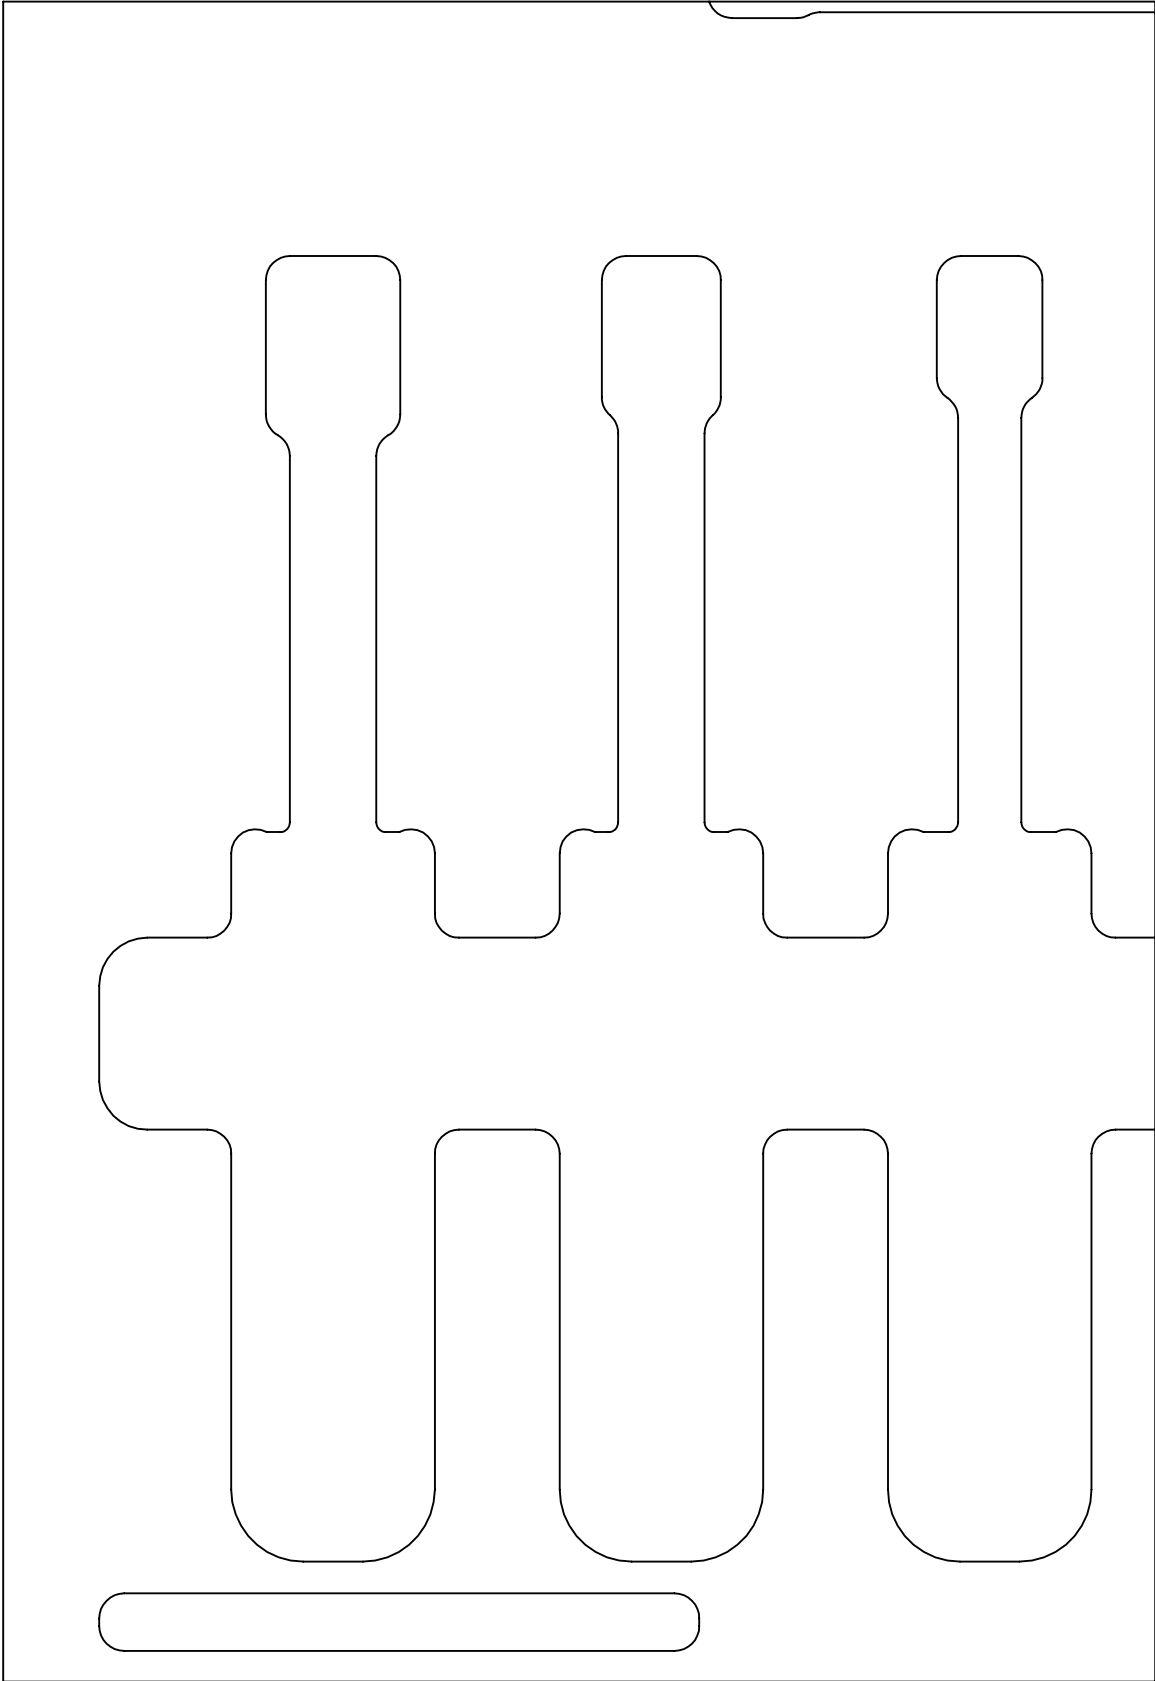


Print on Letter at 100%


PART NUMBER	DATE CREATED
F1S-00529	9 MAY 2013

← 1.00 IN →

PAGE KEY



1.00
IN

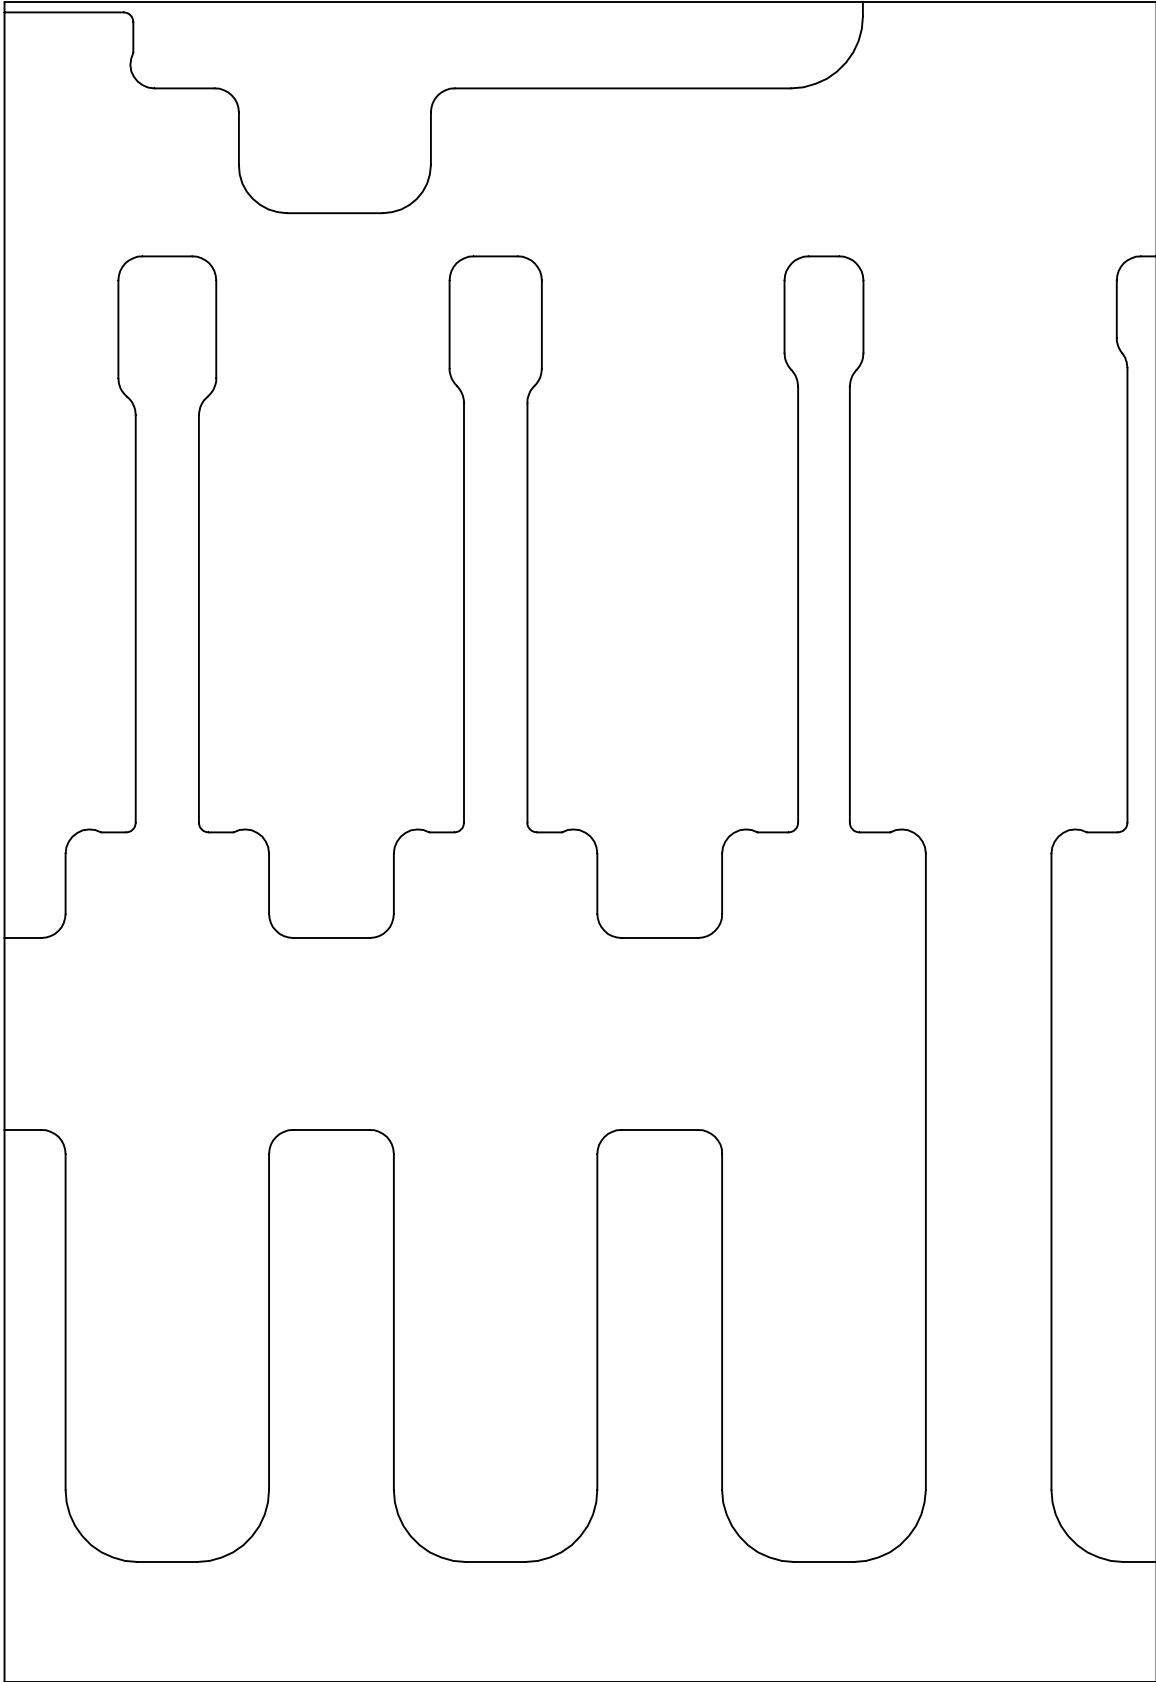

Print on Letter at 100%

DATE CREATED

9 MAY 2013

PART NUMBER

F1S-00529




1.00 IN

PAGE KEY



1.00
IN

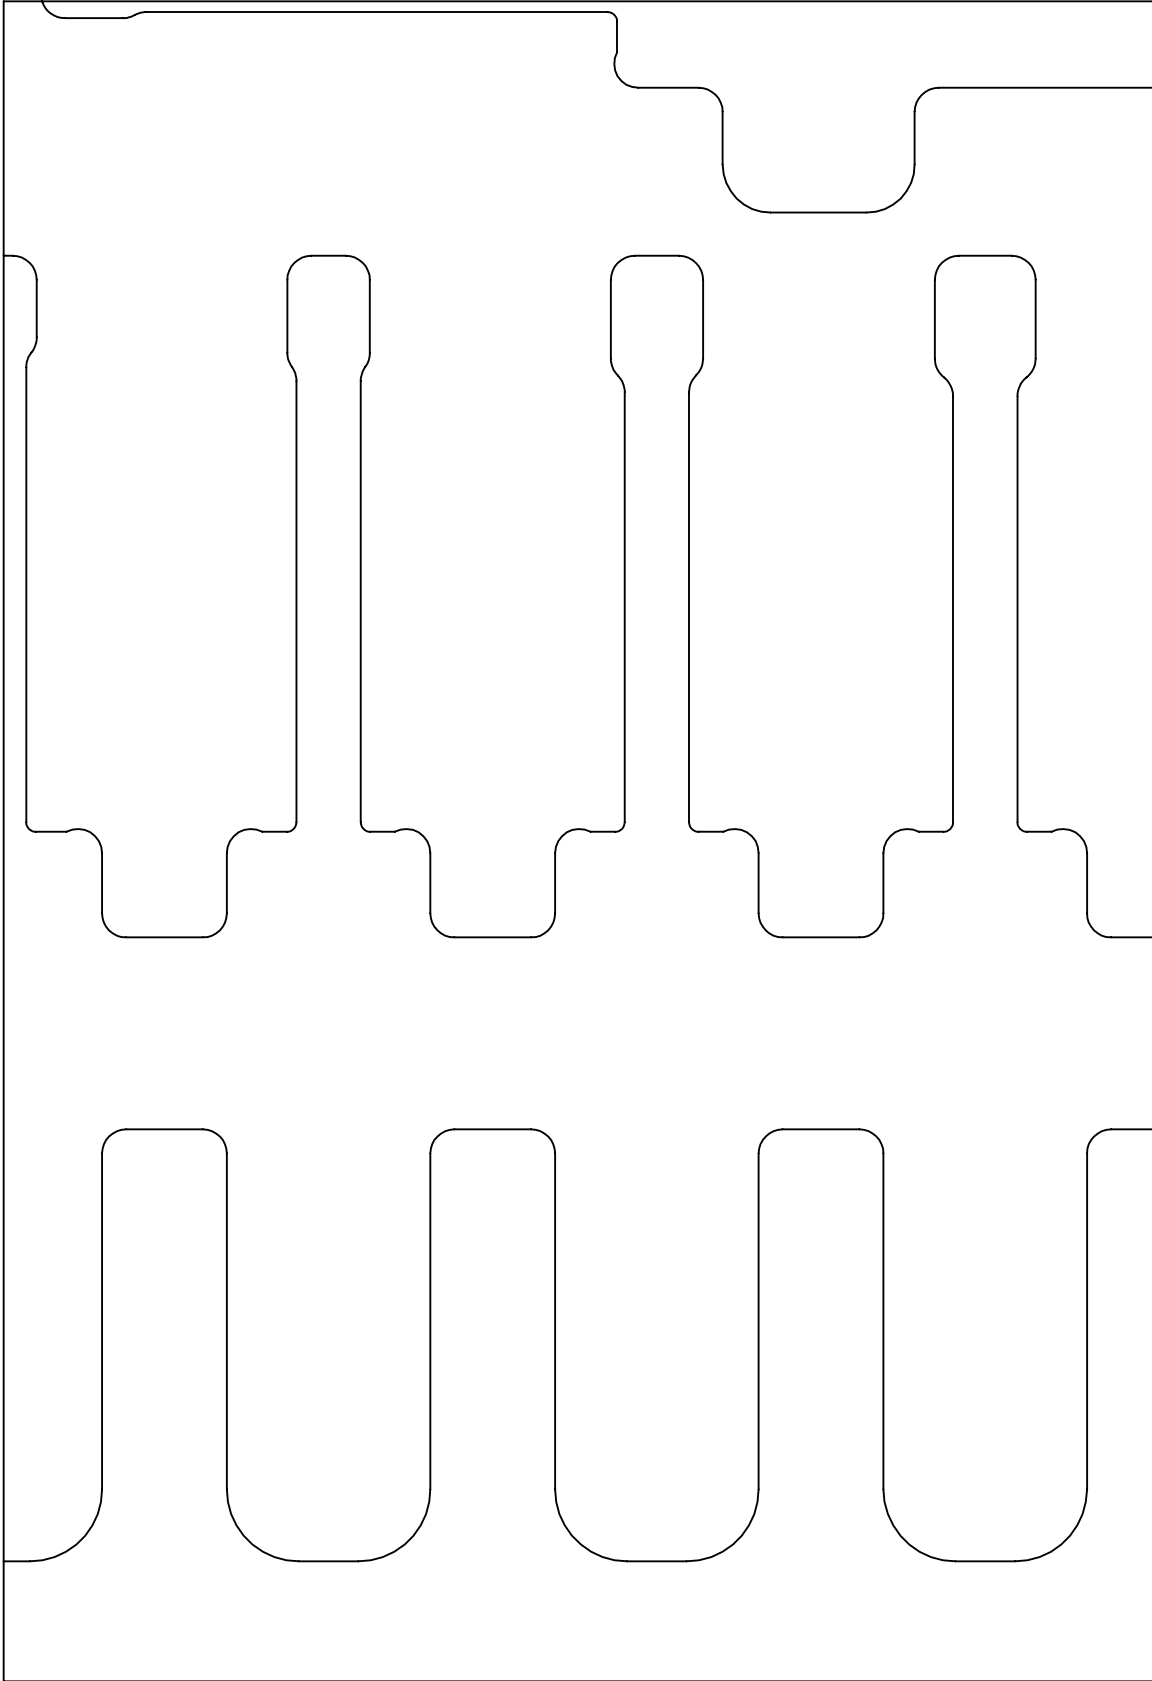

Print on Letter at 100%

DATE CREATED

9 MAY 2013

PART NUMBER


F1S-00529

1.00 IN

PAGE KEY



1.00
IN

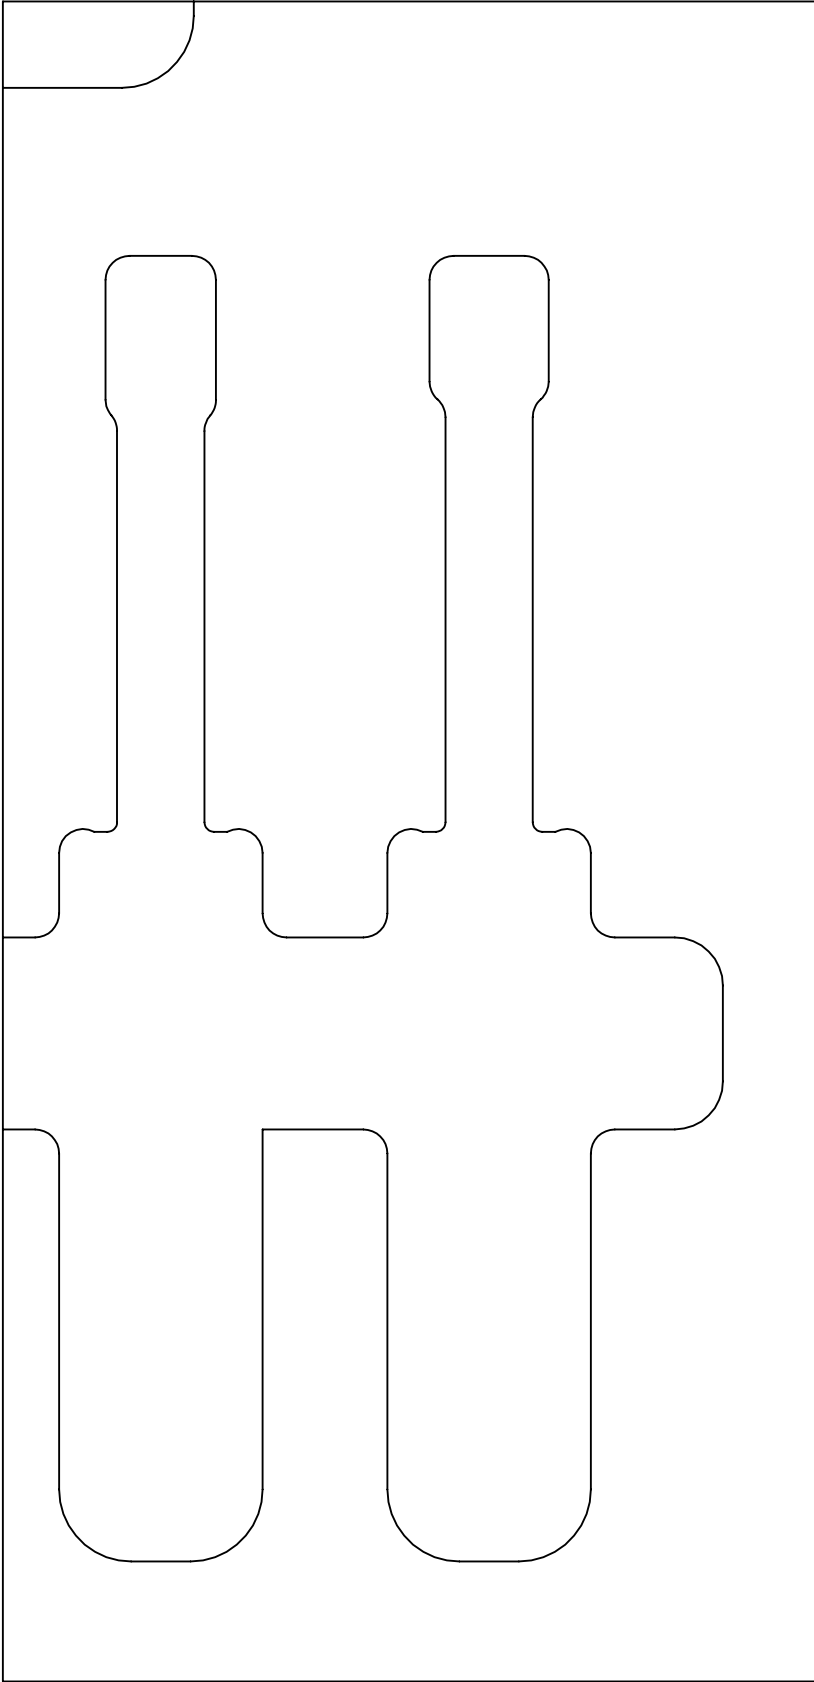

Print on Letter at 100%

DATE CREATED
9 MAY 2013

PART NUMBER
F1S-00529


1.00 IN

1.00
IN

PAGE KEY

X									


Print on Letter at 100%



PART NUMBER	DATE CREATED
F1S-00529	9 MAY 2013


1.00 IN

PAGE KEY



1.00
IN

Print on Letter at 100%

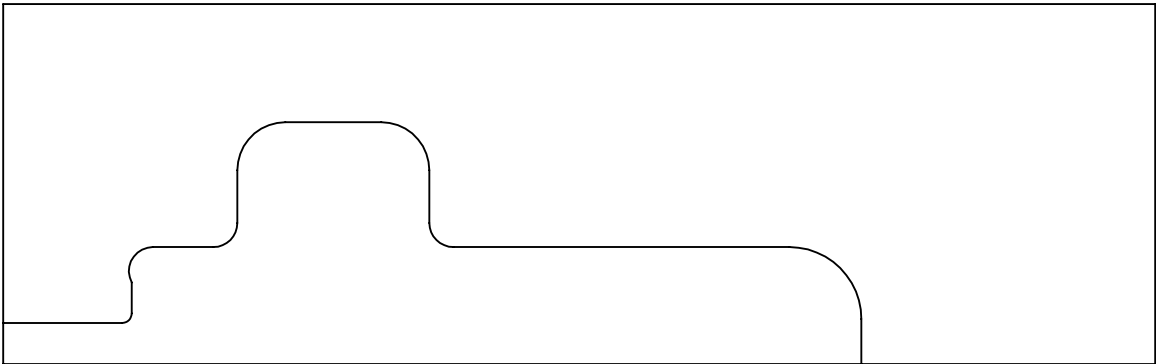

DATE CREATED

9 MAY 2013


PART NUMBER

F1S-00529




1.00 IN

PAGE KEY



1.00
IN


Print on Letter at 100%

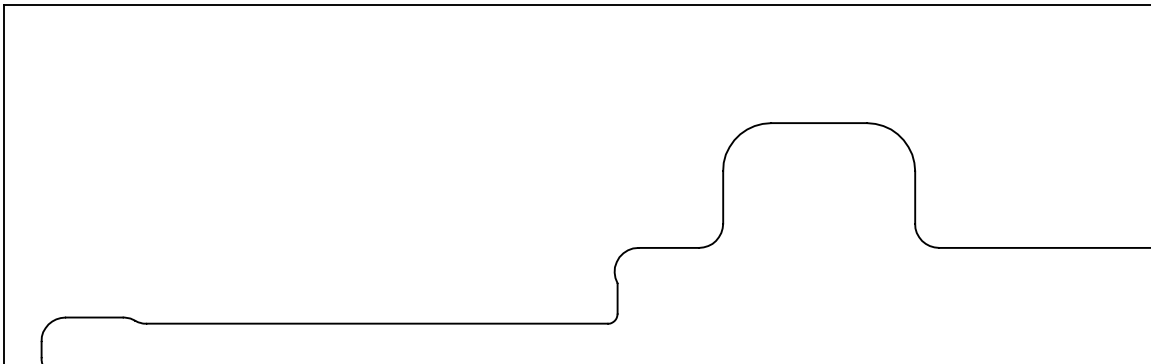

PART NUMBER	DATE CREATED
F1S-00529	9 MAY 2013

1.00 IN

PAGE KEY



1.00
IN

Print on Letter at 100%



DATE CREATED

9 MAY 2013

PART NUMBER

F1S-00529

